

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Panasonic](#) /

› [Panasonic DMP-BDT110 Blu-ray Disc Player Instruction Manual](#)

## Panasonic DMP-BDT110

# Panasonic DMP-BDT110 Blu-ray Disc Player Instruction Manual

Model: DMP-BDT110

## INTRODUCTION

This manual provides essential information for the safe and efficient operation of your Panasonic DMP-BDT110 Blu-ray Disc Player. Please read these instructions thoroughly before using the product and retain them for future reference.

## IMPORTANT SAFETY INFORMATION

Always follow basic safety precautions when using this product to reduce the risk of fire, electric shock, and injury to persons. Keep the unit away from water and moisture. Do not block ventilation openings. Use only attachments/accessories specified by the manufacturer. Refer all servicing to qualified service personnel.

## PACKAGE CONTENTS

Verify that all items are present in the package:

- Panasonic DMP-BDT110 Blu-ray Disc Player
- Remote Control
- Two AA Batteries (for remote control)
- User's Manual (this document)
- Power Cable

## PRODUCT OVERVIEW

## Front Panel



**Image Description:** A front-angled view of the black Panasonic DMP-BDT110 Blu-ray Disc Player. The front panel features a disc tray, a display, and various control buttons. The "Blu-ray Disc" logo and "3D FULL HD" branding are visible.

- **Disc Tray:** Insert Blu-ray discs, DVDs, or CDs.
- **Power Button:** Turns the unit on or off.
- **USB Port (Front):** Connect USB devices for media playback (JPEG/MPO).
- **Display Panel:** Shows playback status, time, and other information.


## Rear Panel



**Image Description:** A rear view of the Panasonic DMP-BDT110 Blu-ray Disc Player, highlighting the various input and output ports. Visible ports include HDMI Out, LAN (Ethernet), Digital Out (Coaxial), and power input.

- **HDMI Output:** Connects to your TV or AV receiver for high-definition video and audio.
- **LAN (Ethernet) Port:** Connects to your home network for internet features and firmware updates.
- **Digital Audio Out (Coaxial):** Connects to an audio receiver for digital audio output.
- **Analog Audio Out (2ch):** Connects to an audio system for analog stereo sound.
- **SD Memory Card Slot:** Insert SD, SDHC, or SDXC memory cards for media playback.
- **USB Port (Rear):** Additional USB connection for devices.

## Remote Control

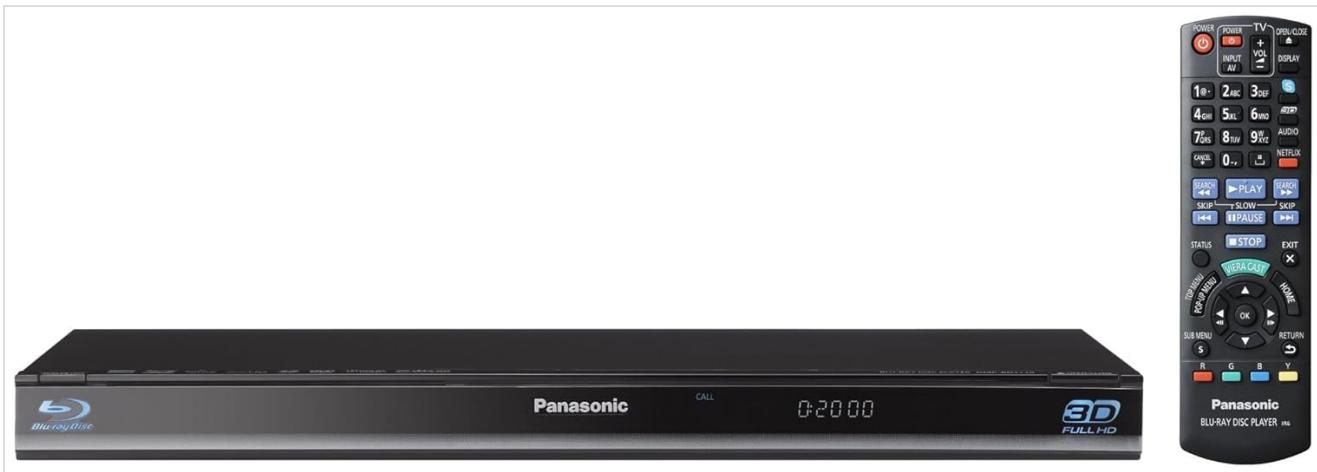

**Image Description:** The Panasonic DMP-BDT110 Blu-ray Disc Player is shown alongside its black remote control. The remote features standard playback controls, navigation buttons, and dedicated buttons for streaming services like Netflix and VIERA CAST. The included remote control allows for convenient operation of all player functions. It requires two AA batteries (included).

- **Power:** Turns the player on/off.
- **Disc Tray Open/Close:** Ejects or retracts the disc tray.
- **Navigation Buttons (Up, Down, Left, Right, Enter):** For menu navigation.
- **Playback Controls (Play, Pause, Stop, Fast Forward, Rewind):** Standard media playback functions.
- **VIERA CAST Button:** Direct access to internet streaming services.
- **Netflix Button:** Direct access to Netflix streaming service.
- **Skype Button:** Direct access to the Skype menu.

## SETUP

### 1. Connecting to Your TV

1. Ensure your TV and the Blu-ray player are turned off.
2. Connect one end of an HDMI cable (not included) to the **HDMI OUT** port on the rear of the Blu-ray player.
3. Connect the other end of the HDMI cable to an available HDMI input on your TV. Note the HDMI input number (e.g., HDMI 1, HDMI 2).
4. For audio-only connections, use the Digital Audio Out (Coaxial) or Analog Audio Out (2ch) ports as needed.

### 2. Connecting to the Network

The DMP-BDT110 is Wi-Fi Ready and includes an Ethernet port for network connectivity.

- **Wired Connection:** Connect an Ethernet cable from the **LAN (100)** port on the player to your router or network switch.
- **Wireless Connection:** For Wi-Fi, a wireless USB adapter (e.g., Panasonic DY-WL10, sold separately) is required. Insert the adapter into a USB port on the player.

### 3. Power Connection

1. Connect the power cable to the player's power input.
2. Plug the other end of the power cable into a wall outlet.

## 4. Initial Setup Wizard

1. Turn on your TV and select the correct HDMI input.
2. Turn on the Blu-ray player using the Power button on the unit or remote.
3. The Initial Setup Wizard will appear on your TV screen. Follow the on-screen instructions to configure language, video output, network settings, and other preferences.

## OPERATING INSTRUCTIONS

---

### Playing Discs

1. Press the **Open/Close** button on the player or remote to open the disc tray.
2. Place a Blu-ray disc, DVD, or CD onto the disc tray with the label side facing up.
3. Press the **Open/Close** button again to close the tray.
4. The player will automatically begin playback or display a disc menu. Use the remote's navigation buttons to select options.

### Using Internet Streaming Services (VIERA CAST)

The DMP-BDT110 provides access to various online content via VIERA CAST.

1. Ensure the player is connected to the internet (wired or with optional Wi-Fi adapter).
2. Press the **VIERA CAST** button on the remote control.
3. Navigate through the VIERA CAST menu using the remote to select services like Netflix, Amazon VOD, YouTube, Pandora, or Twitter.
4. Follow on-screen prompts to log in or access content.

### SKYPE Video Calls

The player supports SKYPE video calls, requiring a compatible webcam (sold separately) connected to a USB port.

1. Connect a compatible webcam to a USB port on the player.
2. Press the dedicated **SKYPE** button on the remote control to access the Skype menu.
3. Follow the on-screen instructions to set up your Skype account and make calls.
4. An incoming ringtone will alert you to calls, even during TV viewing or standby mode (not during Blu-ray Disc playback).
5. You can record an auto-answering video message onto an SD Memory Card (minimum 512MB, not included) to respond automatically when away. Callers can also leave messages.

---

## ADVANCED FEATURES

### Full HD 3D Blu-ray Disc Playback

Experience immersive 3D content with compatible 3D Blu-ray discs and a 3D-ready display.

- Insert a Full HD 3D Blu-ray Disc.
- Ensure your TV and 3D glasses are properly set up for 3D viewing.

- The player will automatically detect and play 3D content.

## 2D-3D Conversion

Convert standard 2D DVDs and Blu-ray Discs into 3D with natural depth perception.

- During 2D disc playback, access the player's menu to enable 2D-3D conversion.
- Adjust the 3D effect intensity using the **3D Effect Controller** to suit your preference.

## DLNA (Digital Living Network Alliance)

Connect to other DLNA-compatible devices on your home network to stream movies, music, and view photos.

- Ensure the Blu-ray player and other DLNA devices (e.g., VIERA TV, PC) are connected to the same home network.
- Access the DLNA function through the player's menu to browse and play media from network devices.

## TROUBLESHOOTING

Problem	Solution
No power	Check if the power cable is securely connected to the player and the wall outlet. Ensure the outlet has power.
No picture or sound	Verify HDMI cable connections. Ensure the TV is set to the correct HDMI input. Check audio connections to your receiver/sound system.
Disc does not play	Ensure the disc is clean and free of scratches. Check if the disc format is supported (see Specifications). Try another disc.
Cannot connect to network	Check Ethernet cable connection or ensure the optional Wi-Fi adapter is correctly installed. Verify network settings in the player's menu. Restart your router.
Remote control not working	Replace the batteries in the remote control. Ensure there are no obstructions between the remote and the player's sensor.

## SPECIFICATIONS

Feature	Detail
Model Number	DMP-BDT110
Supported Disc Formats	BD-ROM (FULL HD 3D BD, BD-Video), BD-RE / BD-RE DL (Version 3, JPEG/MPO), BD-R/BD-R DL (Version 2, MKV), DVD-ROM (DVD Video), DVD-RAM (DVD-VR, JPEG, AVCHD), DVD-R/-RW/-R(DL) (DVD Video, DVD-VR, AVCHD, JPEG/ MP3/MPO, MKV), +R/+R(DL)/+RW (DVD-VR, AVCHD), CD (CD-DA), CD-R/-RW (CD-DA, MP3, JPEG / MPO, MKV)

Feature	Detail
Supported Media (SD Card/USB)	SD Memory Card (SD, SDHC, SDXC), USB (JPEG /MPO)
Video Output	1 x HDMI (1080i resolution)
Audio Output	2ch Analog Audio Out, Digital Audio Out (Coaxial), Stereo, Surround Sound, Dolby Digital
Connectivity	Ethernet (LAN), Wi-Fi Ready (requires optional wireless USB adapter)
USB Ports	2 (Front, Rear)
Dimensions (WxHxD)	16-15/16" x 1-7/16" x 7-1/16" (approx. 430mm x 36mm x 180mm)
Weight	3.52 lbs (approx. 1.6 kg)
Power Supply	AC 120V, 60Hz

## MAINTENANCE

- **Cleaning the Unit:** Wipe the exterior of the player with a soft, dry cloth. Do not use abrasive cleaners or solvents.
- **Cleaning Discs:** Use a soft, lint-free cloth to wipe discs from the center outwards.
- **Firmware Updates:** Periodically check for firmware updates via the Network Settings menu to ensure optimal performance and access to the latest features.

## WARRANTY AND SUPPORT

For warranty information and technical support, please refer to the separate warranty card included with your product or visit the official Panasonic support website. This user manual is designed to assist with common setup and operation questions.