



[Manuals.plus](#) /

> [SPT](#) /

> [SPT 3.2-Liter Stainless Hot Water Dispenser SP-3202 User Manual](#)

## SPT SP-3202

# SPT 3.2-Liter Stainless Hot Water Dispenser SP-3202 User Manual

Model: SP-3202

[Overview](#) [Setup](#) [Operation](#) [Safety Instructions](#) [Product](#)  
[Maintenance](#) [Troubleshooting](#) [Specifications](#) [Warranty & Support](#)

## INTRODUCTION

---

Thank you for purchasing the SPT 3.2-Liter Stainless Hot Water Dispenser, model SP-3202. This appliance is designed to provide hot water efficiently for various uses such as making tea, coffee, instant noodles, or other hot beverages. Please read this manual thoroughly before operating the unit to ensure safe and proper use. Keep this manual for future reference.



Image: The SPT 3.2-Liter Stainless Hot Water Dispenser (SP-3202) shown in a modern kitchen environment, ready for use. Two cups of tea are placed nearby, illustrating its primary function.

## IMPORTANT SAFETY INSTRUCTIONS

---

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and injury to persons, including the following:

- Read all instructions before using the appliance.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against electrical shock, do not immerse cord, plugs, or the appliance in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts, and before cleaning the appliance.
- Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions, or has been damaged in any manner. Return appliance to the nearest authorized service facility for examination, repair, or adjustment.
- The use of accessory attachments not recommended by the appliance manufacturer may result in

fire, electric shock, or injury to persons.

- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to "off", then remove plug from wall outlet.
- Do not use appliance for other than intended use.
- Extreme caution must be used when moving an appliance containing hot water.
- This appliance has a polarized plug (one blade is wider than the other). To reduce the risk of electric shock, this plug is intended to fit into a polarized outlet only one way. If the plug does not fit fully into the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to modify the plug in any way.

## PRODUCT OVERVIEW

---

Familiarize yourself with the components of your SPT Hot Water Dispenser.





Image: Front view of the SPT 3.2-Liter Stainless Hot Water Dispenser (SP-3202) with its lid open, showing the inner pot and control panel. The water level indicator is visible on the side.

## Control Panel



Image: A close-up view of the control panel, highlighting the 'Reboil', 'Dispense', and 'Lock/Unlock' buttons, along with the 'Keep Warm' indicator.

- **Lid:** Removable for easy cleaning and filling.
- **Control Panel:** Contains buttons for operation.
- **Dispensing Spout:** Where hot water is dispensed.
- **Water Level Indicator:** Shows the current water volume.
- **Handle:** For carrying the unit.
- **Power Cord Inlet:** Located at the back for the detachable power cord.
- **Inner Pot:** Stainless steel, holds the water.

## SETUP

---

### 1. Unpacking

Carefully remove the hot water dispenser from its packaging. Retain packaging materials for future storage or transport if needed. Check for any damage during transit.

### 2. Initial Cleaning

1. Remove the lid and inner pot (if detachable).
2. Wash the inner pot and lid with warm, soapy water. Rinse thoroughly.
3. Wipe the exterior of the unit with a damp cloth. **Do not immerse the main unit in water.**
4. Dry all parts completely before reassembling.

### **3. Placement**

Place the dispenser on a stable, flat, heat-resistant surface, away from direct sunlight and heat sources. Ensure there is adequate ventilation around the unit.

### **4. Filling with Water**

1. Ensure the unit is unplugged.
2. Open the lid.
3. Fill the inner pot with clean drinking water up to the "MAX" fill line indicated on the water level indicator. **Do not overfill.**
4. Close the lid securely.



Image: Rear view of the SPT 3.2-Liter Stainless Hot Water Dispenser (SP-3202), showing the power cord inlet and the detachable power cord.

## OPERATING INSTRUCTIONS

---

### 1. Powering On and Initial Boil

1. After filling with water and closing the lid, plug the power cord into a standard 120V AC electrical outlet.
2. The unit will automatically begin heating the water to its boiling point. The "Boil" indicator light may illuminate.

3. Once the water reaches boiling temperature, the unit will switch to "Keep Warm" mode, and the corresponding indicator light will illuminate.

## 2. Dispensing Hot Water

1. Ensure the unit is in "Keep Warm" mode.
2. Press the **"Lock/Unlock"** button to unlock the dispenser. The lock indicator light will turn off.
3. Place a cup or container under the dispensing spout.
4. Press and hold the **"Dispense"** button to release hot water. Release the button to stop dispensing.
5. After dispensing, the unit will automatically re-lock after a few seconds for safety.

## 3. Re-boil Function

If the water temperature drops below the desired boiling point, or if you wish to re-boil the water, you can use the re-boil function.

- **Automatic Re-boil:** The unit features an auto re-boil function, which will automatically re-heat the water to boiling point if the temperature drops significantly.
- **Manual Re-boil:** Press the **"Reboil"** button on the control panel. The unit will begin heating the water to boiling point. The "Boil" indicator light will illuminate. Once boiling is complete, it will return to "Keep Warm" mode.

## 4. Keep Warm Function

The dispenser automatically maintains the water at a hot temperature after boiling. The "Keep Warm" indicator light will be on when this function is active.

## MAINTENANCE

---

Regular cleaning and maintenance will ensure the longevity and optimal performance of your hot water dispenser.

### 1. Daily Cleaning

1. Unplug the unit and allow it to cool completely.
2. Empty any remaining water from the inner pot.
3. Remove the lid and wash it with warm, soapy water. Rinse and dry.
4. Wipe the interior of the inner pot with a soft sponge or cloth. Do not use abrasive cleaners or scourers.
5. Wipe the exterior of the unit with a damp cloth. Dry thoroughly.
6. **Never immerse the main body of the dispenser in water or other liquids.**

### 2. Descaling (Monthly or as needed)

Mineral deposits (limescale) can build up inside the inner pot, especially in areas with hard water. Descaling is important for efficiency and hygiene.

1. Ensure the unit is unplugged and cool.
2. Fill the inner pot with a solution of water and white vinegar (e.g., 1 part vinegar to 2 parts water) or a commercial descaling agent suitable for kettles/water dispensers. Do not exceed the MAX fill line.
3. Allow the solution to soak for 30 minutes to an hour, or as directed by the descaling agent. For heavy

buildup, you may need to boil the solution once (ensure good ventilation).

4. Empty the solution and rinse the inner pot thoroughly several times with clean water to remove all traces of vinegar or descaler.
5. Fill with fresh water and boil once or twice, then discard the water to ensure no residual taste.

### 3. Storage

When not in use for an extended period, ensure the unit is clean, dry, and unplugged. Store it in a cool, dry place.

## TROUBLESHOOTING

---

Problem	Possible Cause	Solution
Unit does not power on.	Not plugged in; power outlet malfunction; damaged cord.	Ensure power cord is securely plugged into a working outlet. Check the power cord for damage.
Water is not heating.	Insufficient water; unit not powered on; heating element malfunction.	Check water level. Ensure unit is plugged in and power is on. If problem persists, contact support.
Water dispensing is weak or slow.	Limescale buildup in dispensing mechanism; low water level.	Perform descaling procedure. Ensure water level is adequate.
Water has an unusual taste or odor.	New unit odor; residual cleaning agent; limescale buildup.	For first use, boil and discard water several times. Rinse thoroughly after cleaning. Perform descaling.
Unit leaks.	Lid not properly closed; overfilling.	Ensure lid is securely closed. Do not fill water above the MAX line.

## SPECIFICATIONS

---

**Model:** SP-3202

**Capacity:** 3.2 Liters

**Material:** Stainless Steel inner pot, Plastic exterior

**Voltage:** 120 Volts

**Wattage:** 700 watts

**Special Features:** Auto reboil, manual re-boil button, 360-degree spinnable bottom, removable top lid, 1-touch water dispensing button, micro-computerized dry-boil function, BPA free.

**Item Weight:** 5 Pounds

**Dimensions:** (Not explicitly provided, but can be inferred or omitted if not available)

**Manufacturer:** Sunpentown

## WARRANTY AND SUPPORT

---

### Warranty Information

This SPT Hot Water Dispenser (Model SP-3202) comes with a **1-year parts and labor warranty** from the date of purchase. This warranty covers defects in materials and workmanship under normal use. It does not cover damage resulting from misuse, accident, alteration, neglect, or unauthorized repair. Please retain your proof of purchase for warranty claims.

## **Customer Support**

For technical assistance, troubleshooting beyond this manual, or warranty service, please contact SPT customer support. Contact information can typically be found on the manufacturer's website or on the product packaging.

When contacting support, please have your model number (SP-3202) and proof of purchase readily available.