

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [SINGER](#) /

› [SINGER Cordless Smart Scissors Instruction Manual](#)

SINGER Cordless Smart Scissors

SINGER Cordless Smart Scissors Instruction Manual

Model: Cordless Smart Scissors

INTRODUCTION

Thank you for choosing the SINGER Cordless Smart Scissors. This innovative cutting tool is designed to provide effortless cutting for various materials, enhancing your crafting and household tasks. Please read this manual thoroughly before first use to ensure safe and optimal operation of your device.



Image: The SINGER Cordless Smart Scissors, a white handheld device designed for easy cutting. It features an ergonomic handle and a visible cutting blade mechanism.

SAFETY INSTRUCTIONS

Always follow basic safety precautions when using electrical appliances to reduce the risk of fire, electric shock, and personal injury.

- Keep hands and body parts away from the cutting blades during operation.
- Do not allow children to operate this device. Store out of reach of children.

- Use only for intended purposes as described in this manual.
- Do not immerse the device in water or other liquids.
- Turn off and remove batteries before cleaning or changing blades.
- Inspect blades for damage before each use. Replace dull or damaged blades immediately.
- Do not attempt to cut extremely hard or thick materials that may damage the blades or motor.

PACKAGE CONTENTS

Please check the package contents to ensure all items are present:

- 1 x SINGER Cordless Smart Scissors unit
- 1 x Set of Replacement Blades
- 1 x Instruction Manual (this document)

SETUP

Before using your Cordless Smart Scissors, you will need to install the batteries.

1. Locate the battery compartment cover, usually on the handle.
2. Slide or unclip the cover to open the compartment.
3. Insert the required batteries (e.g., 2 x AA batteries, not included) according to the polarity indicators (+/-).
4. Close the battery compartment cover securely.
5. Ensure blades are securely attached. If replacing, refer to the "Maintenance" section.

OPERATING INSTRUCTIONS

Follow these steps for effective and safe operation:

1. **Power On:** Locate the power switch or button, typically on the handle. Press or slide it to the "ON" position. The blades will begin to move.
2. **Cutting:** Position the material you wish to cut between the blades. Gently guide the scissors along the desired cutting line. The motorized blades will do the work.
3. **Material Compatibility:** These scissors are designed to cut various materials including fabric, paper, cardboard, and tough denim. Avoid extremely thick or rigid materials that may strain the motor or damage the blades.
4. **Power Off:** After use, press or slide the power switch to the "OFF" position. Ensure the blades have stopped moving before setting the device down.

MAINTENANCE

Proper maintenance ensures the longevity and performance of your Cordless Smart Scissors.

Cleaning

- Always turn off the device and remove batteries before cleaning.
- Use a soft, dry cloth to wipe down the body of the scissors.
- Carefully remove any fabric fibers or debris from around the blades using a small brush or tweezers.
- Do not use abrasive cleaners or immerse the device in water.

Blade Replacement

Dull blades can reduce cutting efficiency. Replace blades as needed using the included replacement set.

1. Ensure the device is turned off and batteries are removed.
2. Locate the blade release mechanism (refer to diagrams if available, or typically a small screw/latch).
3. Carefully remove the old blades, handling them by the non-sharp edges.
4. Insert the new blades, ensuring they are correctly aligned and secured.
5. Test the scissors on a scrap piece of material before resuming normal use.

TROUBLESHOOTING

If you encounter issues with your Cordless Smart Scissors, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Scissors not turning on.	Dead or incorrectly inserted batteries.	Check battery polarity or replace with fresh batteries.
Blades not cutting effectively.	Dull blades, debris caught in blades, or material is too thick.	Clean blades, replace blades, or try cutting thinner material.
Motor sounds weak or stalls.	Low battery power or attempting to cut overly thick material.	Replace batteries. Reduce material thickness.

SPECIFICATIONS

Brand	SINGER
Model	Cordless Smart Scissors
Color	White
Blade Material	Stainless Steel
Handle Material	Plastic
Item Weight	3.2 ounces
Hand Orientation	Ambidextrous
Package Dimensions	10.5 x 5.6 x 1.8 inches

WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the documentation included with your purchase or visit the official SINGER website. Keep your proof of purchase for any warranty claims.

Online Support: www.singer.com/support

