

Philips SA3VBE08K/37

Philips GoGear Vibe 8GB MP3 Player User Manual

Model: SA3VBE08K/37

INTRODUCTION

The Philips GoGear Vibe 8GB MP3 Player (Model SA3VBE08K/37) is designed for portable audio and video entertainment. It features Philips FullSound technology for enhanced audio quality, a 1.8-inch color display, an FM radio, and a voice recorder. This manual provides instructions for setting up, operating, maintaining, and troubleshooting your device.





Image 1: Front view of the Philips GoGear Vibe MP3 Player, showing the display with music information and control buttons.

SETUP

1. Charging the Device

Before initial use, fully charge your GoGear Vibe. Connect the device to a computer's USB port using the provided cable. A full charge typically takes several hours. The device supports FastCharge, providing approximately 90 minutes of playback after just five minutes of charging.

2. Connecting to a Computer

Connect the GoGear Vibe to your computer using the USB cable. The device will appear as a removable storage device. You can transfer music, videos, and other files by dragging and dropping them into the appropriate folders on the device. The included Songbird software can also be used for media management and synchronization.

3. Attaching Earbuds

Insert the soft rubber earbuds into the headphone jack located on the bottom of the device. Ensure they are securely connected for optimal audio output. The design of the earbuds is intended to provide a comfortable and secure fit.



Image 2: The Philips GoGear Vibe MP3 Player shown with its accompanying soft rubber earbuds.

OPERATING INSTRUCTIONS

1. Power On/Off

To power on the device, press and hold the power button. To power off, press and hold the power button again until the device shuts down.

2. Navigation and Controls

Use the directional buttons and the central play/pause button to navigate through menus and control playback. The 1.8-inch full-color screen displays menu options, track information, and video content. Dedicated volume controls are located on the side of the device.

- **Play/Pause:** Press the central button to play or pause media.
- **Volume:** Use the side buttons to adjust audio volume.
- **Navigation:** Use the directional pad to move through menus and tracks.
- **Keypad Lock:** Activate the keypad lock feature to prevent accidental button presses.
- **Superscroll:** Utilize the superscroll option for faster navigation through long lists.

3. Music Playback

Select "Music" from the main menu. Browse your library by artist, album, genre, or song. The Philips FullSound technology processes audio signals to deliver a richer and fuller sound experience, enhancing bass, vocal clarity, and detail.

4. FM Radio

Access the "FM Radio" option from the main menu. The device supports RDS (Radio Data System), which displays station information, program details, and song titles where available. You can store up to 20 preset radio stations for quick access.

5. Voice Recorder

The GoGear Vibe includes a voice recording function. Select "Voice Recorder" from the menu to start, pause, and save recordings.

6. Audible.com Content

The device is compatible with content from Audible.com, allowing you to enjoy audiobooks, magazines, and radio shows. Transfer downloaded Audible content to your device for playback.

MAINTENANCE

1. Cleaning

Wipe the device with a soft, dry cloth. Avoid using abrasive cleaners or solvents, as these can damage the finish. Keep the headphone jack and USB port free of dust and debris.

2. Battery Care

The GoGear Vibe uses a built-in Lithium Polymer battery. For optimal battery life, avoid exposing the device to extreme temperatures. If the device will not be used for an extended period, charge it periodically to maintain battery health.

3. Storage

Store the device in a cool, dry place away from direct sunlight and moisture when not in use.

TROUBLESHOOTING

Device Does Not Power On

- Ensure the battery is charged. Connect the device to a power source and allow it to charge for at least 10 minutes before attempting to power it on again.
- If the device remains unresponsive, perform a soft reset by pressing and holding the power button for an extended period (e.g., 10-15 seconds).

No Sound or Low Volume

- Check that the earbuds are securely plugged into the headphone jack.
- Adjust the volume using the dedicated volume buttons on the device.
- Ensure the audio file is not corrupted or muted. Try playing a different audio file.

Device Not Recognized by Computer

- Try a different USB port on your computer.
- Ensure the USB cable is not damaged and is properly connected to both the device and the computer.
- Restart your computer and the GoGear Vibe.

Buttons Unresponsive or Delayed Response

- Ensure the keypad lock feature is not activated.
- If the screen has turned off due to inactivity, a single press of a button may only activate the screen. Press the button again to perform the desired action.
- Restart the device if buttons continue to be unresponsive.

SPECIFICATIONS

Model Number	SA3VBE08K/37
Brand	Philips
Memory Storage Capacity	8 GB
Screen Size	1.8 Inches
Display Technology	LCD
Connectivity Technology	USB
Special Features	FM Radio, Voice Recorder
Battery Type	1 Lithium Polymer battery (included)
Product Dimensions	0.39 x 1.69 x 3.07 inches

Item Weight	1.23 ounces
Included Components	Earphones, USB Cable, Quick Start Guide

WARRANTY INFORMATION

The Philips GoGear Vibe MP3 Player is backed by a limited 90-day warranty. Please retain your proof of purchase for warranty claims. For detailed terms and conditions, refer to the warranty documentation included with your product or visit the official Philips support website.

SUPPORT

For further assistance, technical support, or service inquiries regarding your Philips GoGear Vibe MP3 Player, please contact Philips Consumer Electronics customer support. Visit the official Philips website for contact information, FAQs, and additional resources.

Manufacturer: Philips Consumer Electronics