

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- > [Nikon](#) /
- > [Nikon COOLPIX S6100 Digital Camera User Manual](#)

## Nikon S6100

# Nikon COOLPIX S6100 Digital Camera User Manual

Your guide to operating the Nikon COOLPIX S6100 16 MP Digital Camera

## 1. INTRODUCTION

Welcome to the user manual for your Nikon COOLPIX S6100 digital camera. This guide provides essential information for setting up, operating, and maintaining your camera to ensure optimal performance. The COOLPIX S6100 features a 16.0-megapixel CCD sensor, a 7x NIKKOR wide-angle optical zoom lens, a 3-inch touch-panel LCD, and HD (720p) movie recording capabilities.

## 2. PRODUCT OVERVIEW

Familiarize yourself with the main components and controls of your Nikon COOLPIX S6100 camera.

### Front View



**Image 2.1:** Front view of the Nikon COOLPIX S6100 camera, highlighting the NIKKOR 7x wide optical zoom lens and built-in flash.

## Top and Rear Controls



**Image 2.2:** Top and rear view of the camera, illustrating the ON/OFF button, shutter release, zoom control, and HDMI/USB ports.

## Touch-Panel LCD Interface



**Image 2.3:** The 3-inch touch-panel LCD displaying the camera's setup menu, including options for AF assist, digital zoom, sound settings, auto off, format memory, and language.

## 3. SETUP

### 3.1. Installing the Battery and Memory Card

The camera uses a rechargeable Lithium-ion battery. Ensure the battery is fully charged before first use. The camera supports SD, SDHC, and SDXC memory cards.

1. Open the battery/memory card cover located on the bottom of the camera.
2. Insert the battery with the correct orientation until it clicks into place.
3. Insert a compatible memory card into the slot until it clicks.
4. Close the cover securely.



Image 3.1: Bottom view of the camera with the battery and memory card compartment open, showing the slots for insertion.

### 3.2. Charging the Battery

The camera can be charged via a USB cable connected to a computer or using the included AC adapter and USB cable connected to a wall outlet. A light on the back of the camera indicates charging status.

### 3.3. Initial Settings

Upon first power-on, you may be prompted to set the language, date, and time. Use the touch screen or physical controls to navigate and confirm your selections.

## 4. BASIC OPERATION

### 4.1. Taking Photos

1. Turn on the camera by pressing the **ON/OFF** button.
2. Point the camera at your subject. The camera will automatically focus.
3. Press the shutter button halfway down to confirm focus.
4. Press the shutter button fully to take the picture.

## 4.2. Recording Videos

The COOLPIX S6100 features a dedicated movie recording button.

1. Press the dedicated **Movie Record** button to start recording.
2. Press the **Movie Record** button again to stop recording.

Videos are recorded in HD (720p) resolution.

## 4.3. Playback

To review your photos and videos:

1. Press the **Playback** button.
2. Use the touch screen or directional controls to scroll through your images and videos.

# 5. ADVANCED FEATURES

## 5.1. Touch Screen Functions

The 3-inch touch-panel LCD allows for intuitive control. You can tap to focus, navigate menus, and review images. A stylus is included for precise interaction.

## 5.2. Scene Selection

The camera offers 19 scene modes plus an auto scene selector. These modes optimize camera settings for specific shooting conditions (e.g., Portrait, Landscape, Night Portrait, Close-up). Access scene modes via the menu on the touch screen.

## 5.3. Filter Effects and Retouching

Enhance your photos directly on the camera with various filter effects and retouching options, including:

- Drawing or writing on photos
- Adding decorations
- Cross screen effect
- Fish eye effect
- Selective color
- Black and white conversion
- Sepia tone
- Glamour retouch
- Skin softening

## 5.4. Zoom and Image Stabilization

The camera features a 7x optical zoom NIKKOR ED glass lens and up to 4x digital zoom. The 4-way VR (Vibration Reduction) image stabilization system helps reduce blur caused by camera shake, especially in low light or when using the zoom.

# 6. MAINTENANCE

## 6.1. Cleaning the Camera

- **Lens:** Use a soft, lint-free cloth or a lens brush to gently remove dust. For smudges, use a lens cleaning solution applied to a cloth, not directly to the lens.
- **LCD Screen:** Wipe gently with a soft, dry cloth. Avoid pressing hard on the screen.

- **Camera Body:** Use a soft, dry cloth to wipe away dust and dirt. Do not use organic solvents or strong cleaning agents.

## 6.2. Storage

When not in use, store the camera in a cool, dry place away from direct sunlight, high temperatures, and humidity. Remove the battery if the camera will not be used for an extended period.

## 7. TROUBLESHOOTING

If you encounter issues with your camera, refer to the following common solutions:

- **Camera does not turn on:** Ensure the battery is fully charged and correctly inserted.
- **Pictures are blurry:** Check that the lens is clean. Ensure the camera has focused correctly before taking the shot. Use VR image stabilization in low light or with zoom.
- **Memory card error:** Ensure the memory card is inserted correctly and is not full. Try formatting the card (this will erase all data).
- **Touch screen unresponsive:** Gently clean the screen. If using a stylus, ensure it is making proper contact.

For more detailed troubleshooting, please consult the official Nikon support resources.

## 8. SPECIFICATIONS

<b>Sensor Type</b>	16.0-megapixel CCD
<b>Lens</b>	NIKKOR 7x Optical Zoom ED Glass Lens (28-196mm equivalent)
<b>Image Stabilization</b>	4-way VR (Vibration Reduction)
<b>Display</b>	3-inch (460,000-dot) Touch-Panel LCD
<b>Video Recording</b>	HD 720p with Stereo Sound
<b>Storage Media</b>	SD/SDHC/SDXC memory cards
<b>Connectivity</b>	USB, HDMI (Mini Connector)
<b>Dimensions (Approx.)</b>	97.9 x 58.0 x 21.9 mm (3.9 x 2.3 x 0.9 in.)
<b>Weight (Approx.)</b>	177 g (6.3 oz) with battery and memory card

## 9. WARRANTY AND SUPPORT

Your Nikon COOLPIX S6100 camera is covered by a limited warranty. Please refer to the warranty card included with your product for specific terms and conditions. For technical support, service, or additional information, please visit the official Nikon website or contact Nikon customer service.

You can find more information and support at the [Nikon Store on Amazon](#).