



Manuals.plus /

- › Andis /
- › Andis Pet No.4SE Blade Set (9.5mm) Instruction Manual

Andis 65590

Andis Pet No.4SE Blade Set (9.5mm) Instruction Manual

Model: 65590 | Brand: Andis

INTRODUCTION

The Andis Pet No.4SE Blade Set is a high-quality, chrome-plated, carbon-steel detachable blade designed for professional and home pet grooming. This blade is engineered with SHOWEdge technology to provide a smooth finish on a pet's coat, reducing the need for multiple passes. It leaves hair at a length of 3/8 inch (9.5mm).



Figure 1: Andis Pet No.4SE Blade Set. This image displays the complete blade set, highlighting its design and finish.

KEY FEATURES

- **Material:** Chrome-plated, carbon-steel construction for durability and sharpness.
- **Blade Size:** No.4SE, designed to leave hair 3/8 inch (9.5mm) long.
- **Technology:** Features SHOWEdge technology for an exceptionally smooth finish, minimizing blade tracks.
- **Compatibility:** Compatible with all Andis detachable blade clippers.

SETUP AND INSTALLATION

Proper installation of the blade is crucial for safe and effective grooming. Follow these steps to attach the No.4SE blade to your Andis detachable blade clipper:

1. **Ensure Safety:** Always ensure your clipper is turned **OFF** and **UNPLUGGED** from the power source before attaching or detaching any blade.

2. **Clean Clipper Drive:** Inspect the clipper's blade drive for any hair or debris. Clean if necessary.
3. **Align Blade:** Hold the blade with the teeth facing away from you. Align the blade's hinge with the hinge on the clipper.
4. **Snap into Place:** Gently push the blade down until it snaps securely into position. You should hear a click.
5. **Verify Attachment:** Lightly tug on the blade to ensure it is firmly attached and does not wobble.

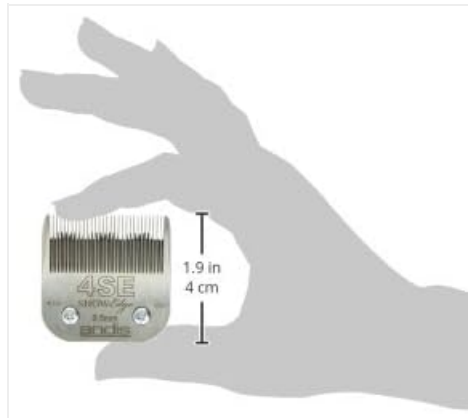


Figure 2: Detailed view of the Andis No.4SE blade, showing its size and construction. This image helps in identifying the blade and understanding its physical characteristics.

OPERATING INSTRUCTIONS

For optimal performance and to ensure the comfort of the animal, follow these operating guidelines:

- **Preparation:** Always start with a clean, dry, and thoroughly detangled coat. Matted or dirty hair can dull blades quickly and cause discomfort.
- **Oiling:** Before each use, apply a few drops of clipper oil to the teeth and bearing surfaces of the blade. This reduces friction, heat, and wear.
- **Clipping Technique:** Hold the clipper firmly and guide it smoothly through the coat, moving against the direction of hair growth for a consistent cut. Avoid pressing too hard.
- **Monitor Heat:** Blades can heat up during prolonged use. Periodically check the blade temperature by touching it. If it becomes too hot, stop grooming, clean and re-oil the blade, or switch to a cool blade. Blade coolants can also be used.
- **Regular Breaks:** For longer grooming sessions, take breaks to allow the clipper and blade to cool down.

MAINTENANCE

Proper maintenance extends the life of your blade and ensures consistent performance.

- **Cleaning After Each Use:**
 - a. Turn off and unplug the clipper.
 - b. Detach the blade.
 - c. Use a small brush to remove all hair from between the blade teeth and from the blade drive area.
 - d. For a deeper clean, use a blade wash solution to remove oil and debris. Ensure the blade is thoroughly dried immediately after using blade wash to prevent rust.
- **Oiling:** Apply 2-3 drops of clipper oil to the front and sides of the blade teeth, and 1-2 drops on the back rail where the blade glides. Do this before, during (if needed), and after each grooming session.
- **Storage:** Store blades in a clean, dry place, preferably in a blade case, to protect them from damage and moisture.
- **Sharpening:** Over time, blades will become dull. For best results, have your blades professionally sharpened by a reputable service. Do not attempt to sharpen blades yourself unless you have specialized tools and training.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Blade gets excessively hot	Insufficient oiling, hair buildup, prolonged use, dull blade.	Apply more clipper oil. Clean blade thoroughly. Use blade coolant. Take breaks. Consider sharpening or replacing the blade.
Blade is not cutting hair effectively	Dull blade, hair buildup, improper oiling, matted coat.	Clean and oil the blade. Ensure the pet's coat is clean and detangled. Have the blade professionally sharpened or replace it.
Blade leaves tracks or uneven cut	Improper technique, dull blade, hair buildup.	Review operating instructions for proper technique. Clean and oil blade. Sharpen or replace if dull.
Blade shows signs of rust	Improper drying after cleaning, exposure to moisture, insufficient oiling.	Ensure blades are completely dry after cleaning. Apply clipper oil regularly, especially after exposure to moisture. Store in a dry environment.

SPECIFICATIONS

Model Number	65590
Blade Size	No.4SE (Leaves hair 3/8" or 9.5mm)
Material	Chrome-plated Carbon Steel
Product Dimensions	3.5 x 1.25 x 4.75 inches
Item Weight	3.2 ounces
UPC	040102655906
Recommended Use	Pet Grooming (Clipping)

WARRANTY INFORMATION

For detailed warranty information regarding your Andis Pet No.4SE Blade Set, please refer to the official Andis website or contact Andis customer service directly. Warranty terms and conditions may vary.

CUSTOMER SUPPORT

If you have any questions, require assistance, or need further information about your Andis Pet No.4SE Blade Set, please visit the official Andis website or contact their customer support team.

Andis Official Website: www.andis.com

