

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [Canon](#) /
- › [Canon EOS Kiss X5 Digital SLR Camera User Manual](#)

## Canon KISSX5-WKIT

# Canon EOS Kiss X5 Digital SLR Camera User Manual

Model: KISSX5-WKIT | Brand: Canon

## INTRODUCTION

---

This manual provides detailed instructions for the Canon EOS Kiss X5 Digital SLR Camera. It covers essential information for setting up, operating, and maintaining your camera, ensuring you can effectively utilize its features for high-quality photography and videography.

The EOS Kiss X5 features an 18-megapixel CMOS sensor, a vari-angle clear view LCD monitor, and the ability to record Full HD movies with digital zoom. It supports interchangeable EF and EF-S lenses, offering versatility for various shooting scenarios, including the EF-S 18-55mm and EF-S 55-250mm lenses often included in kits.



A front view of the Canon EOS Kiss X5 Digital SLR Camera body with an attached lens, accompanied by a second interchangeable lens. This kit provides versatile focal lengths for various photographic needs.

## SETUP

---

### 1. Attaching the Lens

1. Remove the rear lens cap and the camera body cap.
2. Align the red or white index mark on the lens with the corresponding index mark on the camera body.
3. Turn the lens clockwise until it clicks into place.

### 2. Inserting the Battery

1. Open the battery compartment cover on the bottom of the camera.
2. Insert the battery with the electrical contacts facing inward, ensuring it clicks into place.
3. Close the battery compartment cover.

### 3. Inserting a Memory Card

1. Open the memory card slot cover on the side of the camera.
2. Insert an SD, SDHC, or SDXC memory card with the label facing the back of the camera until it clicks.
3. Close the memory card slot cover.

#### 4. Initial Settings (Date/Time)

Upon first power-on, the camera will prompt you to set the date, time, and time zone. Use the camera's controls to navigate and confirm these settings.

## OPERATING INSTRUCTIONS

---

### Shooting Modes

The EOS Kiss X5 offers various shooting modes accessible via the mode dial on top of the camera:

- **Scene Intelligent Auto:** The camera automatically analyzes the scene and selects optimal settings.
- **Creative Auto:** Allows for easy adjustment of background blur and other creative effects.
- **Program AE (P):** Camera sets aperture and shutter speed, but you can adjust other settings.
- **Shutter-priority AE (Tv):** You set the shutter speed, and the camera sets the aperture.
- **Aperture-priority AE (Av):** You set the aperture, and the camera sets the shutter speed.
- **Manual Exposure (M):** You control both aperture and shutter speed.
- **Movie Recording:** Dedicated mode for capturing video.

### Drive Mode Settings

The Drive Mode controls how the camera takes pictures when the shutter button is pressed. You can access these settings via the Quick Control screen or the menu.



This image displays the camera's LCD screen with the 'Drive Mode' menu. The highlighted option is 'Single Shooting'. Other options include Continuous Shooting, Self-Timer (10 seconds), Self-Timer (2 seconds), and Custom Self-Timer.

- **Single Shooting:** Takes one picture each time the shutter button is fully pressed.
- **Continuous Shooting:** Takes pictures continuously as long as the shutter button is held down.
- **Self-Timer (10s):** Takes a picture 10 seconds after the shutter button is pressed.
- **Self-Timer (2s):** Takes a picture 2 seconds after the shutter button is pressed.
- **Custom Self-Timer:** Allows you to set a custom delay and number of shots.

### Using the Vari-angle LCD Monitor

The camera features a vari-angle clear view LCD monitor that can be rotated and tilted, allowing for flexible shooting from various angles, including high, low, and self-portrait perspectives. This is particularly useful for Live View shooting and video recording.

### Movie Recording

To record movies, set the mode dial to the movie recording position. The camera supports Full HD video capture. You can use the digital zoom feature during movie recording to get closer to your subject.

The "Video snap" feature allows you to record short video clips (e.g., 2, 4, or 8 seconds) and combine them into a video album, extending the creative possibilities of your full HD animation.

## MAINTENANCE

---

## Cleaning the Camera

- **Camera Body:** Wipe with a soft, dry cloth. For stubborn dirt, use a cloth lightly dampened with water.
- **Lens:** Use a lens blower to remove dust, then gently wipe with a lens cleaning cloth and lens cleaning solution if necessary. Avoid touching the lens surface with your fingers.
- **Sensor:** Sensor cleaning should be performed with extreme care. If dust spots appear on images, use the camera's built-in sensor cleaning function or consult a professional service center.
- **LCD Monitor:** Gently wipe with a soft cloth.

## Storage

When not in use, store the camera in a cool, dry, well-ventilated area, away from direct sunlight and high humidity. Remove the battery if storing for extended periods to prevent leakage.

---

## TROUBLESHOOTING

- **Camera does not power on:**
  - Ensure the battery is fully charged and correctly inserted.
  - Check if the battery compartment cover is securely closed.
- **Images are blurry:**
  - Check if the lens is properly attached and clean.
  - Ensure the focus mode is set correctly (Autofocus or Manual Focus).
  - Verify that the shutter speed is fast enough to prevent camera shake, especially in low light.
- **Memory card error:**
  - Ensure the memory card is inserted correctly.
  - Try formatting the memory card (note: this will erase all data).
  - Test with a different, compatible memory card.
- **Flash does not fire:**
  - Check flash settings; ensure it's not set to "Flash Off".
  - In some shooting modes (e.g., Scene Intelligent Auto), the flash may not fire if sufficient ambient light is detected.

---

## SPECIFICATIONS

Feature	Detail
Model Name	EOS Kiss X5 (KISSX5-WKIT)
Brand	Canon
Photo Sensor Resolution	18 MP
Photo Sensor Technology	CMOS (APS-C)
Compatible Mountings	Canon EF, Canon EF-S
Image Stabilization	Digital

Supported File Format	JPEG, RAW
Video Resolution	1080p (Full HD)
Screen Size	3 Inches
Display Type	LCD (Vari-angle)
Autofocus	Yes (Contrast Detection)
ISO Range (Expanded)	100 - 12800
Maximum Shutter Speed	1/4000 Seconds
Continuous Shooting	3.7 frames per second
Item Weight	0.52 Kilograms
Special Features	Video snap, Movie Digital Zoom

## WARRANTY AND SUPPORT

---

Please note that this product is an international version and comes with **No Warranty** as specified by the manufacturer.

For technical support, service, or additional information regarding your Canon EOS Kiss X5 camera, please visit the official Canon support website or contact your local Canon service center. You can find more information on the [Canon Store on Amazon](#).