

## CLOCKY CLKYb

# CLOCKY Extra Loud Alarm Clock Instruction Manual

Model: CLKYb

Brand: CLOCKY

## INTRODUCTION

Welcome to the CLOCKY Extra Loud Alarm Clock user manual. This guide provides essential information for setting up, operating, and maintaining your CLOCKY alarm clock, designed specifically for heavy sleepers. Its unique features ensure you get out of bed on time by rolling away and sounding a loud alarm.

## KEY FEATURES

- **Runaway Alarm Clock:** Jumps from your bedside and runs away to ensure you get up.
- **Extra Loud Alarm:** Designed for heavy sleepers with a super loud digital alarm.
- **Wheeled Movement:** Features wheels that allow it to roll and move, forcing you to chase it.
- **Snooze Option:** Offers a single snooze option before it runs away, or can be set to no snooze.
- **Easy to Set:** Simple controls for setting time and alarm.
- **Durable Design:** Made from plastic, built to withstand drops from a nightstand.

## SETUP GUIDE

### 1. Battery Installation

The CLOCKY alarm clock requires 4 AAA batteries (not included). To install:

1. Locate the battery compartment on the underside of the clock.
2. Use a small screwdriver to open the battery compartment cover.
3. Insert 4 AAA batteries, ensuring correct polarity (+/-).
4. Replace the battery compartment cover and secure it with the screw.

# Super Loud For Heavy Sleepers



Image: A hand inserting AAA batteries into the battery compartment of a light blue Clocky alarm clock. The compartment is located on the underside of the clock, between its two large wheels.

## 2. Setting the Time

To set the current time on your CLOCKY:

1. Press the 'T' (Time) button located on the top of the clock. The time display will start flashing.
2. Use the 'H' (Hour) button to adjust the hour.
3. Use the 'M' (Minute) button to adjust the minutes.
4. Press the 'T' button again to confirm and save the time.

# Loud Runaway Alarm Heavy Sleepers



Image: A hand pressing buttons on the top of a black Clocky alarm clock to set the time. The digital display shows "6:30".

## 3. Setting the Alarm

To set your wake-up alarm:

1. Press the 'A' (Alarm) button located on the top of the clock. The alarm time display will start flashing.
2. Use the 'H' (Hour) button to adjust the alarm hour.
3. Use the 'M' (Minute) button to adjust the alarm minutes.
4. Press the 'A' button again to confirm and save the alarm time.

## OPERATING YOUR CLOCKY

### 1. Activating the Alarm and Movement

CLOCKY offers different modes for its alarm and movement:

- **Alarm Only:** To use CLOCKY as a stationary alarm clock, ensure the wheels icon button is not activated. The alarm will sound without the clock moving.
- **Alarm with Movement:** To activate the runaway feature, press the button with the wheels icon. When the alarm sounds, CLOCKY will jump from your nightstand (if placed on one) and roll around, forcing you to get out of bed to turn it off.



Image: A black Clocky alarm clock with white wheels displayed in front of its brown and black packaging box. The clock's digital display shows "6:30".

## 2. Snooze Function

CLOCKY allows for a single snooze. When the alarm sounds, press the large "Snooze" button on top. The alarm will temporarily stop and then resume after a short period, at which point CLOCKY will begin to roll away if the movement feature is activated.



# Easy to Set



Set to run away when the alarm sounds, after one snooze, or have him stay put.

Image: A hand reaching towards the top of a black Clocky alarm clock, seemingly to press the snooze button. The clock is on a surface, and its digital display shows "6:30".

### 3. Alarm Sound

The alarm sound is designed to be loud and attention-grabbing, featuring an R2D2-like sound to ensure heavy sleepers wake up. There is no volume control for the alarm sound.

# Loud Alarm Clock



**LOUD  
ALARM**



**JUMPS  
RUNS**



**EASY**

**EASY  
SET UP**



Image: A black Clocky alarm clock on a white surface, with three circular icons above it. The icons represent "LOUD ALARM" (bell), "JUMPS RUNS" (two circles with a line), and "EASY SET UP" (a checkmark). The clock's digital display shows "6:30".

## 4. Movement in Action

When the movement feature is active, CLOCKY will roll off surfaces up to 3 feet high and navigate around obstacles. This ensures you physically engage with the alarm to turn it off, promoting wakefulness.



Image: A black Clocky alarm clock on a rug next to a bed, with text overlay stating "Clocky is the only alarm clock that forces you up. You'll get out of bed to chase his loud alarm."

## MAINTENANCE

### 1. Cleaning

Wipe the CLOCKY alarm clock with a soft, dry cloth. Do not use abrasive cleaners or immerse the device in water.

### 2. Battery Replacement

Replace batteries when the display dims or the alarm sound weakens. Follow the battery installation steps in the Setup Guide.

## TROUBLESHOOTING

Problem	Solution
CLOCKY does not move.	Ensure the wheels icon button is activated. Check battery levels. Ensure CLOCKY is on a flat surface from which it can roll.

Problem	Solution
Alarm is not sounding.	Verify the alarm time is set correctly and the alarm is activated (bell icon). Check battery levels.
Time display is dim or blank.	Replace all 4 AAA batteries.
CLOCKY rolls off too quickly.	The snooze function allows for a brief delay. If you prefer no movement, deactivate the wheels icon.

## SPECIFICATIONS


- **Brand:** CLOCKY
- **Model:** CLKYb
- **Color:** Black
- **Display Type:** LED
- **Power Source:** 4 AAA batteries (not included)
- **Product Dimensions:** 3.5"W x 3.5"H
- **Material:** Plastic
- **Special Features:** Loud Alarm, Snooze, Runs away, Super loud alarm clock for heavy sleepers on wheels

## WARRANTY AND SUPPORT

CLOCKY products come with a 90-day limited warranty. For warranty claims or technical support, please visit the official CLOCKY website or contact their customer service directly.

[Visit the CLOCKY Store](#)

### Related Documents - CLKYb

 <p>Product-Overview 2021</p> <p><small>CONSUMER ELECTRONICS • MOBILE CHARGERS • OUTDOOR GEAR • SMART HOME • ACCESSORIES • IT PERIPHERALS &amp; MORE • SHOP AT NEW-TECH-PRODUCTS.COM • 100% CUSTOMER SATISFACTION</small></p>	<p><a href="#">New-Tech-Products 2021 Product Overview Catalog</a></p> <p>Explore the comprehensive 2021 product catalog from New-Tech-Products Handels GmbH, featuring a wide array of consumer electronics, mobile chargers, outdoor gear, smart home devices, IT accessories, and more from leading brands.</p>
--	--

Documents - CLOCKY – CLKYb



## FAQs

### CLOCKY

#### 1. Help! My Clocky doesn't move.

Make sure you press the wheels or buttons which is the left button located on Clocky's face. An icon will appear on the screen indicating that the wheels have been turned on.

Note that Clocky will not move until a minute after the snooze button has been pressed. This may be changed by pressing the 'V' button how many seconds, and then pressing the 'wheels' to activate your Clocky's snooze time.

#### 2. My Clocky still doesn't move.

First make sure the batteries are installed with the correct polarity. Clocky's polarity is different from other devices. You may be connecting and re-checking the batteries.

Second, try pressing the 'V' and 'T' buttons on the top simultaneously to operate the bed mode. If you Clocky's functioning properly the display would be on and the wheels will start to move.

#### 3. I've tried and everything, nothing works.

##### 3. I've tried my manual. Where can I get another?

We can email you the Clocky manual whenever you need it. [Click here to email your request.](#)

#### 4. How long is your return policy?

We offer a standard 30-day return warranty for product that is defective. We will happily refund or replace your item at no additional charge.

#### 5. How much is Clocky?

Our Clocky has a very low retail street price. The retailing is \$5.95 at 11 stores and \$22.95 at 82 stores. We hope this helps.

#### 6. Can I return Clocky's returned?

There are no return policies on Clocky, however you may be getting a small price of 49% over the bank operator to return the clock. Other countries have their own laws regarding products.

#### 7. My Clocky's return requires some.

My Clocky is not intended for sale and does not require any pricing or return.

#### 8. The Clocky is intended for sale and does not require any pricing or return.

The product has been used for sale and does not require any pricing or return.

#### 9. I'd like to return my product.

If you purchased your product from our site within the last 10 days, we can issue an RMA to return your item. Please note that a 10% restocking fee applies. This can only be returned to the site.

If your product was purchased through another retailer, please contact that retailer to learn about their return policy, as they might offer more lenient return policies.

Our Clocky is not intended for sale and does not require any pricing or return.

The product has been used for sale and does not require any pricing or return.

[\[pdf\]](#) User Manual Frequently Asked Questions Warranty

faq's clkby n robotshop media files

FAQs CLOCKY 1. Help My Clocky doesn't move. Make sure you press the wheels on button which is the left button located on Clocky's face. An icon will appear on the screen indicating that the wheels have been turned on. Note that Clocky will not move until a minute after the snooze button has been ...

lang:en score:22 filesize: 48.29 K page\_count: 1 document date: 2011-01-29