

[Manuals.plus](#) /

› [moovv](#) /

› moovv Metronic 477205 Portable AM/FM Radio with Digital Display and Alarm Function User Manual

moovv 477205

moovv Metronic 477205 Portable AM/FM Radio User Manual

Model: 477205

INTRODUCTION

This manual provides detailed instructions for the safe and efficient operation of your moovv Metronic 477205 Portable AM/FM Radio. This compact radio features a digital frequency display, an integrated clock, and an alarm function, making it suitable for various uses including listening to music, news, and sports broadcasts. Please read this manual thoroughly before use and retain it for future reference.

PRODUCT OVERVIEW

The moovv Metronic 477205 is a versatile portable radio designed for ease of use. It operates on both AC power and batteries, offering flexibility for home or on-the-go listening.

Front View and Controls



Image 1: Front view of the radio. Features include a large speaker grille on the left, a digital LCD display on the right showing frequency (e.g., FM 102.8 MHz), and control buttons for HR (Hour), MN (Minute), and Tuning knob below the display.

Side View and Volume Control



Image 2: Side view of the radio, showing the vertical rotary volume control knob located on the right side.

Rear View and Connections



Image 3: Rear view of the radio. Visible components include the extendable telescopic antenna, the AC power input socket, and a battery compartment cover (not explicitly shown but implied by battery power option).

SETUP

Powering the Radio

Your radio can be powered by either AC electricity or batteries.

1. **AC Power:** Connect the provided AC power cord to the 'AC IN' socket on the back of the radio (refer to Image 3). Plug the other end into a standard 220V wall outlet.
2. **Battery Power:** Open the battery compartment cover on the back of the radio. Insert the required number of batteries (type and quantity typically specified inside the compartment or in the included manual) ensuring correct polarity (+/-). Close the compartment cover securely.

Antenna Adjustment

For optimal reception, extend the telescopic antenna fully when listening to FM stations. For AM reception, the radio uses an integrated AM antenna, and you may need to rotate the entire unit for best signal.

OPERATING INSTRUCTIONS

Turning On/Off

Locate the power button, typically integrated with the volume knob or a separate button. Turn the radio on by pressing or

rotating this control. To turn off, repeat the action.

Tuning AM/FM Stations

1. **Select Band:** Use the AM/FM band selector switch or button to choose your desired frequency band.
2. **Tune Station:** Rotate the 'TUNING' knob (refer to Image 1) to scan for stations. The digital display will show the current frequency. Stop rotating when you find your desired station.
3. **Adjust Volume:** Use the 'VOLUME' knob on the side of the radio (refer to Image 2) to set the listening level.

Setting the Clock

When the radio is off, the digital display shows the time. To set the clock:

1. Press and hold the 'HR' (Hour) button until the hour digits begin to flash.
2. Press the 'HR' button repeatedly to adjust the hour.
3. Press and hold the 'MN' (Minute) button until the minute digits begin to flash.
4. Press the 'MN' button repeatedly to adjust the minutes.
5. Once the correct time is set, wait a few seconds for the display to stop flashing, or press a confirmation button if available.

Setting the Alarm Function

Your radio includes an alarm function (buzzer). To set the alarm:

1. Ensure the clock is set to the correct time.
2. Locate the alarm set button (often indicated by an alarm clock icon). Press and hold this button until the alarm time digits flash.
3. Use the 'HR' and 'MN' buttons to set the desired alarm time, similar to setting the clock.
4. Once the alarm time is set, wait for the display to stop flashing. An alarm icon should appear on the display, indicating the alarm is active.
5. To deactivate the alarm, press the alarm set button again until the alarm icon disappears from the display.

Using the Auxiliary (AUX) Input

If your radio features a 3.5 mm audio input (as indicated in specifications), you can connect external audio devices:

1. Connect one end of a 3.5 mm audio cable (not included) to the AUX input jack on the radio.
2. Connect the other end of the cable to the headphone jack or audio output of your external device (e.g., smartphone, MP3 player).
3. Select the AUX input mode on the radio, if available (this might be a dedicated button or a mode selection).
4. Play audio from your external device and adjust the volume on both the radio and the external device.

MAINTENANCE

Cleaning

Wipe the radio with a soft, dry cloth. Do not use abrasive cleaners, waxes, or solvents as they may damage the finish. Avoid getting moisture into any openings.

Battery Replacement

When using battery power, replace all batteries with new ones of the same type when the radio's performance diminishes. Ensure correct polarity during replacement. Remove batteries if the radio will not be used for an extended period to prevent leakage.

Storage

Store the radio in a cool, dry place away from direct sunlight and extreme temperatures. If storing for a long time, remove the batteries.

TROUBLESHOOTING

- **No Power:**

- Check if the AC power cord is securely plugged into both the radio and the wall outlet.
- If using batteries, ensure they are inserted correctly and are not depleted. Replace if necessary.

- **Poor Reception:**

- Extend the telescopic antenna fully for FM.
- Rotate the radio for better AM reception.
- Move the radio away from other electronic devices that may cause interference.

- **No Sound:**

- Check the volume level.
- Ensure the radio is not in AUX mode if you are trying to listen to radio stations.

- **Alarm Not Sounding:**

- Verify that the alarm time is set correctly.
- Ensure the alarm function is activated (alarm icon visible on display).

SPECIFICATIONS



Image 4: Dimensions of the radio.

Feature	Description
Brand	moov
Model Number	477205
Manufacturer	Metronic
Product Type	Portable Radio
Supported Radio Bands	AM/FM
Tuning Technology	FM (Digital Display)
Special Features	Integrated AM antenna, Integrated clock, Lightweight, Portable, Digital Display, Alarm Function
Connectivity Technology	Auxiliary (3.5 mm Audio Interface)
Power Source	Battery Powered, AC (220 Volts)
Max Power Output	3 Watts
Display Type	LCD
Product Dimensions (L x W x H)	21.5 x 6.5 x 12.6 cm

Internal Material	Plastic
Recommended Uses	Music, News, Sports Broadcasts

WARRANTY AND SUPPORT

Warranty information and specific support details are typically provided in the physical user manual included with your product. Please refer to that document for comprehensive warranty terms and contact information for customer support.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question