

[Manuals.plus](#) /

› [Salter](#) /

› Salter 1086WHDR Electronic Kitchen Scale User Manual

Salter 1086WHDR

Salter 1086WHDR Electronic Kitchen Scale User Manual

Model: **1086WHDR**

INTRODUCTION

Thank you for choosing the Salter 1086WHDR Electronic Kitchen Scale. This manual provides detailed instructions for the proper setup, operation, maintenance, and troubleshooting of your new kitchen scale. Please read this manual thoroughly before use to ensure accurate measurements and prolong the life of your appliance.



Image: The Salter 1086WHDR Electronic Kitchen Scale, featuring a clear measuring jug atop a white digital base. The display shows '0' and unit buttons are visible.

SETUP

1. **Unpacking:** Carefully remove the scale and all components from the packaging. Retain packaging for future storage or transport.
2. **Battery Installation:** Locate the battery compartment on the underside of the scale base. Open the cover and insert the required batteries (typically AAA or AA, check markings inside the compartment for correct polarity). Close the battery cover securely.
3. **Placement:** Place the scale on a firm, flat, and stable surface. Avoid placing it on soft or uneven surfaces, or near strong electromagnetic fields, as this may affect accuracy.
4. **Initial Use:** Ensure the measuring jug is clean and dry before placing it on the scale base.

OPERATING INSTRUCTIONS

- Power On/Off:** Press the **ON/OFF** button (often marked with a power symbol ) to turn the scale on. The display will show '0' when ready. To turn off, press and hold the **ON/OFF** button for a few seconds, or the scale will automatically shut off after a period of inactivity.
- Unit Conversion:** Press the **UNIT / MODE** button to cycle through available measurement units. The Salter 1086WHDR typically supports:
 - **Weight:** grams (g), kilograms (kg), pounds (lb), ounces (oz)
 - **Volume:** milliliters (ml), fluid ounces (fl.oz), cups, pintsSelect the desired unit before weighing.
- Weighing Procedure:**
 - Place the empty measuring jug onto the scale platform.
 - Press the **TARE / ZERO** button to reset the display to '0'. This subtracts the weight of the jug.
 - Carefully add the ingredients you wish to weigh into the jug. The display will show the net weight/volume of the ingredients.
- Tare Function (Zeroing):** The **TARE / ZERO** function allows you to weigh multiple ingredients consecutively in the same container. After weighing an ingredient, press **TARE / ZERO** to reset the display to '0' before adding the next ingredient.

MAINTENANCE

- **Cleaning:** Wipe the scale surface and jug with a damp cloth. Do not immerse the scale base in water or use abrasive cleaning agents. The measuring jug can be washed with warm soapy water.
- **Storage:** Store the scale in a dry place at room temperature. Avoid extreme temperatures or high humidity.
- **Battery Replacement:** If the display shows 'Lo' or becomes dim, replace the batteries promptly. Remove batteries if the scale will not be used for an extended period to prevent leakage.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Display shows 'Lo' or 'Low Battery'	Batteries are low or depleted.	Replace with new batteries. Ensure correct polarity.
Display shows 'Err' or 'O-Ld'	Scale is overloaded (weight exceeds maximum capacity).	Remove item immediately. Do not exceed the maximum capacity of 1.5 kg (3 lb 5 oz).
Inaccurate readings	Scale not on a flat, stable surface; external vibrations; dirty sensors.	Ensure scale is on a firm, level surface. Avoid vibrations. Clean the scale thoroughly. Re-tare before weighing.

Problem	Possible Cause	Solution
Scale does not turn on	No batteries; incorrect battery installation; faulty batteries.	Check battery installation and polarity. Replace batteries. If problem persists, contact customer support.

SPECIFICATIONS

- **Model:** Salter 1086WHDR
- **Type:** Electronic Kitchen Scale with Measuring Jug
- **Maximum Capacity:** 1.5 kg (3 lb 5 oz)
- **Units:** Grams (g), Kilograms (kg), Pounds (lb), Ounces (oz), Milliliters (ml), Fluid Ounces (fl.oz), Cups, Pints
- **Dimensions:** Approximately 21 x 21 x 19 cm (8.3 x 8.3 x 7.5 inches)
- **Weight:** Approximately 800 g (1.76 lb)
- **Power Source:** Batteries (type specified in battery compartment)

WARRANTY AND SUPPORT

Salter products are manufactured to high standards and are designed for reliability. For specific warranty information, please refer to the warranty card included with your purchase or visit the official Salter website. If you encounter any issues not covered in this manual or require further assistance, please contact Salter customer support through their official website or the contact details provided with your product.

For more information, visit: www.salter.com

© 2023 Salter. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B004NNUP1E>

More documents and user manuals: <https://manuals.plus/>