

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [Calypso](#) /

› [Calypso K5571/1 Digital Watch User Manual](#)

Calypso K5571

Calypso K5571/1 Digital Watch User Manual

Model: K5571/1 | Brand: Calypso

INTRODUCTION

This manual provides detailed instructions for the proper use and care of your Calypso K5571/1 digital watch. Please read this manual thoroughly to ensure optimal performance and longevity of your timepiece. Keep this manual for future reference.

SETUP

1. Initial Time and Date Setting

Your Calypso K5571/1 watch features a digital display. To set the time and date:

1. Press the **MODE** button (usually on the bottom left) repeatedly until the time setting mode is displayed (often indicated by flashing digits).
2. Use the **ADJ** or **SET** button (usually top left or right) to select the digit you wish to change (hours, minutes, year, month, day).
3. Use the **START/STOP** or **LIGHT** button (usually top right or bottom right) to adjust the selected digit up or down.
4. Repeat steps 2 and 3 until the correct time and date are set.
5. Press the **MODE** button again to exit the setting mode.

2. Battery Information

The Calypso K5571/1 watch is powered by a battery. When the display becomes dim or functions become erratic, it indicates a low battery. Battery replacement should be performed by a qualified watch technician to ensure water resistance is maintained.



Figure 1: Calypso K5571/1 Digital Watch. This image shows the watch face and strap, illustrating its design.

OPERATING YOUR WATCH

1. Time Display Modes

Your watch typically displays time in a 12-hour or 24-hour format. Use the **MODE** button to cycle through different display modes such as time, date, alarm, and stopwatch.

2. Stopwatch Function (Chronomètre)

To use the stopwatch:

1. Press the **MODE** button until the stopwatch display appears (usually showing "00:00:00").
2. Press the **START/STOP** button to begin timing.
3. Press **START/STOP** again to pause or stop the timing.
4. Press the **RESET** button (often the **ADJ** or **LIGHT** button in stopwatch mode) to clear the stopwatch to zero.

3. Backlight Function (Eclairage)

To illuminate the display in low-light conditions, press the **LIGHT** button. The backlight will typically stay on for a few seconds.

4. Water Resistance

The Calypso K5571/1 watch is water-resistant up to 100 meters (10 ATM). This means it is suitable for swimming, showering, and snorkeling. It is **not** suitable for scuba diving or high-impact water sports. Do not operate buttons while the watch is submerged in water, as this can compromise the water seal.

MAINTENANCE

1. Cleaning Your Watch

The watch features a polyurethane strap and a mineral glass dial window. To clean your watch:

- Wipe the watch case and strap with a soft, damp cloth.
- For stubborn dirt, use a mild soap solution and rinse thoroughly with clean water.
- Avoid using harsh chemicals, solvents, or abrasive cleaners, as these can damage the watch's finish and materials.
- Ensure the watch is completely dry before wearing it again.

2. Battery Replacement

When the battery needs replacement, it is recommended to take your watch to an authorized Calypso service center or a reputable watch repair shop. This ensures that the correct battery type is used and the water resistance seal is properly re-installed.

3. Water Resistance Care

To maintain the water resistance of your watch:

- Avoid exposing the watch to extreme temperature changes (e.g., hot shower followed by cold water).
- Do not press any buttons while the watch is wet or submerged.
- Have the water resistance seals checked periodically, especially if the watch is frequently exposed to water.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Display is blank or dim.	Low battery.	Replace the battery.
Time is incorrect.	Time not set correctly or accidental adjustment.	Refer to the "Initial Time and Date Setting" section to reset the time.
Buttons are unresponsive.	Watch may be in a locked mode or battery is very low.	Try pressing the MODE button to cycle through modes. If unresponsive, consider battery replacement.
Condensation inside the watch.	Water resistance compromised.	Immediately take the watch to a service center to prevent further damage.

SPECIFICATIONS

Feature	Detail
Model Number	K5571
Display Type	Digital
Movement Type	Quartz
Water Resistance Depth	100 Meters (10 ATM)
Band Material Type	Polyurethane
Case Material Type	Stainless Steel
Dial Window Material Type	Mineral Glass
Case Diameter	38 Millimeters
Band Width	22.1 Millimeters
Case Thickness	13 Millimeters
Item Weight	32 Grams
Special Features	Backlight, Stopwatch
Power Source	Battery Powered



Figure 2: Example Calypso watch packaging. The watch comes in a protective box, which may vary in color.

WARRANTY INFORMATION

Your Calypso K5571/1 watch is covered by a manufacturer's warranty against defects in materials and workmanship. The specific terms and duration of the warranty may vary by region. Please refer to the warranty card included with your purchase or visit the official Calypso website for detailed information.

The warranty typically does not cover:

- Damage resulting from improper use, accidents, or unauthorized repairs.
- Normal wear and tear of the strap, case, or crystal.
- Battery life.

CUSTOMER SUPPORT

If you encounter any issues or have questions regarding your Calypso K5571/1 watch that are not addressed in this manual, please contact Calypso customer support or visit their official website for assistance. You may find contact information on the product packaging or the warranty card.

For more information, you can visit the [Calypso Watches official website](#).