

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

- › [Waring](#) /
- › [Waring WW180 Single Belgian Waffle Maker Instruction Manual](#)

## Waring WW180

# Waring WW180 Single Belgian Waffle Maker

Instruction Manual

Model: WW180 | Brand: Waring

## 1. INTRODUCTION

Thank you for choosing the Waring WW180 Single Belgian Waffle Maker. This commercial-grade appliance is engineered for durability and consistent performance, designed to produce delicious Belgian waffles efficiently. This manual provides essential information for safe and effective operation, maintenance, and care of your new waffle maker.



*Image: The Waring WW180 Single Belgian Waffle Maker in a kitchen setting, showcasing its design and a freshly made waffle.*

## **2. IMPORTANT SAFETY INSTRUCTIONS**

When using electrical appliances, basic safety precautions should always be followed, including the following:

1. Read all instructions thoroughly before operating the appliance.
2. Do not touch hot surfaces. Use handles and knobs.
3. To protect against electrical hazards, do not immerse cord, plugs, or the appliance body in water or other liquids.
4. Close supervision is necessary when any appliance is used by or near children.
5. Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts, and before cleaning the appliance.
6. Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner. Return appliance to the nearest authorized service facility for examination, repair, or adjustment.

7. The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
8. Do not use outdoors.
9. Do not let cord hang over edge of table or counter, or touch hot surfaces.
10. Do not place on or near a hot gas or electric burner, or in a heated oven.
11. Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
12. Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to "off," then remove plug from wall outlet.
13. Do not use appliance for other than intended use.

## 3. SETUP AND INITIAL USE

### 3.1 Unpacking

Carefully unpack the Waring WW180 Waffle Maker. Remove all packaging materials, including any protective films or inserts. Retain the packaging for future storage or transport.

### 3.2 Placement

Place the waffle maker on a stable, flat, heat-resistant surface. Ensure there is adequate clearance around the unit for proper ventilation and safe operation.

### 3.3 Initial Cleaning

Before first use, wipe down the exterior of the unit with a damp cloth. The nonstick plates should be seasoned by lightly coating them with cooking oil. Close the unit and preheat it for approximately 5 minutes. Allow to cool, then wipe off any excess oil. The unit is now ready for use.

## 4. OPERATING INSTRUCTIONS

### 4.1 Preheating

Plug the waffle maker into a 120V AC outlet. Turn the power switch to the 'ON' position. The red 'POWER' indicator light will illuminate. The unit will begin to preheat. The green 'READY' indicator light will illuminate and an audible beep will sound when the unit has reached the optimal baking temperature.

### 4.2 Baking Waffles

1. Once the 'READY' light is on and the unit beeps, open the waffle maker.
2. Pour the desired amount of waffle batter onto the center of the lower waffle plate. The triple-coated nonstick plates ensure easy release.
3. Close the waffle maker.
4. Immediately rotate the unit 180 degrees using the handle. This rotary feature ensures even distribution of batter and consistent browning on both sides of the waffle.
5. The green 'READY' light will turn off during baking. It will re-illuminate and an audible beep will sound when the waffle is fully cooked and ready to serve.
6. Open the waffle maker and carefully remove the cooked waffle using a heat-resistant utensil (e.g., a silicone spatula). Avoid using metal utensils that could damage the nonstick coating.

## 4.3 Adjustable Temperature Control

The waffle maker features an adjustable temperature control dial. This allows you to customize the browning level of your waffles, from light to dark, accommodating various batter types and personal preferences.

## 4.4 Product Demonstration Video

Your browser does not support the video tag.

*Video: A demonstration of the Waring Belgian Waffle Maker, highlighting its features and the process of making waffles, including the rotary function and indicator lights.*



*Image: A chef pouring waffle batter into the Waring WW180 Waffle Maker, demonstrating the ease of use.*

## 5. MAINTENANCE AND CLEANING

Proper maintenance and cleaning will extend the life of your Waring WW180 Waffle Maker.

### 5.1 Cleaning the Waffle Plates

The triple-coated nonstick plates are designed for easy cleanup. After each use, allow the unit to cool completely. Use a soft, damp cloth or sponge to wipe down the plates. For stubborn residue, a small amount of mild dish soap can be used, but ensure all soap is rinsed off. Do not use abrasive cleaners or scouring pads, as these can damage the nonstick coating.

### 5.2 Cleaning the Drip Tray

The removable drip tray is dishwasher-safe, making cleanup quick and easy. Remove the tray after each use and wash it with warm, soapy water or place it in the dishwasher. Ensure it is completely dry before reinserting.

### 5.3 Cleaning the Exterior

Wipe the exterior die-cast housing with a clean, damp cloth. Do not use abrasive cleaners or immerse the unit in water.

## 6. TROUBLESHOOTING

If you encounter issues with your waffle maker, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Waffles sticking to plates	Plates not properly seasoned or insufficient oil/butter in batter.	Re-season plates as per initial setup instructions. Ensure batter contains adequate fat or lightly brush plates with oil before each waffle.
Waffles not browning evenly	Insufficient rotation during baking or uneven batter distribution.	Ensure the unit is rotated 180 degrees immediately after closing. Distribute batter evenly across the plate. Check temperature setting.
Unit not heating up	Not plugged in, power switch off, or circuit breaker tripped.	Check power connection. Ensure power switch is ON. Reset circuit breaker if necessary. If problem persists, contact customer support.
Waffles are too soft or too crispy	Temperature setting is incorrect.	Adjust the temperature control dial to a lower setting for softer waffles or a higher setting for crispier waffles.

## 7. SPECIFICATIONS

- **Model:** WW180
- **Brand:** Waring Commercial
- **Product Dimensions:** 20"D x 10.25"W x 9.25"H
- **Item Weight:** 13.6 Pounds
- **Wattage:** 1200 watts
- **Voltage:** 120 Volts
- **Material:** Nonstick Coating (Plates), Heavy-duty Die-cast Housing
- **Color:** Silver
- **Special Feature:** Temperature Control, Rotary Feature
- **Capacity:** Produces up to 35 1-1/4-inch thick waffles per hour
- **Certifications:** cULus, NSF approved

## 8. WARRANTY AND SUPPORT

### 8.1 Limited Warranty

The Waring WW180 Single Belgian Waffle Maker comes with a **1-year limited warranty** from the date of purchase. This warranty covers defects in materials and workmanship under normal use. Please retain your proof of purchase for warranty claims.

### 8.2 Customer Support

For technical assistance, warranty service, or to order replacement parts, please refer to the official Waring Commercial website or contact their customer service department. You can also find the full user manual in PDF

format for more detailed information: [Download User Manual \(PDF\)](#).

© 2023 Waring Commercial. All rights reserved.

This manual is for informational purposes only. Always refer to the official product documentation for the most accurate and up-to-date information.