

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Technoline](#) /

› [Technoline WS 9136-IT Weather Station User Manual](#)

Technoline WS 9136

Technoline WS 9136-IT Weather Station User Manual

INTRODUCTION

This manual provides detailed instructions for the setup, operation, maintenance, and troubleshooting of your Technoline WS 9136-IT Weather Station. Please read this manual thoroughly before using the device to ensure proper functionality and longevity.

PRODUCT OVERVIEW

The Technoline WS 9136-IT is a versatile weather station designed to provide accurate indoor and outdoor temperature readings, along with weather forecasts and a radio-controlled clock. It features a clear display and user-friendly controls.



This image shows the Technoline WS 9136-IT Weather Station. The display features the current time (12:34), a DCF signal indicator, a weather forecast icon (partly cloudy), indoor temperature (23.5°C) with max/min values (25°C/18°C), and outdoor temperature (10.3°C) with max/min values (17°C/6°C). Buttons for 'SET', 'ALARM', 'MIN/MAX', and 'RESET' are visible below the display.

Key Features:

- DCF-77 Radio-Controlled Clock with manual setting option
- Indoor and Outdoor Temperature Display
- Min/Max Temperature Memory
- Weather Forecast and Trend Display
- Alarm with Snooze Function
- Battery Charge Level Indicator
- Wall-Mount or Tabletop Use
- Includes Wireless Outdoor Sensor

SETUP

1. Battery Installation:

1. Open the battery compartment on the back of the main unit and the outdoor sensor.
2. Insert the required batteries (typically AA or AAA, refer to the device markings) ensuring correct polarity (+/-).
3. Close the battery compartments securely.

2. Sensor Placement:

- Place the outdoor sensor in a shaded, dry location, protected from direct sunlight and rain, to ensure accurate temperature readings.
- Ensure the sensor is within the effective transmission range (868 MHz) of the main unit, typically up to 30 meters in open air. Walls and obstacles may reduce this range.

3. Initial Synchronization:

- After battery installation, the main unit will automatically begin searching for the DCF-77 radio signal for time synchronization and the outdoor sensor signal.
- This process may take several minutes. Ensure the unit is placed away from potential interference sources like electronic devices.
- Once synchronized, the time and outdoor temperature will appear on the display.

OPERATION

1. Time Setting:

- **Automatic:** The clock automatically synchronizes with the DCF-77 signal. A signal icon will indicate successful reception.
- **Manual:** If the DCF signal is unavailable, you can manually set the time using the 'SET' button. Press and hold 'SET' to enter time setting mode, then use other buttons (e.g., 'ALARM' or 'MIN/MAX') to adjust values and 'SET' to confirm.

2. Temperature Display:

- The display shows current indoor and outdoor temperatures.
- Press the 'MIN/MAX' button to view the recorded minimum and maximum temperatures for both indoor and outdoor environments. Press again to cycle through current, minimum, and maximum values.
- To reset the Min/Max memory, press and hold the 'MIN/MAX' button while the minimum or maximum values are displayed.

3. Weather Forecast:

- The weather station predicts weather conditions for the next 12-24 hours based on atmospheric pressure changes.
- Icons such as sunny, partly cloudy, cloudy, or rainy will be displayed. Note that these are forecasts and may not always perfectly match current conditions.

4. Alarm Function:

- Press the 'ALARM' button to view the alarm time.
- Press and hold 'ALARM' to enter alarm setting mode. Use other buttons to adjust the hour and minute, and 'ALARM' to confirm.
- To activate/deactivate the alarm, press the 'ALARM' button briefly when the alarm time is displayed.

- An alarm icon will appear when active.
- When the alarm sounds, press any button (except 'RESET') to activate the snooze function. The alarm will sound again after approximately 5 minutes. Press 'RESET' to turn off the alarm completely.

Maintenance

1. Battery Replacement:

- When the battery indicator appears on the display, replace the batteries in both the main unit and the outdoor sensor promptly.
- Always replace all batteries at the same time with new ones of the same type.

2. Cleaning:

- Clean the unit and sensor with a soft, damp cloth. Do not use abrasive cleaners or solvents.
- Ensure no water enters the battery compartments or other openings.

Troubleshooting

Common Issues and Solutions:

- No outdoor temperature display:**

Solution: Check batteries in the outdoor sensor. Ensure the sensor is within range and not blocked by thick walls or interference. Try re-synchronizing by removing and reinserting batteries in both units.

- Time not synchronizing (DCF-77):**

Solution: Ensure the unit is placed in an area with good radio signal reception, away from electronic devices. The synchronization process can take several minutes, especially during initial setup or after battery replacement. Manual time setting is an alternative.

- Inaccurate temperature readings:**

Solution: For outdoor sensor, ensure it is not in direct sunlight or exposed to heat sources. For indoor unit, ensure it is not near windows, heating vents, or direct sunlight.

- Display is dim or blank:**

Solution: Replace batteries in the main unit.

Specifications

- Model Number:** WS 9136
- Dimensions (L x W x H):** 12.4 x 2.9 x 13 cm
- Weight:** 158 grams
- Power Source:** Battery-powered
- Connectivity Technology:** 868 MHz (for outdoor sensor)
- Material:** Plastic
- Color:** Transparent/Silver

Warranty and Support

The Technoline WS 9136-IT Weather Station comes with a **2-year warranty** from the date of purchase.

Please retain your proof of purchase for warranty claims.

For technical support or further assistance, please refer to the manufacturer's official website or contact their customer service department. Contact information can typically be found on the product packaging or the manufacturer's website.