

[Manuals.plus](#) /

› [Garden Pleasure](#) /

› Garden Pleasure Baltimore Foldable Oiled Balcony Table User Manual

Garden Pleasure 985041

Garden Pleasure Baltimore Foldable Oiled Balcony Table User Manual

Model: 985041

1. INTRODUCTION

This manual provides comprehensive instructions for the Garden Pleasure Baltimore Foldable Oiled Balcony Table, model 985041. Please read this manual carefully before assembly and use to ensure safe and optimal performance. This table is designed for outdoor use, offering a space-saving solution for balconies and small patios.

2. SAFETY INSTRUCTIONS

- Always assemble and unfold the table on a flat, stable surface to prevent tipping.
- Keep small parts away from children during assembly (if applicable).
- Do not overload the table. Refer to specifications for weight capacity.
- Ensure all locking mechanisms are fully engaged and secure before placing items on the table or using it.
- Regularly inspect the table for loose screws, damaged parts, or signs of wear. Do not use if damaged.
- Avoid placing hot items directly on the table surface without protection.

3. PACKAGE CONTENTS

Please verify that all items listed below are present in your package:

- Baltimore Foldable Balcony Table (1 unit)
- User Manual (this document)



Figure 3.1: The Garden Pleasure Baltimore Foldable Oiled Balcony Table in its unfolded, ready-to-use state.

4. SETUP

The Baltimore Balcony Table is designed for easy setup due to its foldable nature. Minimal assembly is required.

1. **Unpack:** Carefully remove all packaging materials and place the table on a clean, flat, and stable surface.
2. **Unfold Legs:** Gently pull the table legs outwards from the folded position. Ensure they extend fully and lock into their upright position.
3. **Unfold Tabletop:** Extend the two halves of the tabletop outwards until they meet in the middle and lie flat. Ensure any central locking mechanisms or supports are engaged to secure the tabletop.
4. **Verify Stability:** Before use, gently push down on the tabletop and rock the table slightly to ensure it is stable and all components are securely locked.



Figure 4.1: The table in a partially unfolded state, showing the leg and tabletop mechanism.

5. OPERATING INSTRUCTIONS

This section details how to effectively use and fold your balcony table.

5.1. Unfolding the Table

Follow the steps outlined in the 'Setup' section (Section 4) to unfold the table from its compact storage position to its full operational size. Always ensure the table is stable before use.

5.2. Folding the Table for Storage

1. **Clear Table:** Remove all items from the tabletop.
2. **Release Tabletop:** If there are any central locking mechanisms for the tabletop halves, release them. Gently fold the two tabletop sections inwards towards the center.
3. **Collapse Legs:** Carefully collapse the table legs inwards towards the central support structure. Ensure fingers are clear of pinch points.
4. **Secure:** Once fully folded, the table will stand upright in a compact form, ready for storage.



Figure 5.1: The table in its fully folded, space-saving configuration.

6. MAINTENANCE

Proper maintenance will extend the life and appearance of your balcony table.

- **Cleaning:** Clean the table surface with a soft, damp cloth. For stubborn dirt, use a mild soap solution and wipe dry immediately. Avoid abrasive cleaners, harsh chemicals, or scouring pads.
- **Oiling:** As an oiled wood product, it is recommended to re-oil the table periodically (e.g., annually or as needed, depending on exposure to elements) to maintain its finish, protect against moisture, and prevent fading. Use a suitable outdoor wood oil. Follow the oil manufacturer's instructions.
- **Storage:** When not in use, especially during prolonged periods of rain, snow, or extreme temperatures, store the table in a dry, sheltered location (e.g., shed, garage) to protect the wood.
- **Hardware Check:** Periodically check all screws, bolts, and hinges. Tighten any loose fasteners to ensure the table remains stable and secure.

7. TROUBLESHOOTING

This section addresses common issues you might encounter with your balcony table.

Problem	Possible Cause	Solution
Table is wobbly.	Legs not fully extended/locked; uneven ground; loose fasteners.	Ensure all legs are fully extended and locking mechanisms are engaged. Move table to a flat surface. Tighten all screws and bolts.
Folding mechanism is stiff.	Dirt/debris in hinges; lack of lubrication.	Clean hinges thoroughly. Apply a small amount of silicone spray or suitable lubricant to the hinge points. Do not force the mechanism.
Wood appears dry or faded.	Exposure to sun/weather; needs re-oiling.	Apply a fresh coat of suitable outdoor wood oil as per maintenance instructions (Section 6).

8. SPECIFICATIONS

Detailed technical specifications for the Garden Pleasure Baltimore Balcony Table:

Attribute	Value
Brand	Garden Pleasure
Model Number	985041
Color	Brown
Material	Wood
Dimensions (L x W x H, unfolded)	80 x 90 x 74 cm
Weight	105 Kilograms
Features	Space-saving, Foldable
Style	Modern

Attribute	Value
Frame Material	Wood
Top Material Type	Wood
Shape (unfolded)	Oval/Rectangular

9. WARRANTY AND SUPPORT

This Garden Pleasure product comes with a standard manufacturer's warranty against defects in materials and workmanship. The specific terms and duration of the warranty may vary by region and retailer. For warranty claims, technical support, or inquiries regarding spare parts, please contact your original retailer or the manufacturer directly. Please retain your proof of purchase for any warranty-related requests.

For further assistance, please visit the official Garden Pleasure website or consult your local dealer.

© 2024 Garden Pleasure. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question