#### Manuals+

Q & A | Deep Search | Upload

#### manuals.plus /

- VTech /
- > VTech CS6114 DECT 6.0 Cordless Phone User Manual

#### VTech CS6114

# VTech CS6114 DECT 6.0 Cordless Phone User Manual

Model: CS6114 | Brand: VTech

### INTRODUCTION

This user manual provides comprehensive instructions for the setup, operation, and maintenance of your VTech CS6114 DECT 6.0 Cordless Phone. Please read this manual thoroughly before using your new phone to ensure proper functionality and to take full advantage of its features.

## WHAT'S IN THE BOX

Verify that your package contains the following items:

- VTech CS6114 DECT 6.0 Cordless Phone Handset
- · Cordless Phone Base Unit
- · Lithium Battery for Handset
- Phone Line Cord
- · Power Adapter for Base Unit
- · Owner's Manual (this document)





Image: VTech CS6114 Cordless Phone Handset and Base Unit.

# SETUP

- 1. Plug the small end of the power adapter into the power jack on the back of the telephone base.
- 2. Plug the large end of the power adapter into a wall outlet not controlled by a wall switch.
- 3. Plug one end of the telephone line cord into the telephone jack on the back of the telephone base.
- 4. Plug the other end of the telephone line cord into a telephone wall jack.

## 2. Installing the Handset Battery

- 1. Open the battery compartment cover on the back of the handset.
- 2. Connect the battery pack plug securely into the jack inside the battery compartment.
- 3. Place the battery pack with the label UP and tuck the wires neatly inside the battery compartment.
- 4. Close the battery compartment cover.
- 5. Place the handset in the telephone base to charge. The battery icon will animate to indicate charging. Allow at least 16 hours for the battery to fully charge before initial use.





Image: Front view of the VTech CS6114 Cordless Phone handset and base unit, illustrating the compact design.

### **OPERATING INSTRUCTIONS**

## Making a Call

- Press **TALK** or any dialing key to get a dial tone.
- Enter the phone number.
- Press **OFF** or place the handset in the telephone base to end the call.

## **Answering a Call**

- When the phone rings, press TALK or any dialing key.
- Press **OFF** or place the handset in the telephone base to end the call.

#### **Caller ID**

The phone displays the caller's name and number (if available) before you answer the call. The handset stores up to 30 caller ID entries.



Image: Close-up of the VTech CS6114 handset, highlighting the backlit LCD screen and large, easy-to-read buttons for improved visibility.

## **Phonebook Directory**

The phonebook can store up to 30 names and numbers. You can easily add, edit, or delete entries.



Image: The VTech CS6114 handset and base unit, with an overlay illustrating the 30-name and number phonebook directory feature.

## **Handset Paging**

If you misplace the handset, press the **FIND HANDSET** button on the telephone base. The handset will ring for a short period, allowing you to locate it.



Image: Illustration of the handset paging feature, showing the base unit button and the handset displaying "\*\*Paging\*\*".

### **Volume Control**

Adjust the earpiece volume during a call using the VOL- and VOL+ buttons on the handset.



Image: Close-up of the VTech CS6114 handset, highlighting the volume control buttons (VOL- and VOL+) for adjusting call audio.

### MAINTENANCE

- Clean the phone with a soft, damp cloth. Do not use cleaning sprays or harsh chemicals.
- Avoid placing the phone in direct sunlight or in areas with extreme temperatures.
- · Keep the phone away from moisture and water.

### **TROUBLESHOOTING**

#### **No Dial Tone**

- Ensure the telephone line cord is securely plugged into both the telephone base and the wall jack.
- Check if the power adapter is properly connected to the base unit and a working electrical outlet.

## **Handset Not Charging**

- Make sure the handset is placed correctly in the telephone base.
- · Verify that the battery pack is properly connected inside the handset's battery compartment.
- Clean the charging contacts on both the handset and the base with a dry cloth.

### **Poor Sound Quality**

- Move the handset closer to the telephone base.
- Avoid using the phone near other electrical appliances or metal objects that may cause interference.
- Ensure the telephone line cord is not tangled or damaged.

### **S**PECIFICATIONS

Feature	Detail
Product Dimensions	5.1 x 7.7 x 3.7 inches
Item Weight	12 ounces
Model Number	CS6114
Battery Type	1 Lithium Ion (included)
Telephone Type	Cordless
Caller ID/Call Waiting	Yes
Phonebook Capacity	30 Name/Number Entries

## WARRANTY AND SUPPORT

For warranty information and technical support, please refer to the official VTech website or the full user manual. A digital copy of the owner's manual is available for download:

Download Full User Manual (PDF)

VTech offers customer support to assist with any questions or issues you may encounter. Please have your model number (CS6114) ready when contacting support.

© 2024 VTech. All rights reserved.

### **Related Documents - CS6114**

