

[Manuals.plus](#) /

› [Epson](#) /

› Epson ES1000 Ultra Portable Tabletop Projection Screen User Manual

Epson ES1000

Epson ES1000 Ultra Portable Tabletop Projection Screen User Manual

Model: ES1000

PRODUCT OVERVIEW

The Epson ES1000 Ultra Portable Tabletop Projection Screen is designed for mobile professionals requiring a quick and easy setup for presentations. Its lightweight and compact design makes it an ideal companion for on-the-go use, accommodating up to a 50-inch diagonal image.



Image: The Epson ES1000 projection screen set up on a tabletop, displaying a vibrant bar chart with an upward trend, indicating its use for business presentations.

This screen features a unique one-piece design that allows for rapid deployment and storage, making it highly convenient for various presentation environments.

SETUP INSTRUCTIONS

Setting up the Epson ES1000 screen is designed to be fast and straightforward, typically taking less than 30 seconds.

1. **Unpack the Screen:** The ES1000 forms its own carrying case when closed. Place the case on a stable, flat surface, such as a tabletop.
2. **Extend the Feet:** Locate the integrated feet at the base of the screen unit. Gently extend these feet outwards to provide a stable base for the screen.
3. **Raise the Screen:** Grasp the top handle or sides of the screen unit. Carefully pull the screen upwards from its base. The screen will extend vertically and lock into place, revealing the projection surface.
4. **Adjust for Viewing:** Ensure the screen is fully extended and stable. The screen can accommodate images up to 50 inches diagonally. Position your projector appropriately to fill the screen area.

Your browser does not support the video tag.

Video: A demonstration of the quick and easy setup process for the Epson ES1000 Ultra Portable Tabletop Projection Screen, highlighting its portability and simple deployment.

OPERATING THE SCREEN

The ES1000 screen is designed for simplicity in operation. Once set up, it provides a stable and bright surface for your projected content.

- **Image Size:** The screen supports a diagonal image size of up to 50 inches. Adjust your projector's distance and zoom to fit the image within the screen's boundaries.
- **Aspect Ratios:** While optimized for standard (4:3) aspect ratios, the screen can also accommodate widescreen (16:9) content, though some black bars may appear on the sides or top/bottom depending on the content and projector settings.
- **Optimal Viewing:** For the best image quality, ensure the room lighting is controlled to minimize ambient light hitting the screen surface.

MAINTENANCE AND CARE

Proper care will ensure the longevity and optimal performance of your Epson ES1000 projection screen.

- **Cleaning the Screen Surface:** Use a soft, lint-free cloth and a mild, non-abrasive cleaning solution (e.g., diluted mild soap or screen cleaner) to gently wipe the screen surface. Avoid harsh chemicals or abrasive materials that could damage the screen. Always apply cleaner to the cloth, not directly to the screen.
- **Cleaning the Casing:** The black casing can be wiped clean with a damp cloth.
- **Storage:** When not in use, retract the screen fully into its case. Store the screen in a dry, cool place, away from direct sunlight and extreme temperatures. The compact design allows it to be stored easily, even fitting in airplane overhead compartments.
- **Handling:** Always handle the screen by its casing. Avoid touching the screen surface directly with your fingers to prevent smudges or damage.



Image: The Epson ES1000 projection screen in its closed, portable form, demonstrating its compact size and integrated carrying handle for easy transport.

TROUBLESHOOTING

If you encounter issues with your Epson ES1000 projection screen, consider the following common solutions:

- **Screen Not Extending/Retracting Smoothly:**

Ensure there are no obstructions in the path of the screen. Check that the feet are fully extended and the unit is on a level surface. Do not force the screen; if resistance is met, gently retract and try again.

- **Image Appears Distorted or Uneven:**

Verify that the screen is fully extended and locked into position. Adjust your projector's keystone correction and focus settings. Ensure the projector is placed directly in front of the screen and at an appropriate height.

- **Dust or Smudges on Screen:**

Refer to the "Cleaning the Screen Surface" instructions in the Maintenance section. Use only recommended cleaning methods to avoid damage.

SPECIFICATIONS

Feature	Detail
Model Number	ES1000
Product Dimensions (Closed)	45.35 x 2.44 x 34.49 inches (W x D x H)
Item Weight	6.5 pounds
Visible Screen Diagonal	Up to 50 inches / 127 cm

Feature	Detail
Mounting Type	Freestanding (Tabletop)
Screen Surface Description	Matte White
Design	One-piece, self-casing design
Portability	Fits in airplane overhead compartment

Note: All specifications are approximate and subject to change without notice.

WARRANTY AND SUPPORT

For detailed warranty information and technical support, please refer to the official Epson website or contact Epson customer service directly. Keep your purchase receipt as proof of purchase for warranty claims.

You can find more information and support resources at the official Epson websitewww.epson.com