

Tascam DR-05V2

TASCAM DR-05 Portable Digital Recorder (Version 2) - Instruction Manual

Model: DR-05V2 | Brand: Tascam

1. INTRODUCTION

The TASCAM DR-05 brings high-quality stereo recording to an easy-to-use portable powerhouse. It records in MP3 or WAV format, including 96kHz/24-bit high-resolution audio, to microSD or microSDHC media. Featuring a pair of all-new microphones capable of handling up to 125dB SPL with sensitivity to capture every detail, the DR-05 also includes new recording features like Peak Reduction and Quick Menu for album-quality recording in the palm of your hand.





Figure 1: Front view of the TASCAM DR-05 Portable Digital Recorder.

2. WHAT'S IN THE BOX

Your TASCAM DR-05 package should include the following items:

- Portable Digital Recorder (TASCAM DR-05)
- Playback EQ Setting
- Chromatic Tuner
- 2 AA Batteries (included)
- USB Power or Optional AC Adapter (Tascam PS-P515U, sold separately)
- MicroSD 4GB Card

3. SETUP

3.1. Installing Batteries

The DR-05 operates on two AA batteries. To install, open the battery compartment cover on the rear of the unit and insert the batteries according to the polarity indicators (+/-). Ensure the cover clicks securely into place.



Figure 2: Rear view showing battery compartment and tripod socket.

3.2. Inserting MicroSD Card

Locate the microSD card slot on the side of the unit. Gently push the microSD card into the slot until it clicks and is securely seated. To remove, push the card in again until it springs out.



Figure 3: Side view showing USB port and microSD card slot.

4. OPERATING INSTRUCTIONS

4.1. Power On/Off

To power on the unit, press and hold the **/I HOME** button until the display lights up. To power off, press and hold the same button until the display turns off.



Figure 4: Angled view highlighting the front control panel.

4.2. Recording Audio

To begin recording, press the **RECORD** button once to enter record standby mode. The REC indicator will blink. Press **RECORD** again to start recording. The REC indicator will light continuously. To stop recording, press the **STOP** button.

The DR-05 features built-in omni-directional microphones. You can also connect an external microphone or line-level source via the 1/8" stereo mic/line input, which supports plug-in power.



Figure 5: Top view of the DR-05 with built-in microphones and MIC/EXT IN port.

The Peak Reduction function, optimized for music recording, automatically sets the gain of while recording. Limiter and low-cut filter features help prevent distortion.

4.3. Playback

To play back a recorded file, navigate to the desired file using the directional buttons and press the **PLAY** button. Press **STOP** to halt playback.

The DR-05 offers Variable Speed Playback (50%-150%) without changing the pitch, useful for transcribing. It also supports Loop and Repeat Playback. The Level Align feature prevents uneven volume levels during playback.



Figure 6: Side view showing the headphone/line out port and HOLD switch.

4.4. Menu Navigation

Press the **MENU** button to access the main menu. Use the directional buttons (**↑**, **↓**, **left**, **right**) to navigate through options and the **PLAY** button to confirm selections.

Within the menu, you can adjust various settings including recording format (WAV/MP3), sample rate (up to 96kHz/24-bit), and microphone power for external mics. The unit also includes a built-in Chromatic Tuner.

5. MAINTENANCE

To ensure the longevity and optimal performance of your TASCAM DR-05, follow these maintenance guidelines:

- **Cleaning:** Use a soft, dry cloth to clean the unit. Avoid using liquid cleaners or aerosols.
- **Storage:** Store the recorder in a cool, dry place away from direct sunlight and extreme temperatures.
- **Battery Care:** Remove batteries if the unit will not be used for an extended period to prevent leakage.
- **Microphone Protection:** When not in use, consider using a microphone cover or storing the unit in a protective case to prevent dust and debris from entering the microphone capsules.

6. TROUBLESHOOTING

If you encounter issues with your TASCAM DR-05, refer to the common problems and solutions below:

- **No Power:**
 - Ensure batteries are correctly inserted with proper polarity.
 - Replace old batteries with new ones.
 - Check if the unit is connected to a USB power source (if applicable).
- **No Recording/Playback:**

- Verify that a microSD card is inserted and has sufficient free space.
- Check the recording level settings to ensure they are not too low.
- Ensure the HOLD switch on the side of the unit is not engaged, as this locks all buttons.

- **Distorted Audio:**

- Reduce the recording level to prevent clipping.
- Enable the Limiter or Peak Reduction function in the recording settings.
- Check for external noise sources in the recording environment.

- **Microphone Noise:**

- Ensure the low-cut filter is enabled if recording in windy or noisy environments.
- Use an external windscreen (sold separately) for outdoor recording.

7. SPECIFICATIONS

Feature	Specification
Item Weight	15.2 ounces
Product Dimensions	5.55 x 2.4 x 1.02 inches (1"D x 2.38"W x 5.56"H)
Item Model Number	DR-05V2
Batteries	2 AA batteries required (included)
Memory Storage Capacity	32 GB (microSD/microSDHC)
Hardware Interface	MicroSD, USB, SDHC, USB 2.0
Media Format	MP3 Audio, WAV (up to 96kHz/24-bit)
Microphone Form Factor	Built-In Omni-directional
Headphones Jack	2.5 millimeters (also 1/8" stereo mic/line input)

8. WARRANTY AND SUPPORT

For detailed warranty information and customer support, please refer to the official Tascam website or the user manual provided with your product. You can also download the User Manual (PDF) directly from the manufacturer's website for comprehensive details.

Legal Disclaimer: Merchandise is insured at seller cost with extended company warranty. Exceptional Rebate for returning customer. Just tell us your last purchase information such as confirmation number and date of purchase to receive tax exemption after 30 days of purchase date.

Official User Manual (PDF): [Download Here](#)

