

## Logitech 915-000159

# Logitech Harmony 650 Universal Remote Control User Manual

Model: 915-000159

## PRODUCT OVERVIEW

The Logitech Harmony 650 is a universal remote control designed to simplify your home entertainment system. It features a color screen and one-click activity buttons, allowing for quick and easy control of multiple devices.

### Key Features:

- Replaces up to 5 other remotes, reducing complexity and clutter in your living room.
- Supports over 5000 brands, ensuring compatibility with current and future devices.
- Features a bright color screen displaying favorite-channel icons and commands for intuitive navigation.
- One-click activity buttons, such as "Watch a DVD," automatically configure the correct devices to their appropriate settings.







Figure 1: Front view of the Logitech Harmony 650 Universal Remote Control, showcasing its color screen and button layout.

## SETUP AND CONFIGURATION

The Harmony 650 requires initial setup using a personal computer to program your devices and activities.

### System Requirements for Setup:

- Operating System: Windows XP, Windows Vista, Windows 7, or Windows 8; Mac OS X 10.6 or later.
- Connectivity: USB port (Type A port or adapter) for connecting the remote to your computer.
- Internet Access: Required for downloading software and device profiles.

### Initial Setup Steps:

1. **Install Harmony Software:** Download and install the Logitech Harmony software from the official Logitech website onto your computer.
2. **Connect Remote:** Use the provided USB micro cable to connect your Harmony 650 remote to your computer.
3. **Follow On-Screen Prompts:** The software will guide you through adding your home entertainment devices (TV, DVD/Blu-ray player, audio receiver, etc.) and creating activities (e.g., "Watch TV," "Watch a DVD").
4. **Sync Remote:** Once configuration is complete, sync the settings to your Harmony 650 remote.

For detailed setup instructions, refer to the official user manual available online or contact Logitech customer support.

## OPERATING YOUR HARMONY 650

---

The Harmony 650 is designed for intuitive control of your entertainment system through activities and device commands.

### Activities:

Activities simplify control by turning on and setting up multiple devices with a single button press. For example, selecting "Watch a DVD" will power on your TV, DVD player, and audio receiver, and switch them to the correct inputs.

- **Accessing Activities:** Use the dedicated activity buttons (e.g., "Watch TV," "Watch a Movie," "Listen to Music") or navigate through the "Activities" menu on the color screen.
- **Customizing Activities:** Activities can be customized during the setup process to include specific devices and settings.

### Device Control:

While activities are recommended for daily use, you can also control individual devices directly.

- **Switching Devices:** Select "Devices" on the color screen to choose which device you want to control directly.
- **Common Buttons:** The remote features standard buttons for volume, channel, playback (play, pause, stop, fast forward, rewind), and number pad input.
- **Color Screen Commands:** The color screen displays context-sensitive commands for the currently selected activity or device, allowing access to advanced functions.

### Power Management:

- **All Off Button:** Press the "All Off" button to power down all devices associated with the current activity.

## MAINTENANCE

---

### Battery Replacement:

The Harmony 650 uses 1 Lithium Polymer battery (included). When the battery level is low, a notification will appear on the remote's screen. To replace the battery, open the battery compartment on the back of the remote and insert a new battery of the specified type, ensuring correct polarity.

### Cleaning:

To clean the remote, use a soft, dry cloth. Avoid using abrasive cleaners or solvents, as these may damage the remote's finish or internal components.

## TROUBLESHOOTING

---

If you encounter issues with your Harmony 650, consider the following common solutions:

- **Remote Not Responding:** Check the battery level. If low, replace the battery.
- **Device Not Responding:** Ensure the remote is pointed directly at the device. Verify that the correct activity or device is selected on the remote's screen. Check if the device itself is powered on and functioning correctly with its original remote.
- **Activity Issues:** If an activity is not performing as expected, connect the remote to your computer and review the activity settings in the Harmony software. Ensure all devices are correctly added and their inputs are properly configured.
- **Software Connection Problems:** If the remote does not connect to your computer, try a different USB port or cable. Restart your computer and the Harmony software.

For more comprehensive troubleshooting guides and support, visit the official Logitech Harmony support website or consult the full user manual.

## TECHNICAL SPECIFICATIONS

Product Dimensions	10.79 x 1.61 x 5.75 inches
Item Weight	6.7 ounces
Manufacturer	Logitech
Model Number	915-000159
Batteries	1 Lithium Polymer battery (included)
Max Number of Supported Devices	5
Compatible Devices	DVD/Blu-ray Player (and other home entertainment devices configurable via software)
Special Feature	Digital Display (Color Screen)
Color	Silver
Language	English

## WARRANTY AND SUPPORT

 
For information regarding product warranty, please refer to the documentation included with your purchase or visit the official Logitech support website.

 
Live customer support is available for assistance with setup and troubleshooting.

A comprehensive User Manual in PDF format can be found at: [Logitech Harmony 650 User Manual \(PDF\)](#)



## Documents - Logitech – 915-000159

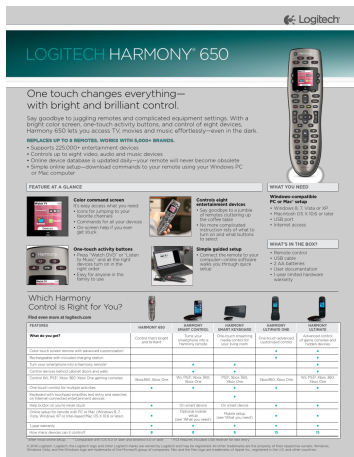

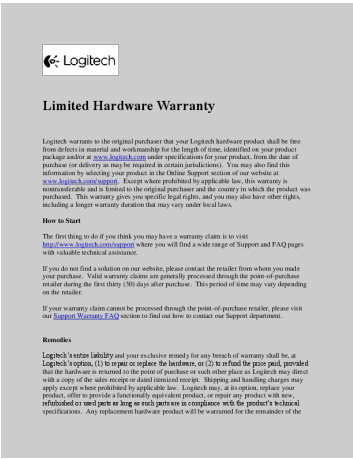


[pdf] Frequently Asked Questions Specifications Documentation Warranty

Logitech Harmony 650 Infrared All in One Remote Control Universal Programmable Silver 915 000159

Product Documentation 81vXIPoegPS m media amazon images I |||

Limited Hardware Warranty Logitech warrants to the original purchaser that your Logitech hardware product shall be free from defects in material and workmanship for the length of time, identified on your product package and/or at [www.logitech.com](http://www.logitech.com) under specifications for your product, from the date ...

 lang:en score:20 filesize: 278.14 K page\_count: 3 document date: 2015-03-28

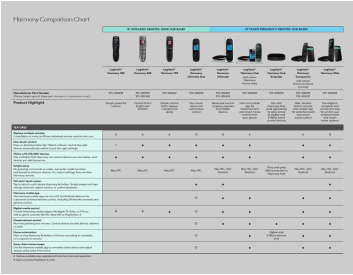

[pdf]

Harmony Comparison Chart RF RADIO FREQUENCY REMOTES HUB BASED Logitech® 350 650 700

Ultimate One 154441 harmony comparison img bbystatic BestBuy US store ee 2016 tvv misc

Harmony Comparison Chart IR INFRARED REMOTES: NONE HUB-BASED RF RADIO FREQUENCY REMOTES: HUB-BASED Logitech Harmony 350 Logitech Harmony 650 Manufacturer Part Number Please target against these part numbers in Syndication chart Product Highlight 915-000230 Simply powerful control 915-00...

lang:en score:20 filesize: 360.92 K page\_count: 1 document date: 2016-04-29