Manuals+

Q & A | Deep Search | Upload

manuals.plus /

- , **HT** /
- > HT Optimax Spinning Fishing Reel with line Black #OPT-101 User Manual

HT OPT-101

HT Optimax Spinning Fishing Reel - Model #OPT-101

User Instruction Manual

PRODUCT OVERVIEW

The HT Optimax Spinning Fishing Reel, model #OPT-101, is engineered for reliable performance and ease of use. Its lightweight and graphite-reinforced construction ensures durability without adding unnecessary weight, making it comfortable for extended fishing sessions. This reel is equipped with a smooth bail roller and an adjustable front drag system, providing precise control during retrieves and when fighting fish.



A black and gold HT Optimax spinning fishing reel, viewed from an angle showing the handle, spool, and bail.

Key Features:

- Lightweight Graphite Construction: Enhances comfort and reduces fatigue during use.
- Graphite Reinforced Body: Provides increased durability and strength.

- Bail Roller: Ensures smooth line retrieval and prevents line twist.
- Front Drag System: Offers precise and easily adjustable drag settings for various fishing conditions.
- Ambidextrous Hand Orientation: Handle can be configured for left or right-hand retrieve.
- Pre-spooled with Line: Ready for immediate use upon setup.

SETUP GUIDE

1. Unpacking

Carefully remove the HT Optimax reel from its packaging. Inspect the reel for any visible damage that may have occurred during shipping. Ensure all components, including the handle, are present.

2. Attaching to Fishing Rod

- 1. Locate the reel seat on your fishing rod.
- 2. Align the reel foot of the HT Optimax reel with the reel seat.
- 3. Tighten the locking nut(s) on the reel seat until the reel is securely fastened and does not wobble. Do not overtighten.

3. Spooling Line (if re-spooling)

Your HT Optimax reel comes pre-spooled with fishing line. If you need to replace the line or prefer a different type, follow these steps:

- 1. Open the bail arm.
- 2. Tie the new fishing line to the spool using an arbor knot or similar secure knot.
- Close the bail arm.
- 4. Maintain light tension on the line as you reel it onto the spool, ensuring even distribution. Avoid overfilling the spool.

OPERATING INSTRUCTIONS

1. Casting

- 1. Hold the rod and reel comfortably.
- 2. Use your index finger to hold the fishing line against the rod handle.
- 3. Open the bail arm with your other hand.
- 4. Bring the rod back over your shoulder, then swiftly cast forward, releasing your index finger as the rod reaches the desired casting angle.
- 5. Once the lure or bait hits the water, close the bail arm manually or by turning the handle.

2. Retrieving

To retrieve your line, simply turn the reel handle in a smooth, consistent motion. The bail roller will guide the line back onto the spool evenly.

3. Adjusting Drag

The HT Optimax features a front drag system. The drag knob is located on the front of the spool.

- Turn the drag knob **clockwise** to increase drag tension (make it harder for line to pull out).
- Turn the drag knob counter-clockwise to decrease drag tension (make it easier for line to pull out).

Set the drag tension appropriate for the line strength and the size of fish you expect to catch. A good starting point is to set the drag to about one-third of your line's breaking strength.

CARE AND MAINTENANCE

1. Cleaning

- After each use, especially in saltwater, rinse the reel with fresh water. Do not submerge the reel.
- Wipe down the exterior with a soft, damp cloth to remove dirt, salt, and debris.
- Use a cotton swab to clean hard-to-reach areas around the bail and handle.
- Ensure the reel is completely dry before storage.

2. Lubrication

- Periodically apply a small amount of fishing reel oil to moving parts such as the handle shaft and bail arm pivot points.
- Apply a thin layer of fishing reel grease to the main gear and pinion gear if disassembling for deeper maintenance (recommended for experienced users only).
- Avoid over-lubrication, as this can attract dirt and debris.

3. Storage

- Store the reel in a cool, dry place away from direct sunlight and extreme temperatures.
- Loosen the drag knob slightly before storage to relieve pressure on the drag washers.
- Consider using a reel cover or bag to protect it from dust and scratches.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Reel handle is stiff or hard to turn.	Lack of lubrication, dirt/debris inside, or overtightened components.	Clean and lubricate moving parts. Check for debris. Ensure handle screw is not overtightened.
Line twists or tangles frequently.	Improper line spooling, worn line, or bail roller not functioning correctly.	Ensure line is spooled correctly. Replace old or damaged line. Clean or inspect bail roller for smooth operation.
Drag slips or is inconsistent.	Drag washers are dry, dirty, or worn.	Clean drag washers. Apply a light coat of drag grease if necessary. Replace worn washers.
Bail arm does not close properly.	Debris in bail mechanism or spring issue.	Clean around the bail arm pivots. If issue persists, professional service may be required.

TECHNICAL SPECIFICATIONS

Feature	Detail
Model Name	OPT-101
Brand	нт
Hand Orientation	Ambidextrous
Color	Black
Material	Graphite (Body), Stainless Steel (Bearing), Aluminum (Handle)
Fishing Technique	Spinning
Item Weight	0.3 Pounds (approx. 0.14 kg)
Gear Ratio	5.2:1
Special Feature	Front Drag
Bearing Number	1
UPC	029333160021

WARRANTY AND SUPPORT

For information regarding warranty coverage, product support, or to inquire about replacement parts for your HT Optimax Spinning Fishing Reel, please contact HT customer service directly. Refer to the product packaging or the official HT website for the most current contact details.

When contacting support, please have your model number (OPT-101) and purchase information readily available to assist with your inquiry.

© 2024 HT. All rights reserved.