

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

> [VUPOINT](#) /

> [VuPoint PS-CA6-VP Digital Photo Scanner User Manual](#)

VUPOINT PS-CA6-VP

VuPoint PS-CA6-VP Digital Photo Scanner User Manual

Model: PS-CA6-VP

INTRODUCTION

This manual provides detailed instructions for the setup, operation, and maintenance of your VuPoint PS-CA6-VP Digital Photo Scanner. Please read this manual thoroughly before using the device to ensure proper functionality and longevity.

PACKAGE CONTENTS

Verify that all items listed below are included in your package. If any items are missing or damaged, please contact customer support.

- VuPoint PS-CA6-VP 4x6 Digital Photo Scanner
- USB Cable
- Power Adapter
- Sensor Cleaning Swab
- Anti-curl Sheath
- Calibration Card
- Business Card Organizer Software CD
- User Manual (this document)



Image Description: An overhead view of the VuPoint PS-CA6-VP Digital Photo Scanner's retail box, opened to display its contents. Visible items include the compact black scanner unit, a USB cable, a power adapter, a cleaning swab, an anti-curl sheath, a calibration card, a software CD, and the printed user manual.

PRODUCT OVERVIEW

The VuPoint PS-CA6-VP is a compact sheetfed digital photo scanner designed for converting physical photos into digital files. It supports scanning to an SD card or directly to a PC via USB.

Scanner Components

- **Photo Input Slot:** Where photos are fed into the scanner.
- **Photo Output Slot:** Where scanned photos exit the scanner.
- **Power Port:** Connects to the power adapter.
- **USB Port:** Connects to a computer for data transfer and power (optional).
- **SD Card Slot:** For inserting an SD/SDHC/MMC memory card to save scanned images.
- **Power/Scan Button:** Turns the device on/off and initiates scanning.
- **Mode Button:** Selects scanning resolution or other settings.
- **Status Indicator Light:** Displays the scanner's current status (e.g., power on, scanning, error).



Image Description: A close-up view of the VuPoint PS-CA6-VP Digital Photo Scanner, a sleek, black, rectangular device. The image highlights its compact size and the input slot for photos.

SETUP

1. Power Connection

1. Connect the power adapter to the scanner's power port.
2. Plug the power adapter into a standard electrical outlet.
3. The status indicator light will illuminate, indicating the scanner is receiving power.

2. Software Installation (for PC connection)

1. Insert the "Business Card Organizer Software CD" into your computer's CD/DVD drive.
2. Follow the on-screen instructions to install the necessary drivers and software.
3. Once installation is complete, connect the scanner to your computer using the provided USB cable.
4. Your computer should recognize the scanner as a new device.

3. Inserting a Memory Card (Optional)

1. Ensure the scanner is powered off.
2. Insert a compatible SD, SDHC, or MMC memory card into the SD card slot until it clicks into place.
3. The scanner will automatically detect the memory card when powered on.

OPERATING INSTRUCTIONS

Scanning a Photo

1. **Power On:** Press the Power/Scan button to turn on the scanner.
2. **Prepare Photo:** Ensure the photo is clean and free of dust. For delicate or curled photos, use the anti-curl sheath.
3. **Insert Photo:** Gently feed the photo into the photo input slot, face up. The scanner will automatically detect the photo and begin to pull it through.
4. **Scan Process:** The scanner will automatically scan the photo. The status indicator light may change during

this process.

5. **Retrieve Photo:** Once the scan is complete, the photo will exit from the photo output slot.

6. **Save Image:**

- **To SD Card:** If an SD card is inserted, the image will automatically be saved as a JPEG file.
- **To PC:** If connected to a PC with the software installed, the scanned image will appear in the software interface. Save the image using the software's options.

Using the Calibration Card

For optimal scan quality, especially if colors appear inaccurate, use the provided calibration card.

1. Power on the scanner.
2. Insert the calibration card into the photo input slot, following the arrows on the card.
3. The scanner will perform an automatic calibration.
4. Once complete, the scanner is ready for use.

MAINTENANCE

Cleaning the Sensor

Dust or debris on the scanner's sensor can affect scan quality. Clean the sensor regularly using the provided cleaning swab.

1. Power off and unplug the scanner.
2. Gently insert the sensor cleaning swab into the photo input slot.
3. Move the swab slowly from side to side to wipe the sensor surface.
4. Remove the swab and dispose of it.
5. Allow the scanner to dry completely before reconnecting power.

General Cleaning

Wipe the exterior of the scanner with a soft, dry cloth. Do not use liquid cleaners or abrasive materials.

TROUBLESHOOTING

Common Issues and Solutions

- **Scanner does not power on:**
 - Ensure the power adapter is securely connected to both the scanner and a working electrical outlet.
 - Try a different outlet.
- **Scanned images are blurry or streaky:**
 - Clean the scanner sensor using the provided cleaning swab.
 - Ensure the photo is clean and flat before scanning. Use the anti-curl sheath if necessary.
 - Perform a calibration using the calibration card.
- **Scanner not recognized by PC:**
 - Ensure the USB cable is securely connected to both the scanner and the PC.
 - Verify that the scanner drivers and software are correctly installed.
 - Try connecting to a different USB port on your PC.
- **SD card not detected:**

- Ensure the SD card is fully inserted into the slot.
- Verify the SD card is compatible (SD, SDHC, MMC).
- Try a different SD card.
- **Colors appear inaccurate:**
 - Perform a calibration using the calibration card.
 - Check your monitor's color settings.

TECHNICAL SPECIFICATIONS

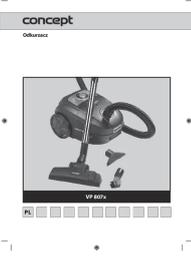
Feature	Specification
Product Type	Sheetfed Scanner
Image Sensor	CIS
Optical Resolution	1800 dpi
Hardware Resolution	1800 x 1200 dpi
Color Depth	48-bit
Scan Color	Color
Scan Speed	Approx. 5 seconds per photo
Media Size	A6 - 4" x 6"
Media Type	Photo, Plain Paper, Business Card
Output Format	JPEG
Memory Cards Supported	SD, SDHC, MMC (MS, MS Pro/Pro Duo/MS Duo, RS-MMC, xD, Mini/Micro SD with adapter)
Connectivity	USB
Platform Support	PC (Windows 2000, XP, Vista, 7), Mac OS 10.5 or higher
Input Voltage	110 V AC - 220 V AC
Dimensions (H x W x D)	1.80" x 6.10" x 1.50" (approx.)
Weight (Approximate)	8 oz

WARRANTY AND SUPPORT

For warranty information and technical support, please refer to the documentation included with your purchase or visit the official VuPoint website. Keep your proof of purchase for warranty claims.

Customer Support: For further assistance, please contact your retailer or the manufacturer's customer service department.

Related Documents - PS-CA6-VP

 <p>Magic Wand™ Portable Scanner with Auto-Feed Dock PDSDK-ST470-VP User Manual</p>	<p>Magic Wand™ PDSDK-ST470-VP Portable Scanner User Manual</p> <p>User manual for the VuPoint Solutions Magic Wand™ PDSDK-ST470-VP portable scanner, detailing setup, operation, key features, specifications, and troubleshooting guidance.</p>
 <p>Magic Wand™ Portable Scanner with Auto-Feed Dock PDSDK-ST470-VP-BX2 User Manual</p>	<p>Magic Wand™ Portable Scanner with Auto-Feed Dock User Manual</p> <p>User manual for the Magic Wand™ PDSDK-ST470-VP-BX2 portable scanner with auto-feed dock. Provides instructions on key features, setup, operation, connecting to a computer, image preview, specifications, and troubleshooting.</p>
 <p>concept VP 807x</p>	<p>Concept VP 807x Vacuum Cleaner User Manual</p> <p>User manual for the Concept VP 807x vacuum cleaner, covering assembly, operation, maintenance, troubleshooting, and safety instructions.</p>
 <p>Farmers FRIEND The Haven HIGH TUNNEL</p>	<p>Farmers Friend Haven High Tunnel Assembly and Instruction Manual</p> <p>Comprehensive assembly and instruction manual for the Farmers Friend Haven High Tunnel. This guide provides step-by-step instructions for setting up your high tunnel, including ground post installation, bow assembly, purlin installation, plastic sheeting application, and securing mechanisms.</p>
 <p>Farmers FRIEND Caterpillar Tunnel With Classic Pro ASSEMBLY AND INSTRUCTION MANUAL</p>	<p>Farmers Friend Classic Caterpillar Tunnel Assembly and Instruction Manual</p> <p>Comprehensive assembly and instruction manual for the Farmers Friend 14-ft Classic Caterpillar Tunnel, detailing rebar installation, anchor plate setup, bow assembly, purlin strap attachment, securing plastic, and final rope attachment.</p>
 <p>Farmers FRIEND Caterpillar Tunnel With Classic Pro ASSEMBLY AND INSTRUCTION MANUAL</p>	<p>Farmers Friend Classic Pro Caterpillar Tunnel Assembly and Instruction Manual</p> <p>Comprehensive assembly and instruction manual for the Farmers Friend Classic Pro Caterpillar Tunnel, detailing step-by-step installation, kit contents, and warranty information.</p>