

Manuals.plus /

› Clatronic /

› Clatronic 2in1 Hot Dog Maker & Egg Cooker Instruction Manual

Clatronic 251136

Clatronic 2in1 Hot Dog Maker & Egg Cooker

Model: 251136

IMPORTANT SAFETY INSTRUCTIONS

Please read these instructions carefully before using the appliance and keep them for future reference. Failure to follow these instructions may result in electric shock, fire, or serious injury.

- Always ensure the appliance is unplugged before cleaning or when not in use.
- Do not immerse the appliance base, cord, or plug in water or other liquids.
- Keep the appliance out of reach of children.
- Do not operate the appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.
- Use the appliance only for its intended purpose as described in this manual.
- Avoid contact with hot surfaces. Use handles or knobs.
- Ensure adequate ventilation around the appliance during operation.
- Do not use abrasive cleaners or scouring pads on the appliance.

PRODUCT OVERVIEW

The Clatronic 2in1 Hot Dog Maker & Egg Cooker is designed for convenient preparation of hot dogs and eggs. It features a heated stainless steel spike for buns and a steam container for sausages and eggs.

Alles dabei für Ihren perfekten Start.

CTC **CLATRONIC**®

Leistung:
380 Watt



Image Description: An overhead view of the Clatronic 2in1 Hot Dog Maker and Egg Cooker, disassembled to show its main components. The image highlights the heated stainless steel spike, the removable transparent steam container, the non-stick water bowl, and the egg holders. Dimensions are indicated as approximately 27 cm height, 23 cm width, and 15.5 cm depth. A measuring cup with an egg piercer is also shown.

Components:

- **Heated Stainless Steel Spike:** For warming hot dog buns.
- **Transparent Steam Container:** Removable, for cooking sausages and eggs.
- **Egg Holder:** Removable, for cooking up to 6 eggs.
- **Non-stick Water Bowl:** Located in the base for steaming.
- **Control Switches:** Two separate, blue-illuminated switches for spike and steam functions.
- **Measuring Cup with Egg Piercer:** For precise water measurement and piercing eggs.

SETUP AND FIRST USE

1. **Unpack:** Carefully remove all packaging materials and ensure all components are present.
2. **Clean:** Before first use, wash the removable steam container, egg holder, and measuring cup in warm soapy water. Wipe the appliance base and stainless steel spike with a damp cloth. Dry all parts thoroughly.

3. **Placement:** Place the appliance on a stable, heat-resistant, and level surface, away from walls or other appliances to ensure proper ventilation.
4. **Assembly:** Place the non-stick water bowl into the base. Position the egg holder inside the transparent steam container if cooking eggs. Place the steam container onto the base.

OPERATING INSTRUCTIONS

1. Hot Dog Preparation

1. **Fill Water:** Use the measuring cup to add the appropriate amount of water to the non-stick water bowl for steaming sausages. Refer to the measuring cup markings for guidance.
2. **Add Sausages:** Place up to 14 sausages into the transparent steam container.
3. **Warm Buns:** Place hot dog buns onto the heated stainless steel spike.
4. **Activate:** Plug in the appliance. Press the left blue-illuminated switch to activate the spike for bun warming and the right blue-illuminated switch to activate the steam function for sausages.
5. **Cook:** Allow sausages to steam until heated through, typically 5-8 minutes depending on sausage type and desired temperature. Buns will warm simultaneously.
6. **Serve:** Carefully remove hot dogs and buns. Unplug the appliance after use.

Genug für alle: Bereiten Sie bis zu 14 Hot Dogs auf einmal zu.

Ideal für Familienfeiern, Partys oder einfach den großen Hunger.



Image Description: The Clatronic Hot Dog Maker in operation, showing several sausages steaming upright in the transparent container and a hot dog bun warming on the stainless steel spike. The appliance is white with blue illuminated control switches.

2. Egg Preparation

1. **Pierce Eggs:** Use the egg piercer on the measuring cup to gently pierce the large end of each egg. This helps prevent cracking during cooking.
2. **Fill Water:** Add the appropriate amount of water to the non-stick water bowl using the measuring cup. The amount of water determines the egg's doneness (soft, medium, hard-boiled).
3. **Place Eggs:** Place up to 6 pierced eggs into the egg holder within the transparent steam container.
4. **Activate:** Plug in the appliance. Press the right blue-illuminated switch to activate the steam function for eggs. The left switch for the spike can remain off if not warming buns.
5. **Cook:** Allow eggs to steam for the desired time. Refer to a standard egg cooking chart for steam cooking times based on desired doneness.
6. **Cool & Serve:** Once cooked, carefully remove eggs and cool them under cold water to stop the cooking process. Unplug the appliance after use.

Durchdacht bis ins Detail: Komfortable Bedienung und Reinigung.



Image Description: The Clatronic Egg Cooker in operation, showing several eggs steaming in the removable egg holder within the transparent container. The appliance is white with blue illuminated control switches.

3. Simultaneous Operation (Hot Dogs & Eggs)

The appliance allows for simultaneous preparation of hot dogs and eggs. Follow these steps:

1. **Prepare Eggs:** Pierce eggs and place them in the egg holder.
2. **Add Sausages:** Place sausages around the egg holder in the steam container.
3. **Fill Water:** Add water to the non-stick water bowl, considering the cooking time for both items. More water may be needed for longer cooking times.
4. **Warm Buns:** Place buns on the stainless steel spike.
5. **Activate Both:** Plug in the appliance. Press both blue-illuminated switches to activate the spike and steam functions.
6. **Monitor:** Monitor the cooking process through the transparent container. Remove items as they reach desired doneness.

Ihre Vorteile



Schnelle Zubereitung



Inklusive Messbecher
mit Eierstecher



Einfache Bedienung mit
2 separaten Schaltern



Image Description: The Clatronic 2in1 Hot Dog Maker and Egg Cooker operating with both functions. Sausages and eggs are visible steaming in the transparent container, while a hot dog bun warms on the spike. The appliance is white with blue illuminated control switches.

CLEANING AND MAINTENANCE

Regular cleaning ensures optimal performance and extends the life of your appliance.

1. **Unplug and Cool:** Always unplug the appliance from the power outlet and allow it to cool completely before cleaning.
2. **Disassemble:** Remove the transparent steam container, egg holder, and any remaining food particles.
3. **Wash Removable Parts:** Wash the steam container, egg holder, and measuring cup in warm, soapy water. Rinse thoroughly and dry completely. These parts are not dishwasher safe.
4. **Clean Base and Spike:** Wipe the appliance base, non-stick water bowl, and stainless steel spike with a damp cloth. For stubborn residue in the water bowl, use a soft brush or sponge. Do not use abrasive cleaners or metal scouring pads.
5. **Descaling:** If mineral deposits build up in the water bowl, descale the appliance periodically using a

solution of water and white vinegar (1:1 ratio). Run the appliance with the solution for a few minutes, then rinse thoroughly.

6. **Storage:** Store the clean and dry appliance in a cool, dry place.



Mehr Zeit für Genuss.

Image Description: The Clatronic 2in1 Hot Dog Maker disassembled for cleaning. The image shows the main base unit with the non-stick water bowl, the heated stainless steel spike, the transparent steam container, and the removable egg holders laid out on a wooden surface. This illustrates the ease of cleaning individual components.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Appliance does not turn on.	Not plugged in; power outlet malfunction; switch not pressed.	Ensure appliance is securely plugged into a working outlet. Press the desired blue-illuminated switch.
Sausages/eggs not cooking properly.	Insufficient water; steam container not properly seated; too many items.	Add correct amount of water. Ensure steam container is correctly placed. Do not overload the appliance.
Buns not warming.	Spike switch not activated; spike is dirty.	Ensure the left blue-illuminated switch is pressed. Clean the stainless steel spike.
Water boiling dry too quickly.	Insufficient water added for cooking time.	Add more water using the measuring cup, especially for longer cooking cycles.

SPECIFICATIONS

- **Model Number:** 251136
- **Brand:** Clatronic
- **Power Supply:** 230 V, 50 Hz
- **Power Consumption:** 380 W
- **Dimensions (approx.):** 27 cm (Height) x 23 cm (Width) x 15.5 cm (Depth)
- **Material:** Stainless steel (spike), Plastic (body)
- **Color:** White with Stainless Steel accents
- **Capacity:** Up to 14 sausages, up to 6 eggs
- **Country of Origin:** China

WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the documentation provided with your purchase or contact your retailer. Keep your proof of purchase for any warranty claims.

For further assistance, please visit the official Clatronic website or contact their customer service department.