

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [Braun](#) /
- › [Braun Silk-épil FG1100 Bikini Trimmer Instruction Manual](#)

## Braun FG1100

# Braun Silk-épil FG1100 Bikini Trimmer Instruction Manual

## INTRODUCTION

---

This manual provides detailed instructions for the safe and effective use of your Braun Silk-épil FG1100 Bikini Trimmer. Please read all instructions carefully before first use and retain for future reference. This versatile tool is designed for precise hair removal and styling in sensitive areas, including the bikini zone, face, and eyebrows.



Image: The Braun Silk-épil FG1100 Bikini Trimmer shown with its main body, battery, precision head, slim bikini shaping head, two trimming combs, and a storage pouch.

## PRODUCT COMPONENTS

---

Your Braun Silk-épil FG1100 package includes the following items:

- Main Trimmer Unit
- High Precision Head
- Slim Bikini Shaping Head
- Two Bikini Zone Trimming Combs (5 mm and 8 mm)
- Cleaning Brush
- Storage Pouch
- 1 AAA Battery (included)

## SAFETY INFORMATION

---

To ensure safe operation and prevent injury or damage to the device, please observe the following:

- Always keep the shaver dry while charging.
- Avoid using the shaver near water.
- To prevent skin irritation, do not apply excessive pressure while using the shaver.
- Always follow the cleaning instructions to prevent bacterial growth.
- In case of any malfunction, stop using the shaver immediately and contact customer service.

## SETUP

---

### Battery Installation

1. Twist the bottom cap of the trimmer counter-clockwise to open the battery compartment.
2. Insert one AAA battery, ensuring the positive (+) and negative (-) terminals are correctly aligned.
3. Twist the bottom cap clockwise to securely close the compartment.

### Attaching Trimmer Heads and Combs

1. To attach a head, align the head with the top of the trimmer unit and gently push until it clicks into place.
2. To attach a trimming comb, slide it over the desired trimmer head until it is securely fitted.
3. To remove, gently pull the head or comb away from the trimmer unit.

## OPERATING INSTRUCTIONS

---

### Power On/Off

To turn the trimmer on, slide the power switch located on the main body upwards. To turn it off, slide the switch downwards.

### Using the High Precision Head



Image: Close-up of the high precision head, suitable for detailed styling.

The high precision head is ideal for detailed styling and removing hairs from eyebrows, face, and other sensitive areas. Use gentle, short strokes against the direction of hair growth for optimal results. This head can also be used with included templates for creative shaping.

### Using the Slim Bikini Shaping Head

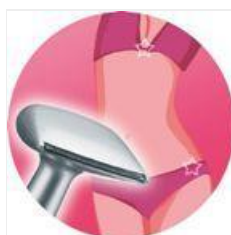


Image: The T-shaped slim bikini shaping head in use on the bikini area.

The T-shaped slim bikini shaping head is specifically designed for use in the bikini area to create precise lines, shapes, or contours without irritation. Hold the trimmer flat against the skin and move it slowly against the direction of hair growth.

## Using the Trimming Combs



Image: The two trimming combs (5mm and 8mm) for uniform hair length.

The two bikini zone trimming combs (5 mm and 8 mm) fit over the slim bikini shaping head. These combs allow you to trim hairs to a uniform length, creating a smooth bikini line. Select the desired comb length, attach it, and move the trimmer against the direction of hair growth.

## Eyebrow Shaping



Image: The high precision head being used to shape eyebrows.

The high precision head can also be used for styling your eyebrows. Carefully trim stray hairs or shape your eyebrows by moving the trimmer gently along the desired contour. For best results, use without a comb for precise shaping.

## MAINTENANCE

---

### Cleaning

Regular cleaning ensures optimal performance and hygiene:

- After each use, turn off the trimmer and remove the attachment head.
- Use the provided cleaning brush to remove any trapped hairs from the trimmer head and the main unit.
- The trimmer heads can be rinsed under running water. Ensure they are completely dry before reattaching or storing.
- Do not immerse the main trimmer unit in water.

### Storage

Store the trimmer and its accessories in the provided storage pouch in a dry place, away from direct sunlight and extreme temperatures. Ensure the trimmer is clean and dry before storing.

## TROUBLESHOOTING

---

If you encounter any issues with your Braun Silk-épil FG1100, please refer to the following common solutions:

- **Trimmer not turning on:** Check if the AAA battery is correctly inserted and has sufficient charge. Replace the battery if necessary.
- **Poor trimming performance or pulling hair:** Ensure the trimmer head is clean and free of hair buildup. The blades may be dull and require replacement if performance does not improve after cleaning. Ensure

hair is trimmed to a shorter length before using the bikini shaping head for best results.

- **Skin irritation:** Ensure you are not applying excessive pressure. Always use on clean, dry skin.
- **Attachments not fitting securely:** Ensure the attachment is correctly aligned with the main unit and pushed firmly until it clicks.

For issues not covered here, please contact Braun customer support.

## SPECIFICATIONS

Feature	Detail
Model Number	FG 1100
Power Source	Battery Powered (1 AAA battery)
Product Dimensions	4.7 x 7 x 17.2 cm
Item Weight	99.79 g (approx. 100 g)
Included Components	Main unit, High Precision Head, Slim Bikini Shaping Head, 2 Trimming Combs, Cleaning Brush, Storage Pouch, 1 AAA Battery
Manufacturer	Procter & Gamble

## WARRANTY AND SUPPORT

For warranty information, product registration, or customer support, please refer to the documentation included in your product packaging or visit the official Braun website. Keep your proof of purchase for warranty claims.