

[Manuals.plus](#) /

› [PREMIER](#) /

› PREMIER Housewares Zing Silicone Baster (Model 0804906) Instruction Manual

PREMIER 0804906

PREMIER Housewares Zing Silicone Baster (Model 0804906) Instruction Manual

For optimal use and care of your basting syringe

INTRODUCTION

This manual provides instructions for the safe and effective use of your PREMIER Housewares Zing Silicone Baster, Model 0804906. This kitchen tool is designed for basting meats and other foods, ensuring they remain moist and flavorful during cooking. Please read all instructions carefully before first use and retain this manual for future reference.

PRODUCT OVERVIEW



This image displays the PREMIER Housewares Zing Silicone Baster in its retail packaging. The baster features a clear tube with measurement markings in milliliters and ounces, and a purple silicone bulb at the top. An internal cleaning brush is visible within the tube. The packaging highlights 'I'M A BASTER!' and 'PURPLE SILICONE WITH CLEANER' along with the 'ZING' brand logo.

The PREMIER Housewares Zing Silicone Baster features a clear, durable tube with measurement markings and a removable, heat-resistant silicone bulb. It includes a cleaning brush for easy maintenance.

- **Removable Silicone Bulb:** Non-stick and heat-resistant for safe handling.
- **Integrated Gauge:** Clear markings for precise measurement of liquids.
- **Cleaning Brush:** Included for thorough and convenient cleaning.
- **Dishwasher Safe:** For easy and hygienic cleaning.

SETUP

1. **Unpack:** Carefully remove the baster and all components from the packaging.
2. **Initial Cleaning:** Before first use, wash the baster thoroughly with warm soapy water. Use the included cleaning brush to ensure the inside of the tube is clean. Rinse all parts completely and allow them to air dry.
3. **Assembly:** Ensure the silicone bulb is securely attached to the top of the clear tube. The baster is ready for use once clean and assembled.

OPERATING INSTRUCTIONS

Follow these steps to effectively baste your food:

1. **Prepare Basting Liquid:** Have your desired basting liquid (e.g., pan juices, melted butter, marinade) ready in a heat-safe container.
2. **Draw Liquid:** Squeeze the silicone bulb firmly to expel air from the tube. While keeping the bulb compressed, place the tip of the baster into the basting liquid. Release the bulb slowly to draw the liquid into the tube. The integrated gauge will help you measure the amount of liquid drawn.
3. **Baste Food:** Position the baster over the food you wish to baste. Gently squeeze the silicone bulb to release the liquid evenly over the surface of the food.
4. **Repeat:** Repeat the process as needed throughout the cooking time to keep your food moist and enhance flavor.

Caution:

- The baster tube and liquid can become very hot during use. Always handle with care and use oven mitts or heat-resistant gloves if necessary.
- Avoid direct contact of the baster with open flames or heating elements.

MAINTENANCE AND CLEANING

Proper cleaning and maintenance will extend the life of your baster.

1. **Immediate Cleaning:** After each use, rinse the baster immediately to prevent food residue from drying inside.
2. **Disassembly:** Carefully remove the silicone bulb from the clear tube.
3. **Hand Washing:** Wash both the silicone bulb and the clear tube with warm, soapy water. Use the provided cleaning brush to thoroughly scrub the inside of the tube, ensuring all residue is removed. Pay attention to the tip and any measurement markings.
4. **Dishwasher Cleaning:** The baster is dishwasher safe. Place both the silicone bulb and the clear tube on the top rack of your dishwasher. Ensure they are positioned securely to prevent movement during the wash cycle.

5. **Drying and Storage:** Allow all parts to dry completely before reassembling and storing. Store the baster in a clean, dry place.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Poor suction	Silicone bulb not securely attached; crack in the tube; insufficient squeeze.	Ensure the bulb is firmly attached. Inspect the tube for any damage. Squeeze the bulb completely before immersing the tip in liquid.
Difficulty cleaning the tube	Food residue dried inside; cleaning brush not reaching all areas.	Clean immediately after use. Use the included cleaning brush and warm soapy water. For stubborn residue, soak the tube in hot soapy water before scrubbing.
Tube appears cloudy or cracked after washing	Exposure to extreme heat or harsh detergents; material degradation over time.	Ensure the baster is placed on the top rack of the dishwasher. Avoid using abrasive cleaners. If significant cracking occurs, the product may need replacement.

SPECIFICATIONS

- **Brand:** PREMIER Housewares
- **Model:** 0804906
- **Material:** Silicone (bulb), Plastic (tube)
- **Color:** Purple
- **Dimensions:** Approximately 30 cm (Height) x 5 cm (Width) x 5 cm (Depth)
- **Weight:** Approximately 160 grams
- **Cleaning:** Dishwasher safe

WARRANTY AND SUPPORT

Specific warranty details for the PREMIER Housewares Zing Silicone Baster (Model 0804906) are not provided in this manual. For information regarding warranty coverage, returns, or product support, please refer to your purchase documentation or contact the retailer where the product was purchased. You may also visit the official PREMIER Housewares website for general customer service information.