

[Manuals.plus](#) /

› [Lasko](#) /

› Lasko 2519 38-inch Oscillating Tower Fan User Manual

Lasko 2519

Lasko 2519 38-inch Oscillating Tower Fan User Manual

Model: 2519

IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, basic precautions should always be followed to reduce the risk of fire, electric shock, and injury to persons. Read all instructions before using this fan.

- Always plug fans directly into a wall outlet/receptacle. Never use with an extension cord or relocatable power tap (outlet/power strip).
- Do not operate any fan with a damaged cord or plug. Discard fan or return to an authorized service facility for examination and/or repair.
- Do not run cord under carpeting. Do not cover cord with throw rugs, runners, or similar coverings. Do not route cord under furniture or appliances. Arrange cord away from traffic area and where it will not be tripped over.
- The Lasko Blue Plug is a safety feature designed to cut off electric current to the fan if it detects a potentially hazardous electrical fault in the fan's motor or power supply. If the fan stops working, check the Blue Plug for any signs of damage or tripping.
- Do not insert or allow fingers or foreign objects to enter any ventilation or exhaust opening as this may cause an electric shock or fire, or damage the fan.
- Do not use this fan in wet or moist locations, such as bathrooms or laundry areas.
- Always unplug the fan before moving, cleaning, or servicing.

PRODUCT OVERVIEW

The Lasko 2519 Tower Fan is designed to provide efficient air circulation with a space-saving profile. It features three quiet speeds, widespread oscillation, and a convenient auto-off timer, all controllable via an intuitive top-mounted panel or the included remote control.



Image: The Lasko 2519 38-inch Oscillating Tower Fan, showcasing its slim, gray tower design with a stable round base.

Ideal for

- ✓ Living rooms
- ✓ Bedrooms
- ✓ Studios
- ✓ and more



Image: The Lasko 2519 Tower Fan with visual indicators for its 38-inch height and 12-inch base diameter, highlighting its portable design with a carry handle and simple no-tools assembly.





Image: Close-up of the Lasko 2519 fan's top control panel, showing buttons for Power, Speed, Oscillation (OSC), and Timer.





Image: The remote control for the Lasko 2519 fan, featuring buttons for Power, Speed, Oscillation (OSC), and Timer, mirroring the fan's control panel.

SETUP

Assembly

The Lasko 2519 Tower Fan is designed for simple, no-tools assembly. Follow these steps:

1. Carefully remove the fan and all components from the packaging.
2. Attach the base to the bottom of the fan unit. Ensure it clicks securely into place or is fastened with the provided screws if applicable (refer to the specific instructions in your product box).
3. Place the fan on a firm, level surface.

Placement

Position the fan in a location where it can provide optimal airflow without obstruction. Ensure it is placed on a stable, flat surface to prevent tipping. Keep the fan away from curtains or other objects that could block the air intake or exhaust.

OPERATING INSTRUCTIONS

The Lasko 2519 Tower Fan can be operated using the control panel on top of the unit or the included remote control.

Control Panel Functions:

- **Power Button (U):** Press to turn the fan ON or OFF.
- **Speed Button (F):** Press repeatedly to cycle through the 3 fan speeds: Low, Medium, High.
- **Oscillation Button (O):** Press to turn the oscillation function ON or OFF. The fan will rotate from side to side to distribute air over a wider area.
- **Timer Button (L):** Press repeatedly to set the auto-off timer. Each press adds 1 hour to the timer, up to a maximum of 7 hours. The fan will automatically turn off after the selected time has elapsed.

Remote Control:

The remote control duplicates all functions of the control panel for convenient operation from a distance. Ensure the remote has working batteries (not included) and point it towards the fan's receiver.

MAINTENANCE

Cleaning

Regular cleaning helps maintain the fan's performance and extends its lifespan.

1. Always unplug the fan from the power outlet before cleaning.
2. Use a soft, damp cloth to wipe the exterior surfaces of the fan. Do not use gasoline, benzene, paint thinner, or other harsh cleaners, as they may damage the fan's finish.
3. Use a vacuum cleaner with a brush attachment to gently remove dust from the air intake and exhaust grilles.
4. Never immerse the fan in water or allow water to drip into the motor housing.

Storage

When storing the fan, it is recommended to keep it in its original carton in a cool, dry place. Protect the power cord from damage by wrapping it loosely and securing it.

TROUBLESHOOTING

If your fan is not operating correctly, please refer to the following common issues and solutions:

Problem	Possible Cause	Solution
Fan does not turn on.	No power, Lasko Blue Plug tripped, damaged cord/plug.	Ensure fan is plugged into a working outlet. Check the Lasko Blue Plug for a tripped circuit. Inspect cord and plug for damage.
Weak or no airflow.	Blocked air intake/exhaust, fan speed too low.	Clear any obstructions from the grilles. Increase fan speed using the Speed button.
Fan makes unusual noise.	Dust accumulation, loose parts, fan not on a level surface.	Clean the fan thoroughly. Ensure all parts are securely assembled. Place the fan on a stable, level surface.
Remote control not working.	Dead batteries, remote not pointed at receiver.	Replace batteries in the remote control. Ensure direct line of sight to the fan's control panel.

SPECIFICATIONS

- Model Number:** 2519
- Brand:** Lasko
- Color:** Gray
- Dimensions (D x W x H):** 30.5 cm x 30.5 cm x 96.5 cm (approx. 12 in x 12 in x 38 in)
- Power Source:** Corded Electric
- Voltage:** 120 Volts
- Wattage:** 46 watts
- Airflow Capacity:** 591 Cubic Feet per Minute
- Number of Speeds:** 3
- Control Method:** Remote Control, Push Button
- Oscillation:** Widespread (60 degrees)
- Timer:** 1 to 7 hours auto-off
- Material:** Plastic
- Included Components:** Tower fan, user manual

WARRANTY AND SUPPORT

Limited Warranty

This Lasko 2519 Tower Fan comes with a **1-year limited warranty** from the date of purchase. This warranty covers manufacturing defects in materials and workmanship under normal use. It does not cover damage resulting from misuse, accident, alteration, or unauthorized repair.

Customer Support

For technical assistance, warranty claims, or general inquiries, please refer to the contact information provided in the original product packaging or visit the official Lasko website. When contacting support, please have your model number (2519) and proof of purchase readily available.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question