

[manuals.plus](#) /

› [Logilink](#) /

› [LogiLink Roll Up Piano Model UA0104 User Manual](#)

## Logilink UA0104

# LogiLink Roll Up Piano Model UA0104 User Manual

Model: UA0104

## 1. INTRODUCTION

The LogiLink Roll Up Piano Model UA0104 is a flexible, portable 61-key USB musical keyboard designed for convenience and versatility. Its silicone construction makes it resistant to water and dust, ideal for various environments. This manual provides essential information for setting up, operating, and maintaining your Roll Up Piano.



Image 1.1: The LogiLink Roll Up Piano fully unrolled, displaying its 61 keys and integrated control panel.

## 2. PACKAGE CONTENTS

Please check the package contents upon unboxing to ensure all items are present:

- LogiLink Roll Up Piano (Model UA0104)
- USB Cable
- AC Power Adapter
- 4 x AA Batteries
- User Manual (this document)



Image 2.1: The LogiLink Roll Up Piano shown within its retail packaging.

### 3. PRODUCT FEATURES

The LogiLink Roll Up Piano offers a range of features for musical expression and learning:

- **61 Standard Keys:** Provides a full range for playing various melodies.
- **128 Tones:** A wide selection of instrument sounds.
- **128 Rhythms:** Diverse rhythmic patterns for accompaniment.
- **40 Pre-recorded Melodies:** Built-in songs for practice or enjoyment.
- **Recording Function:** Ability to record up to 336 notes.
- **64 Chord Types:** Supports various chord structures.
- **Water and Dust Resistant:** Durable silicone material for protection.
- **Connectivity:** USB and MIDI interfaces for computer and external device connection.
- **Portable Design:** Flexible and rollable for easy storage and transport.



Image 3.1: A detailed view of the control panel, highlighting buttons for tones, rhythms, and recording functions.

## 4. SETUP

---

Follow these steps to set up your LogiLink Roll Up Piano:

- 1. Unroll the Piano:** Carefully unroll the silicone keyboard on a flat, stable surface.
- 2. Power Connection:**
  - Battery Power:** Open the battery compartment on the control panel and insert 4 AA batteries, ensuring correct polarity.
  - AC Power:** Connect the included AC power adapter to the DC IN port on the control panel and plug it into a standard wall outlet.
- 3. USB Connection (Optional):** To use the piano with a computer as a MIDI controller, connect the USB cable from the piano's USB port to an available USB port on your computer. The piano is typically plug-and-play and does not require special drivers.
- 4. MIDI Connection (Optional):** For connecting to external MIDI devices, use a standard MIDI cable (not included) to connect the piano's MIDI OUT port to the MIDI IN port of your external device.



Image 4.1: The Roll Up Piano connected to a laptop, demonstrating its USB connectivity for use with computer software.

## 5. OPERATING INSTRUCTIONS

---

Familiarize yourself with the control panel to utilize the piano's functions:

- **Power On/Off:** Press the **POWER** button to turn the piano on or off.
- **Volume Control:** Use the **VOLUME +/-** buttons to adjust the output sound level.
- **Tone Selection:** Press the **TONE** button, then use the number keys or **+/ -** buttons to select from 128 different instrument tones.
- **Rhythm Selection:** Press the **RHYTHM** button, then use the number keys or **+/ -** buttons to select from 128 rhythmic accompaniments.
- **Playing Melodies:** Press the **DEMO** button to cycle through the 40 pre-recorded melodies. Press again to stop.
- **Recording:** Press the **REC** button to start recording your performance (up to 336 notes). Press **PLAY** to listen to your recorded melody.
- **Chord Function:** Activate chord mode by pressing the **CHORD** button. Refer to the specific chord chart (if provided separately) for different chord types.

## 6. MAINTENANCE

Proper care ensures the longevity of your Roll Up Piano:

- **Cleaning:** As the piano is water and dust resistant, wipe the surface with a soft, damp cloth. Avoid harsh chemicals or abrasive cleaners. Ensure the piano is powered off and disconnected from any power source before cleaning.
- **Storage:** When not in use, gently roll up the piano and store it in a cool, dry place away from direct sunlight and extreme temperatures. Avoid sharp objects that could puncture the silicone.
- **Battery Replacement:** If using battery power, replace all 4 AA batteries when the sound becomes weak or the piano does not power on. Remove batteries if the piano will not be used for an extended period.



Image 6.1: The Roll Up Piano in its compact, rolled-up state, ready for storage or transport.

## 7. TROUBLESHOOTING

If you encounter issues with your LogiLink Roll Up Piano, try these solutions:

- **No Sound:**
  - Ensure the piano is powered on.
  - Check the volume level and increase if necessary.
  - Verify power source (batteries are fresh/correctly inserted, AC adapter is properly connected).

- If connected to a computer, check the computer's audio settings and MIDI input.

- **Keys Not Responding:**

- Ensure the piano is fully unrolled and lying flat on a smooth surface.
- Press keys firmly and directly.
- Restart the piano by turning it off and on again.

- **Distorted Sound:**

- Lower the volume.
- Check the power source; low batteries can cause distortion.

- **MIDI Connection Issues:**

- Ensure the USB or MIDI cable is securely connected.
- Verify that your computer or external MIDI device recognizes the piano.
- Check software settings on your computer for MIDI input.

## 8. SPECIFICATIONS

<b>Model Number</b>	UA0104
<b>Keys</b>	61 Standard Keys
<b>Tones</b>	128
<b>Rhythms</b>	128
<b>Pre-recorded Melodies</b>	40
<b>Recording Capacity</b>	Up to 336 notes
<b>Chord Types</b>	64
<b>Material</b>	Silicone
<b>Resistance</b>	Water and Dust Resistant
<b>Connectivity</b>	USB, MIDI
<b>Dimensions (unrolled)</b>	960 mm (L) x 228 mm (D) x 33 mm (H)
<b>Weight</b>	300 g
<b>Power Supply</b>	4 x AA Batteries or AC Power Adapter

## 9. WARRANTY AND SUPPORT

LogiLink products are designed for reliability and performance. For warranty information, please refer to the warranty card included with your purchase or visit the official LogiLink website. If you encounter any issues not covered in this manual or require technical assistance, please contact LogiLink customer support or your retailer for further assistance.

