



[Manuals.plus](#) /

> [Conair](#) /

> Conair 241RNFC 1875 Watt Hair Dryer with Retractable Cord User Manual

## Conair 241RNFC

# Conair 241RNFC 1875 Watt Hair Dryer with Retractable Cord User Manual

Model: 241RNFC | Brand: Conair

## IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, especially when children are present, basic safety precautions should always be followed, including the following:

- Always unplug the appliance immediately after use.
- Do not use while bathing or in a shower.
- Do not place or store appliance where it can fall or be pulled into a tub or sink.
- Do not place in or drop into water or other liquid.
- If an appliance falls into water, unplug it immediately. Do not reach into the water.
- Keep the power plug and cord away from heated surfaces.
- Avoid contact with skin and hair while in use.
- Keep out of reach of children.
- Always unplug and allow to cool before storing.

## PRODUCT FEATURES

The Conair 241RNFC Hair Dryer is designed for efficient and versatile hair styling. Key features include:

- **1875 Watts:** Provides powerful airflow for quick drying.
- **Retractable Cord:** Cord retracts into the handle with the touch of a button for neat storage.
- **Tourmaline Ceramic Technology:** Utilizes ion output to smooth the hair's cuticle layer, reducing static and frizz for silky, shiny hair. Infrared energy helps protect hair's natural luster.
- **2 Speed / 3 Heat Settings:** Offers customizable airflow and temperature control for various hair types and styling needs.
- **Cool Shot Button:** Locks in your style for long-lasting results.
- **Included Attachments:** Comes with a concentrator for precise styling and a diffuser for enhancing natural curls and waves.



Image: Conair 241RNFC 1875 Watt Hair Dryer, showcasing its design and retractable cord feature.

## SETUP

---

1. **Unfold Handle:** If the handle is folded for storage, gently unfold it until it clicks securely into place.
2. **Attach Accessories:** To attach the concentrator or diffuser, align the attachment with the nozzle of the dryer and push it firmly into place. Ensure it is securely fastened before use.
3. **Plug In:** Extend the power cord by pressing the cord retraction button (if applicable) and pulling the cord out. Plug the dryer into a standard electrical outlet.

## OPERATING INSTRUCTIONS

---

1. **Power On/Off:** Locate the ON/OFF switch on the handle. Slide it to the 'ON' position to start the dryer. Slide it to 'OFF' to turn it off.
2. **Adjust Speed:** Use the speed switch to select your desired airflow: 'LOW' for gentle drying or 'HIGH' for fast drying.
3. **Select Heat Setting:** Use the heat switch to choose your preferred temperature: 'HOT' for quick drying, 'WARM' for normal drying, or 'COOL' for setting styles.
4. **Use Cool Shot:** Press and hold the blue 'COOL SHOT' button to deliver a burst of cool air. This helps to set your hairstyle and add shine. Release the button to return to the selected heat setting.
5. **Using the Concentrator:** For precise styling and straightening, attach the concentrator. Direct the airflow to specific sections of hair while brushing.
6. **Using the Diffuser:** For enhancing natural curls and adding volume, attach the diffuser. Gently cup sections of hair in the diffuser bowl and lift towards the scalp.
7. **Retract Cord:** After use, unplug the dryer. Press the cord retraction button located on the handle to automatically retract the power cord for compact storage.



Image: Concentrator attachment for focused airflow.



Image: Diffuser attachment for enhancing curls and volume.

## MAINTENANCE AND CLEANING

Regular maintenance ensures optimal performance and extends the life of your hair dryer.

- **Cleaning the Air Filter:** Ensure the dryer is unplugged and completely cool. Gently twist or pull off the rear filter cover. Use a soft brush or vacuum cleaner to remove any accumulated dust or lint from the air intake filter. Replace the filter cover securely. Clean regularly to prevent overheating and maintain airflow.
- **Exterior Cleaning:** Wipe the exterior of the dryer with a soft, damp cloth. Do not use abrasive cleaners or solvents.
- **Storage:** Always unplug the appliance and allow it to cool before storing. Retract the cord fully. Store the dryer in a safe, dry location, away from water and out of reach of children. Do not wrap the power cord around the dryer, as this can damage the cord.

## TROUBLESHOOTING

If your hair dryer is not functioning as expected, please refer to the following common issues:

- **Dryer Not Turning On:** Ensure the power cord is securely plugged into a working electrical outlet. Check if the circuit breaker on the plug (if present) has tripped. Reset if necessary.
- **Low Airflow or Overheating:** The air intake filter at the rear of the dryer may be clogged with lint or dust. Refer to the 'Maintenance and Cleaning' section to clean the filter.
- **Cord Not Retracting:** Ensure the cord is fully extended before attempting to retract it. Press and hold the retraction button firmly. If the cord is tangled, gently pull it out a short distance and try again.

If problems persist, contact customer support.

## SPECIFICATIONS

<b>Model Number</b>	241RNFC
<b>Brand</b>	Conair
<b>Wattage</b>	1875 watts
<b>Power Source</b>	Corded Electric
<b>Heat Settings</b>	3 (Hot, Warm, Cool)
<b>Speed Settings</b>	2 (Low, High)
<b>Special Features</b>	Retractable Cord, Tourmaline Ceramic Technology, Cool Shot Button
<b>Included Components</b>	Concentrator, Diffuser
<b>Material</b>	Plastic
<b>Color</b>	Pink
<b>Dimensions</b>	10.8 x 26.04 x 25.4 cm

## WARRANTY AND SUPPORT

This Conair 241RNFC Hair Dryer comes with a **2-year manufacturer's warranty**.

For warranty claims, technical support, or further assistance, please contact Conair customer service. You can find contact information on the official Conair website or through the retailer where the product was purchased.

Manufacturer Contact Information: EAST WINDSOR, NJ, 08520 US