

## Invicta 0839

# Invicta 0839 Force Collection Chronograph Watch User Manual

## INTRODUCTION

This manual provides detailed instructions for the proper use and care of your Invicta 0839 Force Collection Chronograph Watch. Please read this manual thoroughly to ensure optimal performance and longevity of your timepiece.

### Key Features:

- Precise Swiss-quartz movement for accurate timekeeping.
- Durable mineral crystal protects the dial.
- Brushed and polished stainless steel case with a comfortable black polyurethane strap.
- Chronograph functions with 60-second, 30-minute, and 1/10th of a second subdials.
- Date display function.
- Black dial with luminous black hands and Arabic numerals for enhanced readability.
- Tachymeter scale ring on the dial for measuring speed.
- Water resistant to 330 feet (100 meters), suitable for snorkeling and swimming.



Figure 1: Front view of the Invicta 0839 Force Collection Chronograph Watch, showcasing the black dial and polyurethane strap.

## SETUP AND INITIAL ADJUSTMENT

## 1. Setting the Time

1. Locate the crown on the right side of the watch case.
2. Gently pull the crown out to position 2 (the outermost position). The second hand will stop.
3. Rotate the crown clockwise or counter-clockwise to set the hour and minute hands to the desired time. Ensure AM/PM is correctly set if your watch has a 24-hour indicator or date changes at midnight.
4. Once the time is set, push the crown back into position 0 (normal operating position). The second hand will resume movement.

## 2. Setting the Date

1. Pull the crown out to position 1 (the first click).
2. Rotate the crown counter-clockwise to adjust the date. Avoid setting the date between 9:00 PM and 3:00 AM, as this can interfere with the automatic date change mechanism.
3. Once the date is set, push the crown back into position 0.

## 3. Initial Chronograph Reset (if needed)

If the chronograph hands are not aligned to the 12 o'clock position when reset, they may need calibration. Refer to the "Troubleshooting" section for detailed instructions on chronograph hand alignment.



*Figure 2: The Invicta 0839 watch as it appears in its packaging, ready for initial setup.*

## OPERATING THE CHRONOGRAPH FUNCTION

Your Invicta 0839 watch features a chronograph, which is a stopwatch function independent of the main time display.

### Chronograph Pushers:

- **Pusher A (Top Pusher):** Starts and stops the chronograph.
- **Pusher B (Bottom Pusher):** Resets the chronograph hands to zero.

### Using the Chronograph:

1. Ensure the main watch crown is in position 0 (pushed in).
2. Press Pusher A to start the chronograph. The chronograph second hand will begin to move.
3. Press Pusher A again to stop the chronograph. The elapsed time will be indicated by the chronograph hands.
4. To reset the chronograph, press Pusher B. All chronograph hands will return to their zero positions.

## Water Resistance

The Invicta 0839 watch is water resistant to 100 meters (330 feet). This rating makes it suitable for recreational swimming and snorkeling. *It is not suitable for diving, hot showers, or prolonged submersion at depths beyond its rating.* Always ensure the crown is fully pushed in before exposing the watch to water.



Figure 3: The Invicta 0839 watch displayed on a wrist, demonstrating its wearability.

## MAINTENANCE AND CARE

### Cleaning Your Watch

- For general cleaning, wipe the watch case and strap with a soft, damp cloth.

- For polyurethane straps, mild soap and water can be used, but ensure to rinse thoroughly and dry completely.
- Avoid using harsh chemicals, solvents, or abrasive cleaners, as these can damage the watch's finish or seals.

## Battery Replacement

The watch is powered by a Swiss-quartz movement, which requires a battery. When the battery runs low, the watch may stop or the second hand might skip intervals (End-of-Life indicator). Battery replacement should be performed by a qualified watch technician to ensure the water resistance seal is properly maintained.

## Water Resistance Seals

Over time, the gaskets that ensure water resistance can degrade. It is recommended to have the water resistance seals checked by a professional watch service center every 2-3 years, especially if the watch is frequently exposed to water.

## TROUBLESHOOTING

Problem	Possible Cause	Solution
Watch not running	Battery depleted; Crown not pushed in.	Replace battery (professional service recommended); Push crown fully into position 0.
Date not changing at midnight	Time set incorrectly (AM/PM).	Advance the time by 12 hours.
Chronograph hands not resetting to zero	Misalignment due to shock or magnetic fields.	<p><b>Chronograph Hand Alignment Procedure:</b></p> <ol style="list-style-type: none"> <li>1. Pull the crown out to position 2 (time setting position).</li> <li>2. Press Pusher A repeatedly to advance the chronograph second hand to the 12 o'clock position.</li> <li>3. Press Pusher B repeatedly to advance the chronograph minute/1/10th second hands to their 12 o'clock positions.</li> <li>4. Once all chronograph hands are aligned, push the crown back into position 0.</li> </ol>
Condensation inside crystal	Water ingress due to damaged seal or open crown.	Immediately take the watch to a professional for inspection and repair to prevent further damage.

## SPECIFICATIONS

Feature	Detail
Model Number	0839
Movement Type	Swiss Quartz
Case Material	Stainless Steel
Case Diameter	48 Millimetres
Case Thickness	17 Millimetres
Crystal Material	Mineral
Band Material	Polyurethane
Band Width	34 Millimetres
Dial Colour	Black
Water Resistance Depth	100 Meters (330 Feet)
Special Features	Chronograph, Date Display, Tachymeter
Item Weight	408 g



Figure 4: Visual guide for watch case diameters, illustrating various sizes including the 48mm of the Invicta 0839.

## WARRANTY INFORMATION

The warranty for your Invicta 0839 Force Collection Chronograph Watch is provided by the seller of record. For specific details regarding warranty coverage, duration, and claims, please refer to the documentation provided at the time of purchase or contact the seller directly.

## CUSTOMER SUPPORT

Should you require further assistance, have questions not covered in this manual, or need service for your watch, please contact the retailer from whom you purchased the product. You may also visit the official

Invicta website for general product information and authorized service center locations.

For direct inquiries, please refer to the contact information provided with your purchase documentation.