

[Manuals.plus](#) /

› [Room Essentials](#) /

› Room Essentials Clear Globe G40 String Lights Instruction Manual

Room Essentials SG_B004RKEDKW_US

Room Essentials Clear Globe G40 String Lights Instruction Manual

Model: SG_B004RKEDKW_US

INTRODUCTION

This manual provides essential information for the safe and effective use of your Room Essentials Clear Globe G40 String Lights. This set includes 25 clear G40 globe bulbs on a green wire, suitable for both indoor and outdoor applications. Please read these instructions thoroughly before installation and operation.

SAFETY INFORMATION

- **Electrical Safety:** Always ensure the power source matches the product's voltage requirements. Do not overload electrical outlets.
- **Fragile Bulbs:** G40 globe bulbs are made of glass and are delicate. Handle with care during installation, removal, and storage to prevent breakage.
- **Indoor/Outdoor Use:** These lights are designed for both indoor and outdoor use. When used outdoors, ensure all connections are secure and protected from direct water exposure where possible.
- **Installation:** Do not install lights in areas where they may be submerged in water or come into contact with flammable materials.
- **Damaged Products:** Do not use if the wire, bulb sockets, or bulbs are damaged. Discontinue use immediately if any damage is observed.
- **Children and Pets:** Keep out of reach of children and pets to prevent accidental injury or ingestion of small parts.

PACKAGE CONTENTS

- 1 x String Light Set with 25 G40 Clear Globe Bulbs (Green Wire)



Image: Two G40 clear globe bulbs attached to green wire sockets, illustrating the product's design.

SETUP AND INSTALLATION

1. **Unpack Carefully:** Remove the string lights from the packaging. Due to the delicate nature of the glass bulbs, handle the entire set with care.
2. **Inspect Bulbs:** Before hanging, gently check each bulb to ensure it is securely screwed into its socket. Some bulbs may loosen during transit. Tighten any loose bulbs by hand, but do not overtighten.
3. **Plan Placement:** Determine the desired location for your string lights. Consider the length of the strand and the proximity to a power outlet.
4. **Secure the Wire:** Hang the string light wire first, without the bulbs if possible, to prevent accidental breakage during installation. Use appropriate fasteners such as clips, hooks, or cable ties to secure the wire to your desired surface (e.g., patio railing, fence, gazebo). Ensure the wire is not taut to avoid strain on the sockets.
5. **Install Bulbs (if removed):** If you removed the bulbs for easier installation of the wire, carefully screw each G40 bulb back into its socket. Turn clockwise until snug.
6. **Connect to Power:** Once the lights are securely installed and all bulbs are in place, plug the string lights into a standard electrical outlet.



Image: String lights draped across a dark wall, providing ambient lighting for a festive setting, demonstrating a typical installation scenario.

OPERATING INSTRUCTIONS

To operate your Room Essentials Clear Globe G40 String Lights, simply plug the power cord into a compatible electrical outlet. The lights will illuminate immediately. To turn off, unplug the string lights from the outlet. These lights are designed for continuous illumination when plugged in. There is no integrated switch or remote control for this model.

MAINTENANCE

Bulb Replacement

- Always unplug the string lights from the power source before attempting to replace any bulbs.
- Carefully unscrew the burnt-out bulb by turning it counter-clockwise.
- Screw in a new G40 replacement bulb (sold separately) by turning it clockwise until snug. Do not overtighten.
- Only use G40 type replacement bulbs to ensure compatibility and proper operation.

Cleaning and Storage

- Ensure the lights are unplugged and cool before cleaning.
- Wipe bulbs and wires with a soft, dry cloth. Do not use abrasive cleaners or immerse in water.
- For storage, carefully remove the lights from their installation area. It is recommended to remove bulbs before coiling the wire to prevent breakage. Store in a cool, dry place, preferably in the original packaging or a protective container.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Lights do not turn on.	Not plugged in. Power outlet is not working. One or more bulbs are loose or burnt out. Damaged wire or socket.	Ensure the plug is fully inserted into a working outlet. Test the outlet with another device. Check and tighten all bulbs. Replace any burnt-out bulbs. Inspect the wire and sockets for visible damage. If damaged, discontinue use.
Some bulbs are not lighting up.	Loose bulb. Burnt-out bulb.	Gently tighten the non-working bulb. Replace the burnt-out bulb with a new G40 bulb.
Bulbs break easily during installation.	Excessive force or impact. Bulbs are delicate glass.	Handle bulbs with extreme care. Consider installing the wire first, then screwing in bulbs.

SPECIFICATIONS

- **Brand:** Room Essentials
- **Model Number:** SG_B004RKEDKW_US
- **Bulb Type:** G40 Clear Globe Bulbs
- **Number of Bulbs:** 25
- **Wire Color:** Green
- **Usage:** Indoor/Outdoor
- **Power Source:** Corded Electric
- **Voltage:** 25 Volts
- **Wattage:** 5 watts
- **Individual Bulb Dimensions (L x W x H):** 1 x 1 x 1 inches (Note: This refers to individual bulb or packaging dimensions, not the full string length.)
- **Water Resistance Level:** Water Resistant
- **UPC:** 028208871758, 028208202897, 028208871833



Image: A segment of the string lights with clear G40 bulbs and green wire, illustrating the product's appearance when installed.

WARRANTY AND SUPPORT

Specific warranty information for this product is not detailed in the provided documentation. For any product support, replacement parts, or warranty inquiries, please contact the retailer or manufacturer directly. Retain your proof of purchase for any warranty claims.

Manufacturer: Target



© 2023 Room Essentials. All rights reserved.

This manual is for informational purposes only. Specifications are subject to change without notice.