

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

- › [Camp Chef](#) /
- › [Camp Chef Everest 2 Burner Stove User Manual](#)

Camp Chef MS2HP

Camp Chef Everest 2 Burner Stove

USER MANUAL

1. Product Overview

The Camp Chef Everest 2 Burner Stove is a powerful and portable cooking solution designed for outdoor enthusiasts. Featuring two 20,000 BTU burners, it offers robust heating capabilities for various cooking needs. Its compact design with a folding lid ensures easy transport and storage, making it ideal for camping trips and outdoor excursions. The stove is constructed with durable materials, including a stainless steel drip tray for easy cleaning.



The Camp Chef Everest 2 Burner Stove, shown with its lid open, revealing the two burners and grate. A propane cylinder is attached to the side.

2. Safety Information

Always prioritize safety when operating gas appliances. This stove is designed for outdoor use only in well-ventilated areas. Do not operate indoors or in enclosed spaces. Ensure all connections are secure and leak-free before lighting. Keep flammable materials away from the stove during operation.

Proposition 65 Warning: This product can expose you to chemicals including carbon monoxide, which is known to the State of California to cause birth defects or other reproductive harm. For more information go to www.P65Warnings.ca.gov.

Gas Leak Check: Before each use, apply a soapy water solution to all gas connections. Bubbles indicate a leak. Tighten connections or replace parts as necessary. Never use a flame to check for leaks.

3. Package Contents

Verify that all components are present upon unpacking:


- Camp Chef Everest 2 Burner Stove unit
- Propane cylinder adapter (for 1 lb propane cylinders)
- Stainless steel drip tray
- Integrated carry handle

4. Setup

Follow these steps for initial setup:

1. Place the stove on a stable, level, non-combustible surface away from any flammable materials.
2. Open the folding lid. The lid also functions as a three-sided wind screen.
3. Ensure the burner grates are properly seated over the burners and the stainless steel drip tray is in place.
4. Connect the propane cylinder adapter to the stove's gas inlet.
5. Attach a 1 lb propane cylinder to the adapter, ensuring a tight, leak-free connection. Perform a gas leak check as described in the Safety Information section.

DESIGNED FOR AVID OUTDOORSMEN

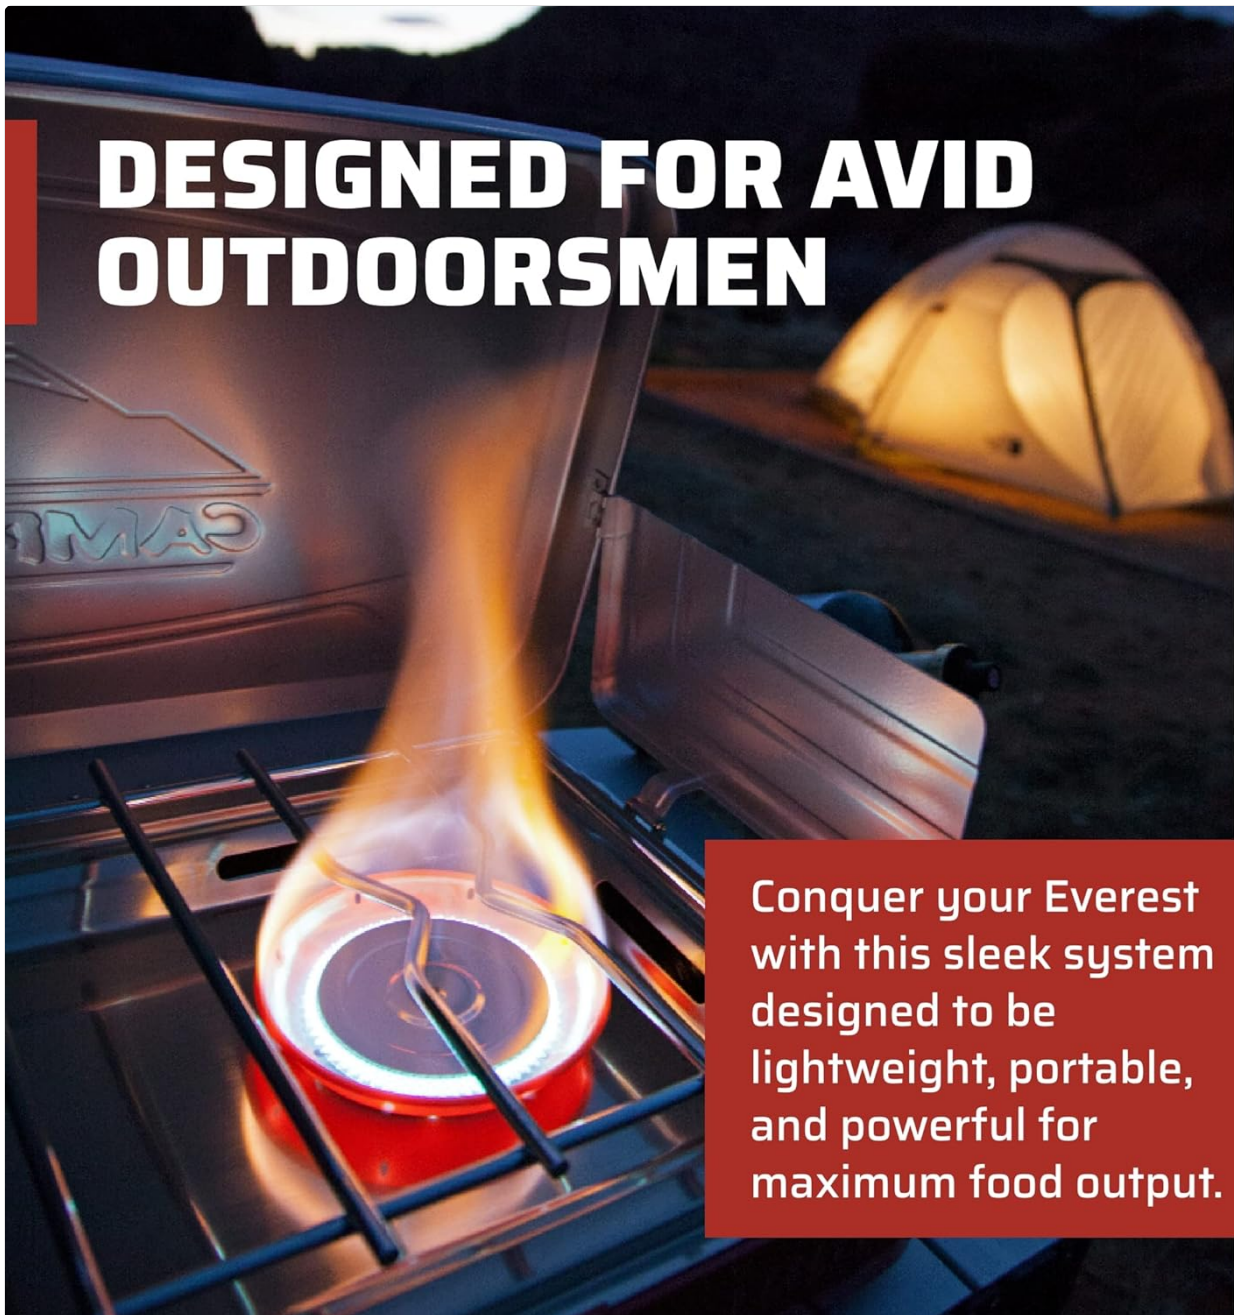

Conquer your Everest with this sleek system designed to be lightweight, portable, and powerful for maximum food output.

The stove is shown set up on a table, ready for use, with its lid open to act as a wind screen.

5. Operating Instructions

The Everest stove features matchless ignition for convenience.

1. Ensure the propane cylinder is connected and the gas valve on the cylinder is open.
2. Turn the desired burner control knob to the 'HIGH' position.
3. Immediately press the red igniter button located on the front panel. You should hear a click and see the burner ignite. If it does not ignite after a few attempts, turn off the gas, wait 5 minutes, and try again. If still unsuccessful, use a long match or lighter to ignite the burner manually.
4. Once ignited, adjust the flame intensity by rotating the control knob to achieve the desired heat level, from a gentle simmer to a powerful 20,000 BTU output.
5. The folding lid provides a 3-sided wind screen, helping to maintain consistent heat distribution and protect the

flame from wind.

6. After cooking, turn the burner control knobs to the 'OFF' position and close the gas valve on the propane cylinder.

**20K BTUS/
HR. BURNERS**

Two, 20K BTUs/Hr.
burners combine for a
total for 40K BTUs/Hr.



A close-up view of one of the stove's burners, showing a strong, blue flame indicating proper operation.



LIGHTWEIGHT AND PORTABLE

Extremely light
and latches like a
suitcase once lid is
shut for convenient
transportation.

Detail of the stove's control panel, highlighting the red matchless ignition button and a black burner control knob.

6. Maintenance

Regular cleaning and maintenance will ensure the longevity and optimal performance of your Camp Chef Everest stove.

- **Cleaning:** Allow the stove to cool completely before cleaning. Remove the burner grates and stainless steel drip tray. Wash these components with warm, soapy water. Wipe down the stove body with a damp cloth. Avoid abrasive cleaners that could damage the finish.
- **Storage:** Ensure the stove is clean and dry before storing. Close the lid and secure the latches. Store in a cool, dry place away from direct sunlight and extreme temperatures.
- **Inspection:** Periodically inspect the gas hose and connections for any signs of wear, cracks, or damage. Replace any damaged parts immediately.

7. Troubleshooting

If you encounter issues with your stove, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Burner does not ignite	No gas flow, clogged burner, faulty igniter, low propane.	Check propane cylinder connection and level. Clear burner ports. Use manual ignition if igniter fails.
Low flame or inconsistent flame	Low propane, clogged burner, regulator issue.	Replace propane cylinder. Clean burner. Ensure regulator is properly connected.
Gas odor detected	Gas leak.	Immediately turn off gas. Perform soapy water leak test. Do not operate if leak persists. Contact customer support.

For issues not listed here, or if solutions do not resolve the problem, contact Camp Chef customer support.

8. Specifications

Feature	Detail
Brand	Camp Chef
Model Name	MS2HP
Fuel Type	Propane
Material	Stainless Steel
Product Dimensions (LxWxH)	23.5" x 13.5" x 4.25"
Maximum Energy Output	20,000 British Thermal Units per burner (40,000 BTU total)
Item Weight	12 Pounds
UPC	033246211312, 066519441734, 707430984879


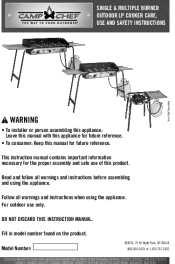



9. Warranty & Support

The Camp Chef Everest 2 Burner Stove comes with a **1-year limited warranty** from the manufacturer. This warranty covers defects in materials and workmanship under normal use.

For warranty claims, technical support, or replacement parts, please contact Camp Chef customer service directly. Refer to the official Camp Chef website for the most current contact information.

An official User Guide PDF is also available for download: [Download User Guide \(PDF\)](#)

Related Documents - MS2HP

 <p>CAMP CHEF THE WAY TO COOK OUTDOORS®</p> <p>EVEREST HIGH PRESSURE STOVE WARNING & INSTRUCTION BOOKLET MODEL: MSHPX</p>	<p>Camp Chef Everest MSHPX High Pressure Stove: Safety and Instruction Manual</p> <p>Comprehensive safety warnings, instructions, parts list, setup guide, maintenance, and warranty information for the Camp Chef Everest MSHPX High Pressure Stove.</p>
 <p>CAMP CHEF THE WAY TO COOK OUTDOORS®</p> <p>SINGLE & MULTIPLE BURNER OUTDOOR LP COOKERS CARE, USE, AND SAFETY INSTRUCTIONS</p> <p>WARNING</p> <ul style="list-style-type: none">• To include or person assembling this appliance.• To ensure this manual is read before use.• To ensure this manual is read before use. <p>This appliance is not to be used for cooking. Important information is provided for the proper assembly and use of this product.</p> <p>Read and follow all warnings and instructions before assembling and using the appliance.</p> <p>Follow all warnings and instructions when using the appliance. For outdoor use only.</p> <p>DO NOT SECURE THIS INSTRUCTION MANUAL.</p> <p>Fill in order number found on the product.</p> <p>Model Number: _____</p> <p>DATE: 11/14/2023 REVISED: 11/14/2023</p>	<p>Camp Chef Outdoor LP Cooker: Care, Use, and Safety Instructions</p> <p>Comprehensive guide for Camp Chef single and multiple burner outdoor LP cookers, covering assembly, safe operation, maintenance, and warranty information. Essential for safe and optimal outdoor cooking.</p>
 <p>CAMP CHEF THE WAY TO COOK OUTDOORS®</p> <p>SIDEKICK 14 WARNINGS & INSTRUCTIONS MODEL: PG14BB</p>	<p>Camp Chef Sidekick 14 PG14BB: Warnings & Instructions Manual</p> <p>Comprehensive safety warnings, assembly, operation, and maintenance guide for the Camp Chef Sidekick 14 (Model PG14BB) portable outdoor propane cooking appliance.</p>
 <p>CAMP CHEF THE WAY TO COOK OUTDOORS®</p> <p>PROFESSIONAL OUTDOOR OVEN</p> <p>WARNING & INSTRUCTION BOOKLET MODEL: COVENT</p>	<p>Camp Chef Professional Outdoor Oven (COVENT) - User Manual and Safety Instructions</p> <p>Comprehensive user manual and safety instructions for the Camp Chef Professional Outdoor Oven, Model COVENT. Learn about setup, operation, cleaning, maintenance, and warranty information.</p>
 <p>CAMP CHEF THE WAY TO COOK OUTDOORS®</p> <p>WOODWIND PRO PELLET GRILL OWNER'S MANUAL</p> <p>WARNING & INSTRUCTION BOOKLET MODEL: PG24WWSB, PG36WWSB</p>	<p>Camp Chef Woodwind Pro Pellet Grill Owner's Manual</p> <p>Comprehensive owner's manual for the Camp Chef Woodwind Pro pellet grill (models PG24WWSB, PG36WWSB), covering safety, operation, maintenance, and troubleshooting for optimal outdoor cooking and smoking experiences.</p>



[Camp Chef PG24WWSB/PG36WWSB Pellet Grill Owner's Manual](#)

Comprehensive owner's manual for Camp Chef PG24WWSB and PG36WWSB pellet grills, covering safety, operation, maintenance, troubleshooting, and warranty information for optimal outdoor cooking.