

Westinghouse 7863100

Westinghouse 7863100 Quince 24-Inch Chrome Indoor Ceiling Fan Instruction Manual

Model: 7863100

PRODUCT OVERVIEW

The Westinghouse Quince 24-inch indoor ceiling fan provides efficient air circulation and integrated lighting. This model features a sleek chrome finish, streamlined opal frosted glass light fixture, and reversible wengue/beech blades. Designed for rooms up to 80 square feet, it offers three fan speeds and a reversible switch for year-round comfort.

Key Features

- Two-light 24-inch reversible six-blade indoor ceiling fan for rooms up to 80 square feet (8 by 10 feet)
- Silicon steel motor with dual capacitor; three fan speeds (high/medium/low); reversible switch for year-round use
- Airflow: 1,270 cfm; Energy Usage: 25 watts without light; Airflow Efficiency: 39 cfm per watt. Slope Angle (in degrees): 18
- Includes 3/4-Inch by 4-Inch down rod, 78-Inch lead wire, and two candelabra-base 40-watt G16-1/2 light bulbs
- Lifetime warranty on motor; two-year warranty on all other parts



Image of the Westinghouse Quince 24-inch Chrome Indoor Ceiling Fan with its light kit and light-colored blades.

IMPORTANT SAFETY INFORMATION

Read and save these instructions. To reduce the risk of fire, electric shock, or personal injury, observe the following:

- Installation must be performed by a qualified electrician in accordance with all local and national electrical codes.
- Disconnect power at the main circuit breaker or fuse box before installation, cleaning, or servicing.
- Ensure the mounting structure can securely support the fan's weight (approximately 11 pounds).
- Do not bend blade holders during installation or cleaning. Ensure blades are properly balanced.
- Keep foreign objects clear of rotating fan blades.

INSTALLATION INSTRUCTIONS

Package Contents

- Ceiling Fan Motor Assembly
- Fan Blades (6)
- Blade Brackets
- Down Rod (3/4-inch by 4-inch)
- Canopy
- Mounting Bracket
- Light Kit with Opal Frosted Glass
- Candelabra-base 40-watt G16-1/2 Light Bulbs (2)
- Hardware Pack (screws, washers, wire nuts)
- Lead Wire (78-inch)

Required Tools

- Phillips screwdriver

- Flathead screwdriver
- Adjustable wrench
- Wire stripper
- Electrical tape
- Step ladder

Step-by-Step Installation

1. **Turn Off Power:** Before beginning, ensure power is turned off at the circuit breaker or fuse box to prevent electrical shock.
2. **Mounting Bracket Installation:** Secure the mounting bracket to the ceiling outlet box. Ensure the outlet box is securely fastened to the building structure and can support the fan's weight.
3. **Assemble Down Rod:** Insert the down rod through the canopy and then through the fan motor assembly. Secure with the provided pin and screw.
4. **Hang Fan:** Carefully lift the fan assembly and hang it from the mounting bracket using the hook provided on the down rod ball. This allows for hands-free wiring.
5. **Wiring Connections:** Connect the fan's electrical wires to the household wiring according to local electrical codes. Typically, this involves connecting black to black (hot), white to white (neutral), and green/bare copper to green/bare copper (ground). Use wire nuts to secure connections.
6. **Secure Canopy:** Once wiring is complete, carefully push the canopy up to the ceiling and secure it to the mounting bracket with the screws.
7. **Attach Blades:** Attach each fan blade to its blade bracket using the provided screws. Then, attach the blade assemblies to the motor housing. Ensure all screws are tightened securely. The blades are reversible, offering wengue or beech finishes.
8. **Install Light Kit:** Connect the light kit wires to the corresponding wires from the fan motor. Secure the light kit to the bottom of the fan motor housing.
9. **Install Glass Shade and Bulbs:** Insert the two candelabra-base 40-watt G16-1/2 light bulbs into the sockets. Carefully attach the opal frosted glass shade to the light kit.
10. **Restore Power:** Turn the power back on at the circuit breaker.



The Westinghouse Quince fan with its light-colored blade option, suitable for various room decors.



The Westinghouse Quince fan showcasing its dark-colored blade option, providing a different aesthetic.

OPERATING YOUR CEILING FAN

The Westinghouse Quince ceiling fan is operated using two pull chains.

Fan Speed Control

One pull chain controls the fan speeds. Pull the chain repeatedly to cycle through the following settings:

1. High Speed
2. Medium Speed
3. Low Speed
4. Off

Light Control

The second pull chain controls the integrated light kit. Pull the chain once to turn the light on, and pull it again to turn the light off.

Reversible Function

A reversible switch on the motor housing allows you to change the direction of the fan blades for year-round use.

- **Summer Operation:** Set the switch to allow blades to rotate counter-clockwise, pushing air downwards to create a cooling effect.
- **Winter Operation:** Set the switch to allow blades to rotate clockwise, drawing air upwards to recirculate warm air from the ceiling and reduce cold spots.

Note: The fan must be off and completely stopped before changing the direction of rotation.

CARE AND MAINTENANCE

- **Cleaning:** Periodically clean the fan with a soft, damp cloth. Do not use abrasive cleaners or solvents, as these can damage the finish or blades.
- **Blade Care:** To prevent warping, ensure blades are not exposed to direct sunlight or high humidity.
- **Light Bulb Replacement:** When replacing bulbs, ensure the power is off. Use only candelabra-base 40-watt G16-1/2 bulbs or equivalent LED bulbs.
- **Tighten Fasteners:** Check all screws and fasteners annually to ensure they are secure.

TROUBLESHOOTING GUIDE

Problem	Possible Cause	Solution
Fan does not start	No power to the fan; loose wire connections; motor switch in off position.	Check circuit breaker/fuse. Ensure all wire connections are secure. Pull the fan speed chain to ensure it's not in the "off" position.
Fan wobbles	Loose blade screws; unbalanced blades; loose mounting bracket.	Tighten all blade screws. Check for bent blade holders. Use a blade balancing kit (not included) if necessary. Ensure the mounting bracket is securely fastened.
Light does not work	Loose bulb; faulty bulb; loose wire connection in light kit.	Ensure bulbs are screwed in tightly. Replace bulbs if necessary. Check light kit wiring connections.
Noisy operation	Loose screws; motor housing rubbing; fan not level.	Check and tighten all screws. Ensure the canopy is not touching the ceiling. Verify the fan is level.

PRODUCT SPECIFICATIONS

Brand	Westinghouse
Model Name	Quince
Model Number	7863100
Color	Chrome

Electric Fan Design	Ceiling Fan
Power Source	Hardwire
Special Feature	Pull_chain
Recommended Uses	Air Circulation
Mounting Type	Downrod
Controller Type	Button Control (Pull Chain)
Material	Glass (Shade), Plastic (Blades)
Number of Speeds	3
Wattage	25 watts (without light)
Number of Blades	6
Air Flow Capacity	1270 Cubic Feet Per Minute (cfm)
Voltage	202 Volts
Indoor Outdoor Usage	Indoor
Item Weight	11 Pounds
UPC	024034786310

WARRANTY INFORMATION

The Westinghouse Quince ceiling fan model 7863100 comes with **lifetime motor warranty** and a **two-year warranty** on all other parts. For detailed warranty terms and conditions, please refer to the official Westinghouse website or contact customer support.

CUSTOMER SUPPORT

For technical assistance, replacement parts, or warranty claims, please contact Westinghouse customer support.

You can visit the official Westinghouse website for more information:[Westinghouse Store on Amazon](#)

Please have your model number (7863100) and purchase date available when contacting support.