

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [Nespresso](#) /

› [Nespresso Pixie Espresso Maker C60-US-TI-NE Instruction Manual](#)

Nespresso C60-US-TI-NE

Nespresso Pixie Espresso Maker

MODEL: C60-US-TI-NE

Introduction

This manual provides essential information for the safe and efficient operation of your Nespresso Pixie C60-US-TI-NE Espresso Maker. Please read these instructions carefully before first use and keep them for future reference.

The Nespresso Pixie Espresso Maker is designed for single-serve espresso and lungo preparation, featuring rapid heating and user-friendly controls. It heats up in approximately 25-30 seconds, ensuring quick coffee preparation.

Key features include programmable buttons for espresso and lungo, a folding drip tray to accommodate various cup sizes, backlight indicators, water level detection, automatic power-off for energy saving, and an integrated used capsule container.

Safety Information

- Always ensure the machine is placed on a stable, flat, heat-resistant surface.
- Do not immerse the machine, power cord, or plug in water or any other liquid.
- Keep the appliance and its cord out of reach of children.
- Unplug the machine from the power outlet when not in use and before cleaning.
- Do not operate the machine with a damaged cord or plug. Contact customer support for repairs.
- Use only Nespresso OriginalLine capsules with this machine.
- Never open the capsule lever during brewing.

Package Contents

Upon unpacking, verify that all components are present:

- Nespresso Pixie Machine
- Information Folder
- Instruction Booklet (this manual)
- Welcome Pack Containing 16 Nespresso Grands Crus Capsules

Setup

1. **Unpack the Machine:** Remove all packaging materials and place the machine on a clean, stable surface.
2. **Rinse the Water Tank:** Remove the water tank from the back of the machine. Wash it with fresh drinking water and reattach it securely.
3. **Fill the Water Tank:** Fill the water tank with fresh drinking water up to the maximum level indicated.



Image: Side view of the Nespresso Pixie Espresso Maker, highlighting the transparent water reservoir at the back.

4. **Plug In:** Connect the power cord to a grounded electrical outlet.
5. **First Use Rinse:** Place a container under the coffee outlet. Press either the Espresso or Lungo button to start the rinsing cycle. Repeat this process 2-3 times to clean the internal system.

Operating Instructions

1. **Turn On:** Press either the Espresso or Lungo button to turn on the machine. The buttons will flash while heating up (approx. 25-30 seconds) and glow steadily when ready.
2. **Insert Capsule:** Lift the metal lever to open the capsule slot. Insert a Nespresso OriginalLine capsule. Close the lever firmly.





Image: Front view of the Nespresso Pixie Espresso Maker with the metal lever raised, revealing the capsule insertion slot.

3. **Place Cup:** Place your desired cup under the coffee outlet. For larger cups, the drip tray can be folded up.
4. **Brew Coffee:** Press the Espresso button for a short shot or the Lungo button for a longer shot. The machine will automatically stop when the programmed volume is reached.

Your browser does not support the video tag.

Video: Demonstration of the Nespresso Pixie Espresso Maker in use, showing capsule insertion and coffee brewing.

5. **Eject Capsule:** After brewing, lift the lever to automatically eject the used capsule into the internal container.
6. **Power Off:** The machine will automatically turn off after 9 minutes of inactivity to save energy. To manually turn off, press and hold both coffee buttons simultaneously for 3 seconds.

Maintenance

- **Daily Cleaning:** Empty and rinse the drip tray and used capsule container daily. Wipe the machine exterior with a damp cloth.
- **Water Tank Cleaning:** Regularly clean the water tank with mild detergent and rinse thoroughly.
- **Descaling:** Descale the machine every 3-6 months, or as indicated by the machine's lights, using a Nespresso descaling kit. Follow the instructions provided with the descaling kit.

Your browser does not support the video tag.

Video: Overview of the Nespresso Pixie Espresso Machine, including aspects of its design and ease of use, which can aid in understanding maintenance access.

Troubleshooting

Refer to the table below for common issues and their solutions:



Image: A detailed troubleshooting table with common problems and recommended solutions for the Nespresso Pixie Espresso Maker.

- **No light:** Machine switched off automatically; press ON/OFF button. Check mains plug, voltage, fuse.
- **No coffee, no water:** Check the water tank; if empty, fill with potable water. Descale if necessary. Lift the lever. Press one coffee button and wait until water comes out.
- **Coffee is not hot enough:** Preheat cup. Descale the machine if necessary.
- **The lever cannot be closed completely:** Empty the capsule container. Check that there is not a capsule blocked inside the machine.
- **Leakage or unusual coffee flow:** Check that the water tank is in position. Do not over extract more than 40ml for espresso capsules and 110ml for lungo capsules.
- **Lights flash irregularly:** Call the Nespresso Club. Exit descaling procedure (see paragraph on descaling).
- **No coffee, water just comes out (despite inserted capsule):** In case of difficulties, call the Nespresso Club.
- **Machine switches itself off:** To save energy, the machine will turn itself off after 9 minutes of inactivity. See paragraph on "Energy saving concept".
- **Front light is red:** Water tank is empty or needs to be cleaned.

Specifications

Feature	Detail
Brand	Nespresso
Model Number	C60-US-TI-NE
Color	Black
Product Dimensions	11.81"D x 7.09"W x 11.81"H
Special Feature	Removable Tank
Coffee Maker Type	Espresso Machine
Coffee Input Type	Capsules
Operation Mode	Fully Automatic

Water Tank Capacity	24 Ounce (approx. 0.7 Liters)
Item Weight	6.82 pounds
Heat-up Time	25-30 seconds
Auto Power-off	After 9 minutes

Warranty and Support

Your Nespresso Pixie Espresso Maker comes with a standard manufacturer's warranty. Please refer to the warranty card included in your package for specific terms and conditions.

For technical assistance, troubleshooting beyond this manual, or to order Nespresso capsules, please contact the Nespresso Club. Contact details can be found on the Nespresso website or in the included information folder.