

HTC Inspire

HTC Inspire 4G User Manual

Model: Inspire

INTRODUCTION

Welcome to the user manual for your HTC Inspire 4G smartphone. This guide provides essential information on setting up, operating, maintaining, and troubleshooting your device. The HTC Inspire 4G is a powerful Android-based smartphone featuring a large Super LCD display, an 8MP camera, and robust connectivity options including Wi-Fi and 3G support.

Please read this manual thoroughly to ensure optimal performance and longevity of your device.

SETUP

1. Unpacking and Initial Inspection

Carefully remove all components from the packaging. Ensure the following items are present:

- HTC Inspire 4G Handset
- Battery
- Charger
- USB Cable

2. Inserting the SIM Card and Battery

Before powering on your device, you must insert the SIM card and battery.

1. Locate the battery cover on the back of the phone. Gently remove it by lifting from the designated notch.
2. Insert your SIM card into the SIM card slot with the gold contacts facing down and the cut-off corner aligned correctly.
3. Align the battery's gold contacts with the contacts in the battery compartment and gently press it into place.
4. Replace the battery cover, ensuring it clicks securely into position.

3. Charging the Battery

For optimal performance, fully charge the battery before first use. Connect the USB cable to the charger and then to the phone's charging port. Plug the charger into a power outlet. The charging indicator will illuminate.



OPERATING YOUR DEVICE

1. Powering On/Off

- To power on: Press and hold the Power button until the HTC logo appears.
- To power off: Press and hold the Power button until the phone options menu appears, then select 'Power off'.

2. Basic Navigation

The HTC Inspire 4G features a responsive touchscreen for navigation. Use gestures such as tap, swipe, pinch-to-zoom, and long-press to interact with the interface. Physical buttons include Power, Volume Up/Down, and capacitive touch buttons for Home, Menu, Back, and Search below the screen.

3. Making Calls and Sending Messages

- To make a call: Tap the Phone icon, enter the number using the dial pad, and tap the Call button.
- To send a message: Tap the Messages icon, tap 'New message', enter the recipient and your message, then tap Send.

4. Connecting to Wi-Fi

To connect to a Wi-Fi network:

1. Go to Settings > Wireless & networks > Wi-Fi settings.
2. Ensure Wi-Fi is turned on.
3. Select your desired network from the list. If prompted, enter the network password.

5. Using the Camera

The HTC Inspire 4G is equipped with an 8MP camera with auto-focus and LED flash.

- To open the camera: Tap the Camera icon on the home screen or in the applications menu.
- To take a photo: Frame your shot and tap the Shutter button on the screen.
- To record video: Switch to video mode within the camera application and tap the Record button.

6. GPS Functionality

The device includes GPS for location-based services and navigation. Ensure GPS is enabled in your settings for applications requiring location data.



Figure 2: Front, side, and rear views of the HTC Inspire 4G.

MAINTENANCE

1. Cleaning Your Device

Use a soft, lint-free cloth to clean the screen and body of your phone. Avoid using abrasive cleaners or solvents, which can damage the device's finish.

2. Battery Care

- Avoid exposing the battery to extreme temperatures.
- Use only the original or approved charger.
- Do not puncture or disassemble the battery.

3. Software Updates

Periodically check for software updates to ensure your device has the latest features and security enhancements. Updates can typically be found in Settings > About phone > Software updates.

TROUBLESHOOTING

This section addresses common issues you might encounter with your HTC Inspire 4G.

Problem	Possible Solution
Device does not turn on	Ensure the battery is charged. Press and hold the Power button for at least 10 seconds.
Cannot connect to Wi-Fi	Check Wi-Fi settings, ensure the network password is correct, and restart your router.
Applications are slow or unresponsive	Close unused applications. Restart the device. Consider clearing app caches or performing a factory reset (backup data first).
Camera not working	Restart the device. Check if any other app is using the camera. Clear the camera app's cache.

If problems persist, contact customer support or visit the official HTC support website.

SPECIFICATIONS










Below are the technical specifications for the HTC Inspire 4G:

Feature	Detail
Operating System	Android
RAM	4 GB
Product Dimensions	12.29 x 1.17 x 6.81 cm
Item Weight	163.29 g
Batteries	1 Lithium Ion battery required
Item Model Number	Inspire
Wireless Communication	Wi-Fi
Connectivity Technologies	Wi-Fi
GPS	GPS
Special Features	Auto Focus, Camera, GPS, LED Flash, Wifi
Display Technology	LCD
Primary Device Interface	Touchscreen
Resolution	720p
Other Camera Features	Front, Rear
Colour	Black
Phone Talk Time	6 Hours
Manufacturer	HTC
CPU Model	Snapdragon
CPU Speed	1 GHz

WARRANTY AND SUPPORT

Your HTC Inspire 4G comes with a limited manufacturer's warranty. Please refer to the warranty card included in your product packaging for specific terms and conditions, including coverage period and limitations.

For technical support, troubleshooting assistance, or to inquire about warranty service, please visit the official HTC support website or contact their customer service line. Keep your proof of purchase handy for any warranty claims.

<p>Windows® Phone 8S by HTC® User guide</p>  <p>HTC Hotline Support: 1-866-449-8358 7 days a week 6am EST to 5am EST</p> 	<p>HTC Windows Phone 8S User Guide</p> <p>A comprehensive user guide for the HTC Windows Phone 8S, covering setup, features, camera, calls, messaging, email, internet, and security.</p>
<p>T-Mobile myTouch 3G Slide User guide</p>  	<p>T-Mobile myTouch 3G Slide User Guide HTC Smartphone</p> <p>Comprehensive user guide for the T-Mobile myTouch 3G Slide smartphone by HTC. Learn setup, features, calls, messages, apps, settings, and more.</p>
<p>htc</p> <p>User Guide</p>  <p>HTC U23 pro</p>	<p>HTC U23 pro User Guide: Comprehensive Smartphone Manual</p> <p>This official user guide for the HTC U23 pro smartphone provides comprehensive details on setup, features, camera capabilities, VIVERSE integration, battery management, security, and connectivity. Learn to optimize your device and explore HTC's ecosystem with this manual.</p>
<p>Your HTC Raider User guide</p>  <p>HTC Hotline Support: 1-866-449-8358 7 days a week 6am EST to 5am EST</p> 	<p>HTC Raider User Guide</p> <p>Comprehensive user guide for the HTC Raider smartphone, covering setup, features, operations, and troubleshooting.</p>
 <p>HTC Desire 616 dual sim User guide</p>	<p>HTC Desire 616 dual sim User Guide</p> <p>Comprehensive user guide for the HTC Desire 616 dual sim smartphone, covering setup, features, calls, messages, internet, apps, and settings.</p>
<p>How to force restart HTC Warhawk</p> <p>IFIXIT</p> <p>How to force restart HTC Warhawk</p> <p>If your phone will not turn on or respond, chances are you just need to reset it by removing the battery for a moment or so.</p> <p>Written By: Chardine</p>  <p>The document was generated on 08/01/2012 at 08:00:00 AM (GMT-7) 08/01/2012 08:00:00 AM</p>	<p>How to Force Restart HTC Warhawk Smartphone Guide</p> <p>A step-by-step guide to force restart your HTC Warhawk phone by removing and reinserting the battery. Essential troubleshooting for unresponsive devices.</p>