

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [Sony](#) /
- › [Sony 3D Blu-ray Player with Wi-Fi and Internet Apps User Manual](#)

## Sony BDP-BX58

# Sony 3D Blu-ray Player with Wi-Fi and Internet Apps User Manual

Model: BDP-BX58

## INTRODUCTION

---

This manual provides essential information for the safe and efficient operation of your Sony BDP-BX58 3D Blu-ray Player. Please read it thoroughly before use and retain it for future reference.

The Sony BDP-BX58 is designed to deliver a high-quality entertainment experience, supporting Full HD 1080p Blu-ray Disc movies, including 3D content, and upscaling DVDs to near HD quality. It features built-in Wi-Fi for seamless access to a wide range of online streaming services and media sharing capabilities.

## SAFETY INFORMATION

---

Always observe the following safety precautions to prevent electric shock, fire, or damage to the unit.

- Do not expose the unit to rain or moisture.
- Do not open the casing. Refer servicing to qualified personnel only.
- Ensure proper ventilation. Do not block ventilation openings.
- Use only the power supply specified for this unit.
- Keep the unit away from heat sources and direct sunlight.
- Avoid placing heavy objects on top of the unit.

## WHAT'S IN THE BOX

---

Verify that all the following items are included with your Sony BDP-BX58 Blu-ray Player:

- Sony BDP-BX58 Blu-ray Disc/DVD Player
- High Speed HDMI cable
- Night Glow Remote Control
- 2 AA batteries (for remote control)



Image: The Sony BDP-BX58 Blu-ray Player, its remote control, and an HDMI cable. The player is black with a sleek design, and the remote is also black with various colored buttons. The HDMI cable is coiled next to the player.

## SETUP

---

### 1. Connecting to Your TV

Use the supplied High Speed HDMI cable to connect the Blu-ray player to your TV. HDMI provides both video and audio signals through a single cable.

1. Connect one end of the HDMI cable to the HDMI OUT port on the back of the Blu-ray player.
2. Connect the other end of the HDMI cable to an HDMI IN port on your TV. Note the HDMI input number (e.g., HDMI 1, HDMI 2) on your TV.

### 2. Power Connection

1. Plug the power cord into the AC IN jack on the back of the Blu-ray player.
2. Plug the other end of the power cord into a wall outlet.

### 3. Initial Setup Wizard (First Use)

The first time you turn on the player, an Initial Setup Wizard will guide you through essential settings.

1. Turn on your TV and select the correct HDMI input source.
2. Press the **POWER** button on the Blu-ray player or remote control.
3. Follow the on-screen instructions to configure language, network settings (Wi-Fi), video output, and audio output.

### 4. Network Connection (Wi-Fi)

The BDP-BX58 features built-in Wi-Fi for internet connectivity.

1. During the Initial Setup Wizard, select **Wireless Setup**.
2. Choose your Wi-Fi network from the list of available networks.
3. Enter your Wi-Fi password (security key) using the on-screen keyboard and remote control.
4. Confirm the connection.

## OPERATING

---

### 1. Basic Disc Playback

1. Turn on the Blu-ray player and your TV.
2. Press the **OPEN/CLOSE** button on the player or remote to open the disc tray.
3. Place a Blu-ray Disc or DVD on the disc tray with the label side facing up.
4. Press the **OPEN/CLOSE** button again to close the tray.
5. Playback will usually start automatically. If not, select **Play** from the disc menu.

## 2. 3D Blu-ray Playback

To enjoy 3D content, you will need a 3D-compatible TV, 3D glasses, and a 3D Blu-ray Disc.

1. Ensure your player is connected to a 3D-compatible TV via HDMI.
2. Insert a 3D Blu-ray Disc.
3. The player will automatically detect the 3D content. Follow any on-screen prompts from your TV to activate 3D mode.

## 3. Streaming Online Content

With built-in Wi-Fi, you can access various online streaming services.

1. Ensure the player is connected to the internet via Wi-Fi.
2. Press the **HOME** button on the remote control to access the main menu.
3. Navigate to the "Video" or "Network" section to find available streaming apps like Netflix, YouTube, HuluPlus, Pandora, etc.
4. Select the desired app and follow the on-screen instructions to log in or browse content.

## 4. Using the Media Remote App

Transform your iPhone, iPad, or compatible Android phone into a versatile remote control with the free "Media Remote" app.

1. Download the "Media Remote" app from your device's app store.
2. Ensure your mobile device and the Blu-ray player are connected to the same Wi-Fi network.
3. Launch the app and follow the instructions to pair it with your Blu-ray player.
4. The app allows for remote control functions and search capabilities.

## 5. USB and DLNA Media Playback

You can play videos, photos, and music from a USB storage device or DLNA Certified devices on your home network.

- **USB:** Insert a USB device into the USB port on the front of the player. Navigate to the "Photo," "Music," or "Video" section from the HOME menu and select "USB."
- **DLNA:** Ensure your DLNA Certified device (e.g., PC, NAS) is on the same network. From the HOME menu, navigate to the "Network" section and select "DLNA" to browse shared media.

## MAINTENANCE

---

- **Cleaning the Unit:** Wipe the exterior of the unit with a soft, dry cloth. Do not use abrasive pads, scouring powder, or solvents such as alcohol or benzene.
- **Cleaning Discs:** Wipe discs with a clean, soft, dry cloth from the center outwards. Do not use solvents.
- **Firmware Updates:** Periodically check for firmware updates via the network connection to ensure optimal performance and access to new features. Access this option through the player's settings menu.

## TROUBLESHOOTING

---

Problem	Solution
No power.	Check if the power cord is securely connected to the player and the wall outlet.
No picture or distorted picture.	Ensure the HDMI cable is properly connected. Select the correct HDMI input on your TV. Check TV resolution settings.
No sound or distorted sound.	Check audio cable connections (if not using HDMI). Adjust volume on TV or audio receiver. Check player's audio output settings.
Disc does not play.	Ensure the disc is clean and free of scratches. Check if the disc format is supported by the player.
Cannot connect to Wi-Fi.	Verify Wi-Fi password. Ensure the player is within range of your router. Restart your router and the player.

## SPECIFICATIONS

---

Feature	Detail
Model Number	BDP-BX58
Package Dimensions	19 x 10.5 x 3 inches
Item Weight	7 pounds
Media Type	Blu-Ray Disc, DVD
Resolution	1920x1080 (Full HD 1080p)
Connectivity Technology	HDMI, USB, Wi-Fi (Built-in)
Connector Type	HDMI
Audio Output Mode	Stereo, Surround Sound
Supported Audio Format	Dolby Digital, DTS, PCM
Special Feature	Wireless, 3D Blu-ray Playback, Internet Apps
Batteries (Remote)	2 AA batteries required
Date First Available	March 22, 2011

## WARRANTY AND SUPPORT

---

For warranty information and customer support, please refer to the documentation included with your product or visit the official Sony support website.

**Sony Customer Information Service Center:** 1-866-909-SONY (7669)

**Online Support:** <http://esupport.sony.com/>

Please have your model number (BDP-BX58) and serial number ready when contacting support.

© 2023 Sony Corporation. All rights reserved.  
Information in this document is subject to change without notice.