

[Manuals.plus](#) /

› [Conair](#) /

› Conair Full Size Garment Steamer Instruction Manual

Conair GS28

Conair Full Size Garment Steamer Instruction Manual

Model: GS28

Brand: Conair

PRODUCT OVERVIEW

The Conair Ultimate Fabric Steamer provides 1500 watts of steaming power, heating up in 35 to 45 seconds and offering up to 70 minutes of continuous steam. It features a telescoping pole for height adjustment, a T-nozzle with a 5-foot cool-touch insulated hose, and a 360-degree rotating hanger with clips for various garments. The removable 80-ounce water tank is easy to fill, and the unit includes an auto shut-off feature when water levels are low, along with convenient cord wrap storage.



Figure 1: Conair Full Size Garment Steamer, main unit with steam head and hose.

SETUP INSTRUCTIONS

1. Unpacking and Assembly

Carefully remove all components from the packaging. Ensure all parts are present: the main steamer unit, telescoping pole, rotating hanger, T-nozzle, and water tank.





Figure 2: Fully assembled Conair Garment Steamer with telescoping pole and hanger.

2. Filling the Water Tank

Locate the removable 80-ounce water tank on the main unit. Lift the tank using its handle. Unscrew the cap at the bottom of the tank and fill it with distilled water. Avoid using tap water to prevent mineral buildup, which can affect performance and longevity. Securely replace the cap and reinsert the water tank into the main unit, ensuring it clicks into place.

SMOOTHES, DE-WRINKLES & FRESHENS

HIGH VELOCITY CONTINUOUS STEAM

COMPLETE STEAM™



UP TO
90-MINUTE STEAM TIME
Plus Energy-Saving **Steam Pause** Feature



CONAIR®



GREEN & CLEAN
just add water —
no chemicals
needed



QUICK & EASY
a simple,
fast alternative
to ironing



**SAVES TIME
& MONEY**
with fewer trips to
the dry cleaner



**FORM &
FUNCTION**
use on most
garments & fabrics

FULL SIZE fabric steamer

Figure 3: Water tank with fill level indicators and key features of the steamer.

OPERATING INSTRUCTIONS

1. Powering On and Heating Up

Plug the steamer into a standard electrical outlet. Locate the ON/OFF/PAUSE switch at the back of the unit. Flip the switch to the "ON" position. The indicator light will illuminate, signifying that the unit is heating up. The steamer takes approximately 35 to 45 seconds to reach optimal steaming temperature.

2. Steaming Garments

Hang the garment you wish to steam on the 360-degree rotating hanger. For pants, utilize the convenient clips on the hanger. Hold the T-nozzle and gently glide it over the fabric, moving from top to bottom. The continuous steam will relax wrinkles and refresh the fabric. For stubborn wrinkles, hold the nozzle closer to the fabric, but do not press directly against it.





Figure 4: Steaming pants using the integrated hanger and clips.



Figure 5: Close-up of the T-nozzle releasing powerful steam.

3. Using the Pause Function

If you need to temporarily stop steaming without turning off the unit, flip the switch to the "PAUSE" position. This will maintain the heating temperature, allowing for quick resumption of steaming.

MAINTENANCE

1. Draining Water Tank

After each use, or when the water level is low, turn off the steamer and unplug it. Allow the unit to cool completely. Remove the water tank and empty any remaining water. This prevents mineral buildup and prolongs the life of the steamer.

2. Cleaning

Periodically clean the exterior of the steamer with a soft, damp cloth. Do not use abrasive cleaners or solvents. For mineral buildup in the water tank or internal components, consult the full user manual for descaling instructions.

3. Storage

For compact storage, the telescoping pole can be collapsed. The hose can be wrapped around the unit using the integrated cord wrap storage feature. Ensure the water tank is empty before storing.

TROUBLESHOOTING

Problem	Possible Cause	Solution
No Steam Output	Water tank empty or not properly seated. Unit not heated.	Refill water tank and ensure it's securely in place. Allow 35-45 seconds for heating.
Water Dripping from Nozzle	Unit not fully heated. Condensation in hose.	Allow more time for heating. Hold nozzle upright to drain condensation back into unit.
Weak Steam	Mineral buildup.	Descal the unit according to the full user manual. Use distilled water.

SPECIFICATIONS

- Brand: Conair
- Model: GS28
- Color: Gray
- Power: 1500 Watts
- Heat-up Time: 35-45 seconds
- Continuous Steam Time: Up to 70 minutes
- Water Tank Capacity: 80 ounces (2.36 Liters)
- Product Dimensions: 17.5"L x 14.25"W x 17"H
- Item Weight: 10.4 Pounds
- Voltage: 110 Volts

WARRANTY AND SUPPORT

Warranty Information

This Conair Garment Steamer comes with a 1-year limited warranty. Please retain your proof of purchase for warranty

claims.

Further Support

For detailed instructions, safety warnings, and comprehensive troubleshooting, please refer to the official [User Manual \(PDF\)](#). You can also visit the [Conair Store on Amazon](#) for additional product information and customer service.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question