

[manuals.plus](#) /

- › [TOTAL](#) /
- › [TOTAL P20S 20V Cordless Pressure Washer Instruction Manual](#)

TOTAL TPWLI2008

TOTAL P20S 20V Cordless Pressure Washer Instruction Manual

Model: TPWLI2008

1. PRODUCT OVERVIEW

The TOTAL P20S 20V Cordless Pressure Washer is designed for efficient outdoor cleaning tasks. This portable unit operates on a 20V battery, providing a maximum pressure of 24.8 Bar and a flow rate of 2.2 liters per minute. It features an automatic stop system for enhanced safety and a 6-position adjustable nozzle for versatile cleaning applications.

- ▶ **Presión máxima de 24,8 Bar** para limpieza efectiva.
- ▶ **Caudal máximo de 2,2 l/min** para resultados rápidos.
- ▶ **Sistema de parada automático** para mayor seguridad.
- ▶ **Diseño portátil** para fácil uso y transporte.



Image 1.1: The TOTAL P20S Cordless Pressure Washer with its key features: 24.8 Bar max pressure, 2.2 l/min max flow, automatic stop system, and portable design.

2. SAFETY INFORMATION

Read all safety warnings, instructions, illustrations, and specifications provided with this power tool. Failure to follow all instructions listed below may result in electric shock, fire, and/or serious injury.

General Safety Warnings:

- Always wear appropriate personal protective equipment (PPE) such as safety glasses and gloves.
- Do not point the spray gun at people, animals, or electrical equipment.
- Ensure all connections are secure before operating the pressure washer.
- Keep children and bystanders away while operating the tool.
- Do not operate the pressure washer if any part is damaged.
- Use only clean water. Do not use flammable liquids or solvents.
- Disconnect the battery pack before making any adjustments, changing accessories, or storing the tool.

3. PACKAGE CONTENTS

Verify that all items are present and in good condition upon opening the package. If any items are missing or damaged, contact customer support.

- 1 x TOTAL P20S Cordless Pressure Washer
- 1 x 6-meter Hose
- 1 x 400ml Detergent Container
- 1 x Extension Lance with 6-position Adjustable Nozzle
- 6 x Cleaning Accessories (various nozzles/attachments)
- 1 x Mesh Bag for Transport
- Instruction Manual (this document)

Note: Battery and charger are NOT included and must be purchased separately.



Image 3.1: Visual representation of the included components: 6m hose, mesh bag, detergent bottle, and extension lance with 6-position nozzle. Battery and charger are not shown as they are sold separately.

4. SETUP

Follow these steps to prepare your pressure washer for use:

1. **Attach the Extension Lance:** Securely connect the extension lance to the main body of the pressure washer. Ensure it clicks into place or is firmly tightened.
2. **Select and Attach Nozzle:** Choose the appropriate nozzle for your cleaning task from the 6-position adjustable nozzle. Rotate the nozzle head to select the desired spray pattern (e.g., concentrated jet, wide spray, watering spray, rotary jet).
3. **Connect the Hose:** Attach one end of the 6-meter hose to the water inlet on the pressure washer and the other end to a suitable water source (e.g., a bucket, tap, or garden hose). Ensure a tight connection to prevent leaks.
4. **Insert Battery:** Insert a fully charged 20V battery pack into the battery slot on the pressure washer handle. Ensure it is securely latched.
5. **Fill Detergent Container (Optional):** If using detergent, fill the 400ml container with appropriate pressure washer detergent and attach it to the designated port on the pressure washer.



Image 4.1: Illustration of connecting the water hose to the pressure washer unit.

5. OPERATING INSTRUCTIONS

Once assembled, follow these steps to operate your pressure washer:

1. **Prime the Pump:** Before starting, ensure the water source is open and allow water to flow through the hose and pressure washer until a steady stream emerges from the nozzle. This removes air from the system.
2. **Start the Pressure Washer:** Aim the nozzle at the surface to be cleaned. Press the trigger to start the motor and begin spraying. The automatic stop system will engage when the trigger is released.
3. **Adjust Spray Pattern:** Rotate the 6-position adjustable nozzle to change the spray pattern as needed for different cleaning tasks.
 - **Concentrated Jet:** For stubborn dirt and small areas.
 - **Wide Spray:** For general cleaning of larger surfaces.

- **Watering Spray:** For gentle rinsing or watering plants.
- **Rotary Jet:** For tough, caked-on dirt.

4. **Maintain Distance:** Keep an appropriate distance from the cleaning surface to avoid damage. Test on an inconspicuous area first.
5. **Cleaning with Detergent:** If using the detergent container, ensure it is properly attached. The pressure washer will mix the detergent with water. After applying detergent, rinse the surface thoroughly with clean water.
6. **Shut Down:** Release the trigger, turn off the water supply, and remove the battery pack. Squeeze the trigger briefly to release any remaining pressure in the system.



Image 5.1: A user demonstrating the operation of the cordless pressure washer for patio cleaning.

**Perfecta para limpiar
diversas superficies:**

- ▶ Terrazas
- ▶ Vehículos
- ▶ Patios
- ▶ Muebles



Image 5.2: The pressure washer being used to clean a vehicle, showcasing its versatility for various outdoor surfaces.

6. MAINTENANCE

Regular maintenance ensures optimal performance and extends the life of your pressure washer.

- **Cleaning:** After each use, rinse the pressure washer and accessories with clean water to remove any detergent residue or debris. Wipe the exterior with a damp cloth.
- **Nozzle Care:** Periodically check the nozzle for blockages. If clogged, use a small pin or the included nozzle cleaning tool (if applicable) to clear the opening.
- **Hose Inspection:** Inspect the hose for kinks, cuts, or wear. Replace if damaged.
- **Storage:** Store the pressure washer in a dry, frost-free environment. Disconnect the hose and drain all water from the unit to prevent freezing damage. Remove the battery pack before storage.
- **Battery Care:** Store the battery in a cool, dry place away from direct sunlight. Do not store fully discharged. Charge the battery periodically if not used for extended periods.

7. TROUBLESHOOTING

Refer to this section for common issues and their solutions.

Problem	Possible Cause	Solution
No water pressure or low pressure.	Water supply off or restricted. Air in the pump. Clogged nozzle. Loose hose connection.	Ensure water supply is fully open. Prime the pump by allowing water to flow through until steady. Clean the nozzle. Tighten all hose connections.
Motor does not start.	Battery not charged or improperly inserted. Trigger not pressed.	Charge the battery and ensure it is securely inserted. Press the trigger firmly.
Water leaks from connections.	Loose connections. Damaged O-rings or seals.	Tighten all connections. Inspect and replace damaged O-rings or seals.

8. SPECIFICATIONS

Feature	Detail
Model Number	TPWLI2008
Brand	TOTAL
Power Source	20V Battery (not included)
Max Pressure	24.8 Bar
Max Flow Rate	2.2 Liters per minute
Product Dimensions (L x W x H)	53 x 13 x 25 cm
Product Weight	2.46 kg
Hose Length	6 Meters
Wand Length	60 Centimeters
Nozzle Type	6-position adjustable



Dimensiones:
53 x 13 x 25 cm

Peso: 2,46 kg

¡Limpieza rápida y eficaz en
tus manos con la máxima
flexibilidad y precisión!

Image 8.1: Visual representation of the pressure washer's dimensions (53 x 13 x 25 cm) and weight (2.46 kg).

9. WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the warranty card included with your purchase or visit the official TOTAL Tools website. Keep your proof of purchase for any warranty claims.

Contact Information: Please refer to the manufacturer's official website or your retailer for the most up-to-date contact details for customer service and support.