

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Rubbermaid](#) /

› [Rubbermaid 1315-L3 12-inch Replacement Wheel Instruction Manual for 1315 Tilt Trucks](#)

Rubbermaid 1315-L3

Rubbermaid 1315-L3 12-inch Replacement Wheel Instruction Manual

For Rubbermaid 1315 Tilt Trucks

1. INTRODUCTION

This manual provides essential information for the proper installation, operation, and maintenance of your Rubbermaid 1315-L3 12-inch Replacement Wheel. Please read these instructions carefully before proceeding to ensure safe and efficient use. Retain this manual for future reference.

2. SAFETY INFORMATION

Always prioritize safety when handling and installing replacement parts. Failure to follow safety guidelines may result in injury or damage to equipment.

- Wear appropriate personal protective equipment (PPE), such as gloves and eye protection, during installation.
- Ensure the tilt truck is stable and secured before attempting any wheel replacement.
- Do not exceed the weight capacity of the tilt truck after wheel replacement.
- Keep children and unauthorized personnel away from the work area.

3. PRODUCT OVERVIEW

The Rubbermaid 1315-L3 is a 12-inch replacement wheel designed specifically for the Rubbermaid 1315 Tilt Truck. It is engineered for durability and smooth operation, ensuring the continued mobility of your equipment.



Figure 1: The Rubbermaid 1315-L3 12-inch replacement wheel. This image shows a black wheel with a gray hub, designed for the 1315 Tilt Truck.

4. SETUP AND INSTALLATION

Follow these steps to replace a wheel on your Rubbermaid 1315 Tilt Truck:

- 1. Prepare the Tilt Truck:** Ensure the tilt truck is empty and clean. Position it on a flat, stable surface. If possible, elevate the side requiring wheel replacement using a suitable lifting device or blocks to allow access to the wheel axle. Ensure it is securely supported to prevent accidental movement.
- 2. Remove the Old Wheel:**
 - Locate the retaining pin or bolt securing the existing wheel to the axle.
 - Carefully remove the retaining pin or unfasten the bolt using appropriate tools (e.g., pliers, wrench).
 - Slide the old wheel off the axle. Note the orientation of any washers or spacers for correct reassembly.
- 3. Inspect the Axle:** Clean the axle thoroughly and inspect it for any damage, bends, or excessive wear. Replace the axle if necessary.
- 4. Install the New Wheel:**
 - Slide the new Rubbermaid 1315-L3 replacement wheel onto the axle, ensuring any washers or spacers are placed in their original positions.
 - Align the hole in the wheel hub with the hole in the axle.
 - Insert the retaining pin or re-insert and tighten the bolt to secure the wheel. Ensure it is firmly seated and cannot come loose during operation.
- 5. Test the Installation:** Gently lower the tilt truck to the ground. Push and pull the truck to verify that the new wheel rotates freely and is securely attached. Check for any wobbling or unusual noises.

5. OPERATING CONSIDERATIONS

Once the replacement wheel is installed, the tilt truck can be operated as usual. Ensure that the load capacity of the truck is not exceeded, and always distribute weight evenly to prevent undue stress on the wheels and frame.

6. MAINTENANCE

Regular maintenance helps extend the life of your replacement wheel and ensures optimal performance of your tilt truck.

- Cleaning:** Periodically clean the wheel and axle area to remove dirt, debris, and tangled materials that could impede rotation.
- Inspection:** Regularly inspect the wheel for signs of wear, cracks, or damage. Check the axle and retaining pin for security and integrity.
- Lubrication:** If the wheel hub or axle assembly includes grease fittings or requires lubrication, follow the original tilt truck manufacturer's recommendations for lubrication frequency and type.

7. TROUBLESHOOTING

Problem	Possible Cause	Solution
Wheel does not spin freely	Debris caught in axle; axle bent; insufficient lubrication; wheel installed incorrectly.	Clean axle area; inspect and replace axle if bent; lubricate if applicable; re-install wheel correctly.
Wheel wobbles	Loose retaining pin/bolt; damaged wheel hub; bent axle.	Tighten retaining pin/bolt; inspect wheel for damage and replace if necessary; inspect and replace axle if bent.
Unusual noise during operation	Lack of lubrication; damaged bearings (if applicable); debris.	Lubricate wheel; inspect bearings and replace if damaged; clean wheel area.

8. SPECIFICATIONS

Model: 1315-L3

Brand: Rubbermaid

Wheel Size: 12 inches (Diameter)

Item Weight: Approximately 10.87 pounds

Vehicle Service Type: Tilt Truck (specifically Rubbermaid 1315 Tilt Truck)

UPC: 086876139433

9. WARRANTY INFORMATION

This Rubbermaid product is covered by the manufacturer's standard warranty. For specific details regarding warranty coverage, terms, and conditions, please refer to the warranty documentation provided with your original Rubbermaid Tilt Truck or visit the official Rubbermaid website. Keep your purchase receipt as proof of purchase.

10. CUSTOMER SUPPORT

For technical assistance, replacement parts, or further inquiries, please contact Rubbermaid customer support. You can typically find contact information on the official Rubbermaid website or through the retailer where the product was purchased.


Online Resources: www.rubbermaid.com



© 2023 Rubbermaid. All rights reserved. Information in this manual is subject to change without notice.

Related Documents - 1315-L3

	<p>Rubbermaid 7'x7' Resin Storage Building Assembly Instructions (Model 5H80)</p> <p>Detailed assembly instructions for the Rubbermaid 7'x7' Resin Storage Building, model 5H80. Includes parts list, required tools, step-by-step guidance, and safety information for building your outdoor storage shed.</p>
	<p>Rubbermaid Commercial Products 10-Year Limited Warranty for Outdoor Living Products</p> <p>This document outlines the 10-year limited warranty provided by Rubbermaid Commercial Products LLC for its outdoor living products. It details coverage, exclusions, and the process for obtaining service.</p>
	<p>Rubbermaid 1S85 7' x 3'6" Resin Storage Building Assembly Instructions</p> <p>Step-by-step assembly guide for the Rubbermaid 1S85 7' x 3'6" resin storage building. Includes parts list, required tools, and detailed instructions for building your outdoor shed.</p>
	<p>Rubbermaid Horizontal Shed Assembly Instructions and Care Guide</p> <p>Step-by-step assembly instructions and essential care information for the Rubbermaid 3748 Horizontal Storage Shed. Includes parts list, dimensions, and maintenance tips for outdoor resin sheds.</p>

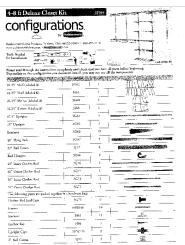

[Rubbermaid 4-8 ft Deluxe Closet Kit Installation Guide](#)

This document provides detailed installation instructions for the Rubbermaid 4-8 ft Deluxe Closet Kit, including a comprehensive parts list, required tools, and step-by-step guides for mounting hang rails, uprights, shelves, and clothes rods. Learn how to configure your adjustable closet system for optimal storage.



[Rubbermaid 5L30 Storage Building Assembly Instructions](#)

Comprehensive assembly instructions for the Rubbermaid 5L30 outdoor storage building, detailing site preparation, floor, wall, and roof installation steps.