

Manuals.plus /

› DeLonghi /

› De'Longhi Nescafe Dolce Gusto Piccolo EDG 200.B Coffee Machine User Manual

## DeLonghi EDG200.B

# De'Longhi Nescafe Dolce Gusto Piccolo EDG 200.B Coffee Machine User Manual

## 1. INTRODUCTION

This manual provides essential information for the safe and efficient operation of your De'Longhi Nescafe Dolce Gusto Piccolo EDG 200.B coffee machine. Please read all instructions carefully before first use and retain this manual for future reference.

## 2. SAFETY INSTRUCTIONS

- Always ensure the machine is placed on a stable, flat surface.
- Do not immerse the machine, power cord, or plug in water or other liquids.
- Keep children away from the appliance during operation due to hot surfaces and liquids.
- Unplug the machine from the power outlet before cleaning and when not in use.
- Do not operate the machine with a damaged cord or plug. Contact authorized service personnel for repairs.
- Use only Nescafe Dolce Gusto capsules with this machine.
- Never open the capsule holder during brewing.

## 3. PRODUCT OVERVIEW

Familiarize yourself with the components of your coffee machine:

1. Water Tank
2. Capsule Holder
3. Brewing Head
4. Control Lever (Hot/Cold)
5. Power Button
6. Drip Tray

## 7. Power Cord



**Figure 1:** Front view of the De'Longhi Nescafe Dolce Gusto Piccolo EDG 200.B coffee machine, showcasing its compact design and main controls.



**Figure 2:** The coffee machine with a Nescafe Dolce Gusto capsule correctly inserted into the capsule holder, ready for brewing.



**Figure 3:** Dimensions of the De'Longhi Nescafé Dolce Gusto Piccolo EDG 200.B coffee machine, indicating its height (28.7cm), width (15.9cm), and depth (22cm).

## 4. SETUP

### 4.1 First Use and Rinsing

1. Remove all packaging materials and clean the machine with a damp cloth.
2. Fill the water tank with fresh drinking water.

3. Plug the machine into a suitable power outlet. The power button will flash red.
4. Press the power button. It will turn solid green when ready.
5. Place an empty cup on the drip tray.
6. Without a capsule, lift the control lever to the hot water position (red). Let water flow until the tank is empty.
7. Repeat the process with cold water (blue lever position).
8. Your machine is now rinsed and ready for use.

## 5. OPERATING INSTRUCTIONS

### 5.1 Preparing a Beverage

1. Ensure the water tank is filled with fresh drinking water.
2. Turn on the machine by pressing the power button. Wait for the light to turn solid green.
3. Open the capsule holder and insert a Nescafe Dolce Gusto capsule. Close the holder securely.
4. Place a cup of appropriate size on the drip tray.
5. Move the control lever to the desired position: **Red** for hot beverages, **Blue** for cold beverages.
6. The machine will start brewing. The flow will stop automatically when the lever is returned to the central position.
7. Once brewing is complete, return the lever to the central position, remove the used capsule, and discard it.
8. Enjoy your beverage.

## 6. MAINTENANCE AND CLEANING

### 6.1 Daily Cleaning

- After each use, remove and empty the drip tray. Rinse it with warm water.
- Wipe the exterior of the machine with a soft, damp cloth.
- Rinse the water tank regularly with fresh water.

### 6.2 Descaling

Descaling is crucial for maintaining machine performance and beverage quality. The frequency depends on water hardness and usage. Refer to the descaling instructions provided with your descaling kit, typically recommended every 3-6 months.

## 7. TROUBLESHOOTING

Problem	Possible Cause	Solution
No water flow	Water tank empty; air bubble in pump; machine needs descaling.	Fill water tank; perform a rinse cycle without capsule; descale the machine.
Coffee is cold	Machine not preheated; machine needs descaling.	Wait for the power button to turn solid green; descale the machine.
Leaking from machine	Capsule not inserted correctly; water tank not seated properly.	Ensure capsule is correctly inserted and holder is closed; reseal water tank firmly.

## 8. SPECIFICATIONS

---

- **Brand:** DeLonghi
- **Model:** EDG200.B
- **Coffee Maker Type:** Espresso Machine
- **Special Feature:** Thermal
- **Operation Mode:** Semi-Automatic
- **Human Interface Input:** Buttons
- **Item Weight:** 2 kg 400 g
- **Item Dimensions (LxWxH):** 16 x 19 x 22 Centimeters

## 9. WARRANTY AND SUPPORT

---

For warranty information and customer support, please refer to the warranty card included with your product or visit the official De'Longhi website. Do not attempt to repair the machine yourself, as this may void your warranty.