

[Manuals.plus](#) /

› [Armitron](#) /

› Armitron Women's Oval Faceted Crystal Bracelet Watch Gold User Manual

Armitron 75/3313CHGP

Armitron Women's Oval Faceted Crystal Bracelet Watch Gold User Manual

Model: 75/3313CHGP

INTRODUCTION

This manual provides comprehensive instructions for the setup, operation, and maintenance of your Armitron Women's Oval Faceted Crystal Bracelet Watch Gold (Model: 75/3313CHGP). Please read this manual carefully to ensure proper use and care of your timepiece.





Front view of the Armitron Women's Oval Faceted Crystal Bracelet Watch Gold. The watch features an oval gold-tone case, a champagne sunray dial with gold-tone markers, and a faceted crystal.

SETUP

1. Setting the Time

1. **Pull out the crown:** Locate the small knob (crown) on the right side of the watch case. Gently pull it outwards until you feel a click.



Side view of the watch, highlighting the crown used for time adjustment.

2. **Adjust the hands:** Rotate the crown clockwise or counter-clockwise to move the hour and minute hands to the correct time.
3. **Push in the crown:** Once the time is set, push the crown back into its original position. This will start the watch movement.


2. Adjusting the Bracelet

The watch features an adjustable link bracelet. If the bracelet is too large, links may need to be removed. It is recommended to have this procedure performed by a professional jeweler to avoid damage to the watch or bracelet. Some models may include an extender for minor adjustments.



The Armitron watch displayed on a wrist, illustrating how the bracelet fits.

For reference, a general guide to watch sizes is provided below:

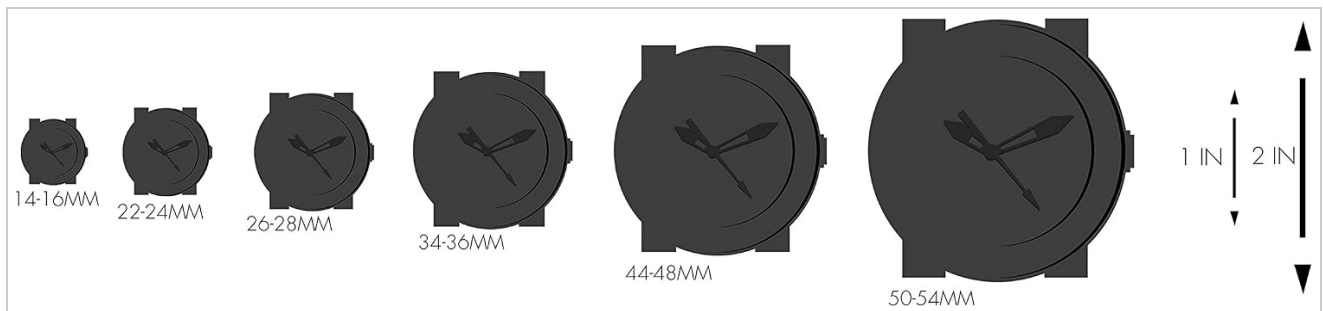

A visual guide demonstrating various watch case diameters for wrist sizing.

3. Battery Information

This watch is powered by a product-specific battery (included). The battery is designed for long-lasting performance. When the battery requires replacement, it is advisable to consult a qualified watch technician to ensure the correct battery type is used and the watch's water resistance is maintained.

OPERATING YOUR WATCH

Your Armitron watch is designed for reliable timekeeping. Once the time is set, the watch will continuously display the current time. The gold-tone hour, minute, and second hands provide clear readability against the champagne sunray dial.

Water Resistance

This watch is generally resistant to splashes and brief immersion in water, but it is not suitable for swimming or diving. Avoid prolonged exposure to water to prevent damage to the internal mechanisms.

MAINTENANCE

Cleaning

To maintain the appearance of your watch, wipe the case and bracelet with a soft, dry cloth. For more thorough cleaning, a slightly damp cloth can be used, followed by immediate drying. Avoid using harsh chemicals or abrasive materials, as these can damage the finish and crystal.

Storage

When not wearing your watch, store it in a cool, dry place away from direct sunlight and extreme temperatures. The original watch box (pictured below) provides suitable protection.



The Armitron watch presentation box, suitable for storage.

Battery Replacement

Battery life varies depending on usage. If the watch stops running, the battery may need to be replaced. It is recommended to have battery replacement performed by an authorized service center or a professional jeweler to ensure proper sealing and functionality.

TROUBLESHOOTING

- **Watch not running:**
 - Check if the crown is fully pushed in.
 - The battery may need replacement.
- **Time is incorrect:**
 - Reset the time as described in the "Setting the Time" section.
 - If the time continues to be inaccurate, the watch may require servicing.
- **Bracelet discomfort or improper fit:**
 - Consider having links added or removed by a professional jeweler for optimal fit.
- **Faceted crystal damage:**
 - Avoid impacts to the watch face. Crystal replacement should be done by a professional.

SPECIFICATIONS

Feature	Detail
Model Number	75/3313CHGP
Case Diameter	18mm
Case Shape	Oval
Case Material	Gold-tone brass
Crystal	Faceted wall-to-wall mineral crystal
Dial Color	Champagne sunray
Hands	Gold-tone hour, minute, and second hands
Bracelet Material	Gold-tone adjustable link bracelet
Clasp Type	Jewelry clasp with extender
Water Resistance	Splash resistant
Battery Type	1 Product Specific battery (included)
Product Dimensions	3.8 x 2.6 x 3.55 inches
Item Weight	2.88 ounces
Manufacturer	Armitron

WARRANTY AND SUPPORT

Armitron watches are manufactured with quality and precision. For information regarding warranty coverage, please refer to the warranty card included with your purchase or visit the official Armitron website. Keep your proof of purchase for any warranty claims.

For technical support or service inquiries, please contact Armitron customer service through their official channels.

Unauthorized repairs may void your warranty.

Return Policy: This product is subject to a 30-day return policy. Please refer to the retailer's return guidelines for specific details.

© 2025 Armitron. All rights reserved.

This manual is for informational purposes only. Product specifications are subject to change without notice.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question