

[Manuals.plus](#) /

› [Hasbro](#) /

› Hasbro Simon Flash Game Instruction Manual - Model 32730

Hasbro 32730

Hasbro Simon Flash Game Instruction Manual

Model: 32730

INTRODUCTION

The Hasbro Simon Flash game is an electronic memory and logic game featuring four interactive cubes. This manual provides comprehensive instructions for setup, gameplay, and maintenance to ensure an optimal user experience.

WHAT'S IN THE BOX

- 4 Electronic Cubes
- Game Case
- Rules
- Quick-Play Card
- 8 AAA Batteries (pre-installed or included separately)



Image: Simon Flash game components, showing four individual electronic cubes and the lime green carrying case.

The game includes four electronic cubes that light up and produce sounds, a portable carrying case for storage and travel, a detailed rulebook, and a quick-play card for immediate game initiation.

SETUP

Battery Installation

The Simon Flash game requires 8 AAA batteries. These batteries are typically included with the product. To install or replace batteries:

1. Locate the battery compartment on each electronic cube.
2. Using a small Phillips-head screwdriver, open the battery compartment cover.
3. Insert 2 AAA batteries into each cube, ensuring correct polarity (+/-).
4. Replace the battery compartment cover and secure it with the screw.

Initial Game Preparation

- Place the four electronic cubes on a flat surface.
- Refer to the Quick-Play Card for a summary of game rules or consult the full rulebook for detailed instructions.



Image: Four unlit Simon Flash cubes, ready for play.

OPERATING INSTRUCTIONS

Simon Flash utilizes Wonder-Link technology, allowing the cubes to interact and track game progress. The game features four distinct modes:

Game Modes

1. **Simon Lights Off (Yellow Game):** Arrange the cubes in the correct order to turn off all the lights.
2. **Simon Shuffle (Red Game):** When the cube colors scramble, line them up in their original displayed order.
3. **Simon Secret Color (Blue Game):** Discover the correct order to place the cubes so they all display the same color.
4. **Simon Classic (Green Game):** Repeat an increasing sequence of colors by pressing the corresponding cubes.

To start a specific game, press the cube associated with that game's color (e.g., press the yellow cube for Simon Lights Off).



Image: A player interacting with the illuminated Simon Flash cubes during gameplay.

General Gameplay

- The cubes respond to touch and proximity, indicating correct or incorrect moves with lights and sounds.
- The game tracks scores and progress automatically.
- To mute sound or switch games, press the designated buttons on the cubes.
- The cubes automatically power down after three minutes of non-use to conserve battery life.



Image: Multiple players engaging with the Simon Flash game, demonstrating its social play aspect.

Official Product Video

Your browser does not support the video tag.

Video: An official product video demonstrating the Hasbro Simon Flash game in action, showcasing its interactive light and sound features.

MAINTENANCE

- Wipe the electronic cubes and case with a dry, soft cloth. Do not use abrasive cleaners or immerse in water.
- Remove batteries if the game will not be used for an extended period to prevent leakage.
- Store the game in its carrying case in a cool, dry place away from direct sunlight.

TROUBLESHOOTING

- **Game not turning on:** Ensure batteries are correctly installed with proper polarity. Replace with fresh batteries if necessary.
- **Incorrect responses during gameplay:** Verify that the cubes are placed on a flat, stable surface and that there are no obstructions interfering with their interaction.
- **Sound issues:** Check the mute option. If sound is still not working, replace batteries.

SPECIFICATIONS

- **Brand:** Hasbro
- **Model Name:** Simon Flash
- **Model Number:** 32730
- **Age Range:** 8 years and up
- **Number of Players:** 1-100 (competitive play requires taking turns)
- **Power Source:** Battery
- **Battery Type:** 8 x AAA batteries (included)
- **Item Dimensions:** 2.52 x 7.87 x 10.51 inches
- **Item Weight:** 1.2 Pounds
- **Material Type:** Cardstock (for cards)
- **Special Features:** Portable, Wonder-Link Technology, Auto Power-Down

WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the contact details provided on the product packaging or visit the official Hasbro website. Keep your purchase receipt as proof of purchase.

© 2026 Hasbro. All rights reserved.
Simon Flash is a trademark of Hasbro.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question