

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Moulinex](#) /

› [Moulinex A65B17 Mixer Stand Instruction Manual](#)

Moulinex A65B17

Moulinex A65B17 Mixer Stand Instruction Manual

Model: A65B17

[Product Overview](#)

[Setup](#)

[Operation](#)

[Maintenance](#)

[Support](#)

[Troubleshooting](#)

[Specifications](#)

[Warranty &](#)

1. PRODUCT OVERVIEW

The Moulinex A65B17 Mixer Stand is a plastic blending attachment designed for use with compatible Moulinex Robot Marie Turbo hand mixers. This accessory allows for efficient blending of various preparations, such as soups and purees, directly in a container.

Compatibility: This mixer stand is compatible with the following Moulinex Robot Marie Turbo models:

- DDG10110 HBL ROBOTER MARIE 2GR WHT EO
- DDG141 ROBOTER MARIE TURBO DDG141
- DDG142 HANDMISCHER ROBOTER MARIE TURBO (WEISS)
- DDG143 HANDMENER ROBOTER MARIE TURBO WIT
- DDG144SU HBL ROBOTER MARIE WHT FR
- DDG15141 HBL ROBOTER MARIE 2GR WHT FR
- DDG18110 HBL ROBOTER MARIE 3IN1 WHT FR
- DDG1C1 HDB ROBOTER MARIE TURBOTER Urban Green Min. TY



Figure 1: Moulinex A65B17 Mixer Stand. This image shows the complete white plastic blending attachment.

2. SETUP

1. **Unpack:** Carefully remove the mixer stand from its packaging. Inspect for any damage.
2. **Clean:** Before first use, wash the mixer stand thoroughly with warm soapy water. Rinse and dry completely.
3. **Attach to Hand Mixer:** Align the top part of the A65B17 Mixer Stand with the motor unit of your compatible Moulinex Robot Marie Turbo hand mixer. Push firmly until it clicks into place, ensuring a secure connection.
4. **Verify Connection:** Gently pull on the mixer stand to confirm it is securely attached to the motor unit.



Figure 2: The Moulinex A65B17 Mixer Stand, illustrating the upper part that connects to the hand mixer motor unit.

3. OPERATION

The A65B17 Mixer Stand is designed for blending tasks. Always ensure the mixer stand is properly attached to the hand mixer motor unit before operation.

- 1. Prepare Ingredients:** Place the ingredients you wish to blend into a suitable container. Ensure the container is deep enough to prevent splashing.
- 2. Immerse Blender:** With the hand mixer unplugged, immerse the mixer stand's blending head into the ingredients. Ensure the blade is fully submerged before starting the appliance.
- 3. Start Blending:** Plug in the hand mixer. Select the desired speed setting on your hand mixer. Press and hold the power button to begin blending.
- 4. Blending Technique:** Move the mixer stand gently up and down and in circular motions to ensure even blending.
- 5. Finish Blending:** Once the desired consistency is achieved, release the power button and unplug the hand mixer from the power outlet.
- 6. Remove from Ingredients:** Carefully lift the mixer stand out of the ingredients.

Important Safety Notes:

- Do not blend extremely hot liquids (e.g., boiling soups) immediately after heating. Allow them to cool down slightly to prevent damage to the plastic components and potential injury from steam.

- Always unplug the hand mixer before attaching or detaching the mixer stand, or before cleaning.
- Keep hands and utensils away from the blending blade during operation.



Figure 3: A detailed view of the blending blade at the bottom of the Moulinex A65B17 Mixer Stand.

4. MAINTENANCE AND CLEANING

Proper cleaning and maintenance will ensure the longevity and optimal performance of your Moulinex A65B17 Mixer Stand.

1. **Detachment:** After use, unplug the hand mixer. Detach the mixer stand from the motor unit by pressing any release buttons (if present on your hand mixer model) and pulling it off.
2. **Hand Washing:** Wash the mixer stand immediately after use to prevent food from drying on the blade and plastic. Use warm water and a mild dish soap. A brush may be helpful for cleaning around the blade. Rinse thoroughly.
3. **Dishwasher Safe:** The plastic mixer stand is dishwasher safe. Place it on the top rack of your dishwasher.
4. **Drying:** Allow the mixer stand to air dry completely before storing.

5. **Storage:** Store the mixer stand in a clean, dry place, away from direct sunlight and extreme temperatures.

Caution: Do not immerse the motor unit of your hand mixer in water. Only the detachable mixer stand is washable.

5. TROUBLESHOOTING

This section addresses common issues you might encounter with the Moulinex A65B17 Mixer Stand.

Problem	Possible Cause	Solution
Mixer stand does not attach securely.	Incorrect alignment or debris in connection point.	Ensure proper alignment with the motor unit. Check for and remove any food particles or debris from the connection points on both the mixer stand and the motor unit.
Blending is inefficient or slow.	Blade is dull or damaged; too much food; food is too thick.	Inspect the blade for damage. Reduce the amount of food or add more liquid to thin the mixture. Ensure the hand mixer is operating at an appropriate speed.
Unusual noise during operation.	Loose connection; foreign object; worn parts.	Ensure the mixer stand is securely attached. Unplug and inspect the blade area for any foreign objects. If the noise persists, discontinue use and contact customer support.

If you encounter issues not listed here or if solutions do not resolve the problem, please contact Moulinex customer support.

6. SPECIFICATIONS

Feature	Detail
Model Number	A65B17
Brand	Moulinex
Manufacturer	Groupe SEB
Material	Plastic
Color	White
Dimensions (Approximate)	9.4 inches (23 cm) in length.
Dishwasher Safe	Yes
Compatible with	Moulinex Robot Marie Turbo hand mixers (specific models listed in Product Overview)

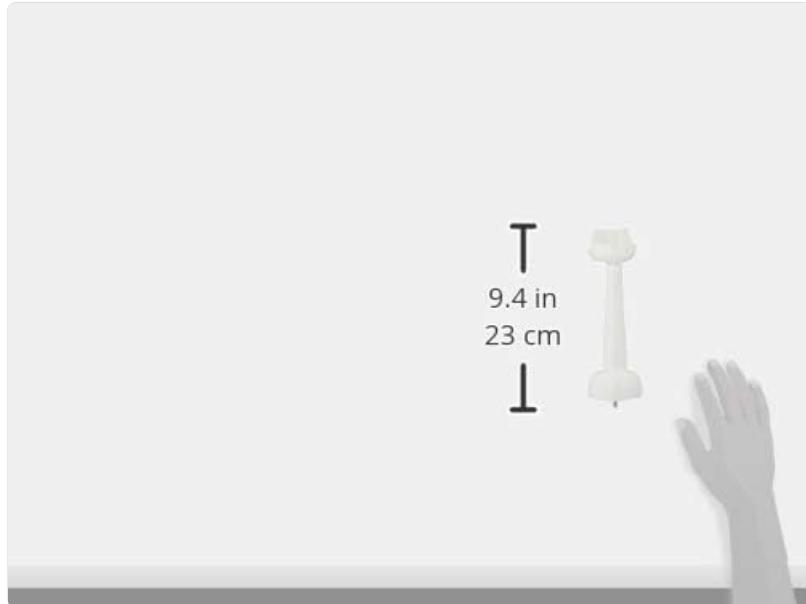


Figure 4: Dimensions of the Moulinex A65B17 Mixer Stand, showing a length of 9.4 inches (23 cm).

7. WARRANTY AND SUPPORT

Specific warranty information for the Moulinex A65B17 Mixer Stand is typically provided with the original purchase documentation or can be found on the official Moulinex website. Please retain your proof of purchase for warranty claims. For technical assistance, spare parts, or warranty inquiries, please contact Moulinex customer support. Contact details can usually be found on the manufacturer's website or in the documentation accompanying your main Moulinex appliance. Manufacturer: Groupe SEB