

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [KODAK](#) /

› [Kodak Carousel 650H Slide Projector Instruction Manual](#)

KODAK 650H

Kodak Carousel 650H Slide Projector Instruction Manual

Model: 650H

[Introduction](#)

[Safety Information](#)

[Setup](#)

[Operation](#)

[Maintenance](#)

[Troubleshooting](#)

[Specifications](#)

[Support](#)

1. INTRODUCTION

This manual provides comprehensive instructions for the safe and effective use of your Kodak Carousel 650H Slide Projector. Designed for projecting 35mm slides, this projector offers a reliable way to view your photographic memories. Please read this manual thoroughly before operating the projector to ensure proper setup, operation, and maintenance.

2. SAFETY INFORMATION

Always observe the following safety precautions to prevent injury or damage to the projector:

- **Heat Warning:** The projector bulb generates significant heat. Do not leave the bulb on for extended periods without supervision. Ensure adequate ventilation around the projector during operation.
- **Power Cord:** Ensure the power cord is in good condition and properly connected to a suitable power outlet. Do not use a damaged power cord.
- **Ventilation:** Do not block the ventilation openings on the projector. Overheating can damage the unit.
- **Handling:** Handle the projector with care. Avoid dropping or subjecting it to strong impacts.
- **Cleaning:** Disconnect the power cord before cleaning the projector. Use a soft, dry cloth. Do not use liquid cleaners near electrical components.

3. SETUP

Follow these steps to set up your Kodak Carousel 650H Slide Projector:

1. **Unpacking:** Carefully remove all components from the packaging. Verify that you have the projector unit, a slide tray, a power cord, and the remote control.
2. **Placement:** Place the projector on a stable, flat surface. Ensure there is sufficient space for projection onto a screen or wall.
3. **Connecting Power:** Insert the power cord into the projector's power input and then into a standard electrical outlet.
4. **Inserting the Lamp:**

Locate the lamp compartment, typically on the underside or side of the projector. Carefully insert the ELH 12V 300W Halogen Projector Lamp, ensuring it is seated correctly. Close the compartment securely.



Figure 1: Kodak Carousel 650H Slide Projector with its components. Visible are the projector unit, a Kodak Carousel Transvue 140 slide tray, the remote control, power cord, and a box for an ELH 12V 300W Halogen Projector Lamp.

5. Loading a Slide Tray:

Place your 35mm slides into the Kodak Carousel Transvue 140 slide tray. Ensure slides are oriented correctly for projection. Carefully place the loaded slide tray onto the projector's carousel spindle, aligning it properly.

6. Connecting Remote Control: Plug the remote control cable into the designated port on the projector.

4. OPERATION

Once set up, operate your projector using these instructions:

- **Power On:** Turn on the projector using the power switch, usually located on the unit itself. The lamp should illuminate.
- **Focusing:** Use the focus knob, typically near the lens, to sharpen the image on the screen. Adjust until the slide appears clear and crisp.
- **Advancing Slides:** Use the forward button on the remote control or the projector unit to advance to the next slide.
- **Reversing Slides:** Use the reverse button on the remote control or the projector unit to go back to a previous slide.
- **Adjusting Projection Height:** The projector may have adjustable feet or a tilt mechanism to change the projection angle and height on the screen.
- **Power Off:** After use, turn off the projector and allow the lamp to cool down before handling or storing the unit.

5. MAINTENANCE

Regular maintenance ensures the longevity and optimal performance of your projector:

- **Cleaning the Lens:** Gently wipe the projector lens with a soft, lint-free cloth specifically designed for optical surfaces. Avoid abrasive materials.
- **Replacing the Lamp:** When the ELH 12V 300W lamp burns out or dims significantly, replace it with a new, compatible lamp. Refer to the lamp compartment instructions for specific replacement procedures. Always ensure the projector is unplugged and cool before attempting lamp replacement.
- **General Cleaning:** Keep the exterior of the projector clean by wiping it with a dry, soft cloth. Ensure ventilation grilles are free from dust and debris.
- **Storage:** Store the projector in a cool, dry place, protected from dust and extreme temperatures.

6. TROUBLESHOOTING

If you encounter issues with your projector, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Projector does not turn on.	No power, faulty power cord, or blown fuse.	Check power connection. Ensure outlet is functional. Inspect power cord for damage.
No image or dim image.	Lamp is out or dim, lens cap on, or incorrect focus.	Replace the lamp if necessary. Remove lens cap. Adjust focus.
Slides do not advance or reverse.	Slide tray improperly seated, mechanism jam, or remote control issue.	Ensure slide tray is correctly placed. Check for jammed slides. Verify remote control connection.
Image is blurry or out of focus.	Incorrect focus adjustment or dirty lens.	Adjust the focus knob. Clean the projector lens.

7. SPECIFICATIONS

Key specifications for the Kodak Carousel 650H Slide Projector:

- **Model Number:** 650H
- **Manufacturer:** Eastman Kodak
- **Item Weight:** 14.81 pounds (approximately 6.72 kg)
- **Package Dimensions:** 15.6 x 13.5 x 10.9 inches (approximately 39.6 x 34.3 x 27.7 cm)
- **Lamp Type:** ELH 12V 300W Halogen Projector Lamp (as indicated on packaging)
- **Slide Tray Compatibility:** Kodak Carousel Transvue 140 slide tray (and similar compatible trays)

8. WARRANTY AND SUPPORT

For warranty information, technical support, or service inquiries regarding your Kodak Carousel 650H Slide Projector, please refer to the original purchase documentation or contact Eastman Kodak customer service directly. Keep your proof of purchase for any warranty claims.



© 2023 KODAK. All rights reserved. This manual is for informational purposes only.