

OXO 1126980

OXO Good Grips Egg Beater Instruction Manual

INTRODUCTION

The OXO Good Grips Egg Beater is designed for efficient aeration of eggs, light batters, and whipped cream. Its ergonomic design reduces arm strain, allowing for smooth operation directly in a bowl. This manual provides essential information for proper use and care of your egg beater.



Image: The OXO Good Grips Egg Beater, ready for use next to a bowl with eggs.

SETUP

The OXO Good Grips Egg Beater comes pre-assembled. Ensure all parts are securely connected before first use. The handle and beater assembly are designed for easy detachment for cleaning purposes.

Your browser does not support the video tag.

Video: Product Overview of the OXO Good Grips Egg Beater, demonstrating its features and ease of use.

OPERATING INSTRUCTIONS

Follow these steps for effective use of your egg beater:

1. Hold the egg beater firmly by the soft, non-slip handle.
2. Place the beaters into your ingredients in a bowl. The elevated design allows the beaters to continue working even when resting on the bottom of the bowl.
3. Turn the crank knob smoothly to activate the beaters. The enclosed gears ensure efficient rotation.
4. Continue turning until desired consistency is achieved for eggs, batters, or whipped cream.

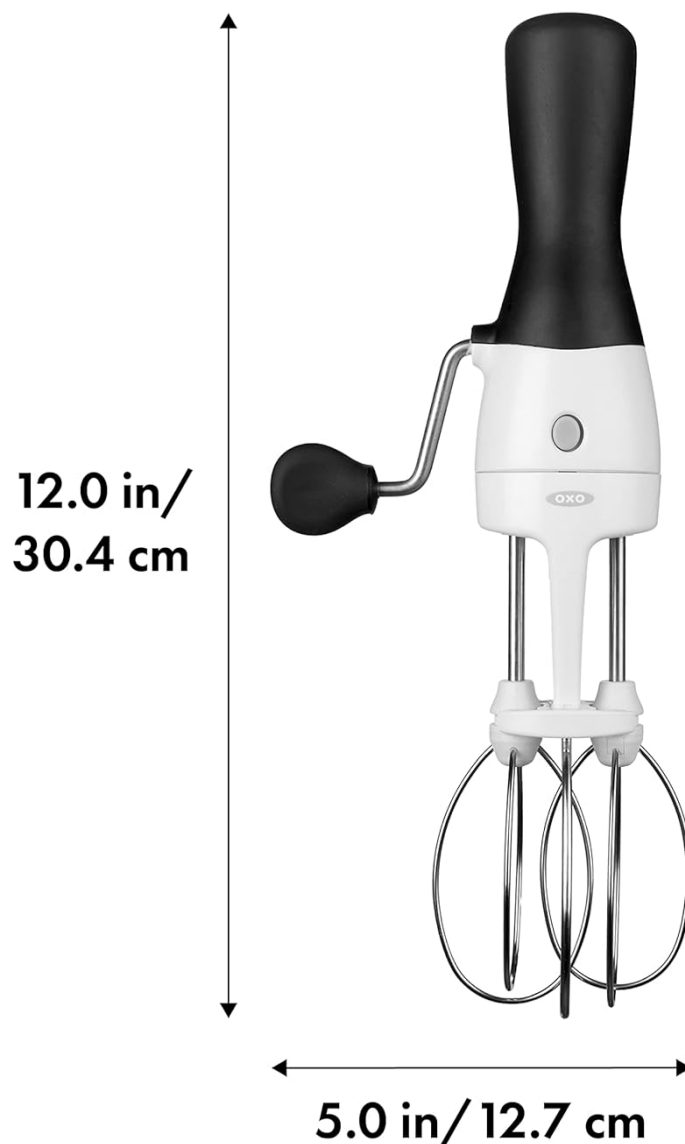


Image: The OXO Good Grips Egg Beater being used to mix ingredients in a bowl.

Your browser does not support the video tag.

Video: Demonstration of the OXO Good Grips Egg Beater in action, showing its smooth operation.

MAINTENANCE

Proper cleaning and care will extend the life of your egg beater:

1. To clean, detach the base and beaters from the handle by pressing the two side buttons located on the main body.
2. The detached base and beaters are dishwasher safe for convenient cleaning.
3. The handle component should be hand washed only to preserve its integrity.
4. Ensure all parts are thoroughly dry before reassembling or storing.

TROUBLESHOOTING

If you encounter any issues, refer to the following common solutions:

- **Beaters not turning smoothly:** Check for any food debris caught in the gears or between the beaters. Disassemble and clean thoroughly. Ensure the handle is securely attached.
- **Difficulty detaching beaters:** Ensure the side buttons are fully depressed. If parts are stiff, a small amount of food-grade lubricant can be applied to the connection points after cleaning and drying.
- **Ineffective beating:** Ensure the beaters are fully submerged in the ingredients. For optimal results, use in a bowl that allows the beaters to reach the bottom.

SPECIFICATIONS

Key specifications for the OXO Good Grips Egg Beater:

Brand	OXO
Model Name	OXO Good Grips Egg Beater
Model Number	1126980
Material	Stainless Steel
Product Dimensions	5"D x 4"W x 12"H
Item Weight	8 ounces
Special Feature	Dishwasher Safe (base and beaters), Soft, comfortable non-slip handle and turning knob
Controls Type	Knob



Image: Dimensions of the OXO Good Grips Egg Beater, showing its length and width.

WARRANTY AND SUPPORT

The OXO Good Grips Egg Beater comes with a satisfaction guarantee. If for any reason you are not satisfied with an OXO product, return it for replacement or refund.

For further assistance or inquiries, please visit the official OXO website or contact customer support through their designated channels.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question