

Z-Lite 1176PHM-BG-PM

Z-Lite 1176PHM-BG-PM Devonshire Outdoor Post Light Instruction Manual

Model: 1176PHM-BG-PM

1. INTRODUCTION

This manual provides detailed instructions for the safe installation, operation, and maintenance of your Z-Lite 1176PHM-BG-PM Devonshire Outdoor Post Light. Please read all instructions carefully before beginning installation and retain this manual for future reference.

The Z-Lite 1176PHM-BG-PM is an outdoor post light designed for exterior illumination. It features a cast aluminum frame with a Black Gold finish and a clear ribbed optic glass shade.

2. SAFETY INFORMATION

WARNING: Risk of Electric Shock. Disconnect power at the fuse box or circuit breaker before installation or servicing.

Always consult a qualified electrician if you are unsure about the installation process. Follow all local electrical codes and ordinances.

- Ensure the electrical supply is turned off before handling the fixture.
- Use only the specified bulb type and wattage. Refer to the 'Specifications' section for details.
- Do not install this fixture on a wet surface or near standing water.
- Handle glass components with care to prevent breakage.
- Ensure all connections are secure and properly insulated.

3. PACKAGE CONTENTS

Verify that all components are present and undamaged before proceeding with installation. If any parts are missing or damaged, do not attempt to install the fixture. Contact customer support for assistance.

- Outdoor Post Light Fixture (1)
- Glass Shade (1)
- Mounting Hardware Kit (1)

- Instruction Manual (1)

4. SETUP

4.1 Tools Required

- Phillips Head Screwdriver
- Wire Strippers
- Electrical Tape
- Adjustable Wrench
- Safety Glasses

4.2 Installation Steps

1. **Turn off Power:** Locate the circuit breaker or fuse box controlling the power to the installation location and turn off the power. Verify power is off using a voltage tester.
2. **Prepare Post:** Ensure the existing post or mounting surface is stable, level, and properly wired according to local electrical codes.
3. **Mount Fixture Base:** Attach the fixture base to the post using the provided mounting hardware. Ensure it is securely fastened and stable.
4. **Wire Connections:** Carefully connect the electrical wires. Connect the black (hot) wire from the fixture to the black (hot) wire from the power supply. Connect the white (neutral) wire from the fixture to the white (neutral) wire from the power supply. Connect the green or bare copper (ground) wire from the fixture to the green or bare copper (ground) wire from the power supply. Secure all connections with wire nuts and electrical tape.
5. **Install Glass Shade:** Carefully place the clear ribbed optic glass shade onto the fixture. Secure it according to the fixture's design, typically with retaining clips or screws.
6. **Install Bulb:** Insert the appropriate wattage and type of bulb (refer to specifications) into the socket. Do not overtighten.
7. **Restore Power:** Once installation is complete and all connections are secure, restore power at the circuit breaker or fuse box.
8. **Test Fixture:** Turn on the light switch to ensure the fixture operates correctly.



Figure 1: Z-Lite 1176PHM-BG-PM Devonshire Outdoor Post Light. This image shows the assembled outdoor post light with its black gold finish and clear ribbed optic glass shade.

5. OPERATING INSTRUCTIONS

The Z-Lite 1176PHM-BG-PM Outdoor Post Light is designed for simple operation. Once properly installed and powered, it can be controlled by a standard wall switch or an external timer/photocell system connected to its power supply.

- **Turning On/Off:** Use the connected wall switch to turn the light fixture on or off.
- **Bulb Replacement:** To replace the bulb, ensure power is off at the circuit breaker. Carefully remove the glass shade, unscrew the old bulb, and screw in a new bulb of the correct type and wattage. Reattach the glass shade securely.

6. MAINTENANCE

Regular maintenance will help ensure the longevity and optimal performance of your outdoor post light.

- **Cleaning:** Clean the fixture periodically with a soft, damp cloth. Do not use abrasive cleaners or solvents, as these can damage the finish or glass. Ensure the power is off before cleaning.
- **Glass Shade:** The clear ribbed optic glass shade can be cleaned with a mild glass cleaner.

- **Inspection:** Periodically inspect the wiring and connections for any signs of wear, fraying, or corrosion. Ensure all mounting hardware remains tight.
- **Bulb Replacement:** Replace bulbs as needed. Always ensure the replacement bulb matches the specified type and wattage.

7. TROUBLESHOOTING

Refer to the table below for common issues and their potential solutions.

Problem	Possible Cause	Solution
Light does not turn on.	No power to the fixture.	Check circuit breaker or fuse. Ensure wall switch is on.
	Loose wire connections.	Turn off power and check all wire connections.
	Faulty bulb.	Replace bulb with a new one of the correct type and wattage.
Light flickers.	Loose bulb or wiring.	Turn off power. Tighten bulb. Check wire connections.
	Incorrect bulb type.	Ensure the bulb is compatible with the fixture.
Glass shade is loose.	Retaining clips/screws not tightened.	Turn off power. Securely fasten the glass shade retaining clips or screws.

8. SPECIFICATIONS

Feature	Detail
Brand	Z-Lite
Model Number	1176PHM-BG-PM
Product Dimensions	12.5 x 9 x 25 inches (L x W x H)
Item Weight	8 pounds
Material	Aluminum Frame, Glass Shade
Finish Type	Black Gold
Shade Material	Clear Ribbed Optic Glass
Wattage	60 watts (Max)
Bulb Base	Candelabra (E12)
Power Source	Corded Electric
Batteries Required	No
UPC	685659002669

9. WARRANTY AND SUPPORT

For specific warranty information regarding your Z-Lite 1176PHM-BG-PM Devonshire Outdoor Post Light, please refer to the warranty card included with your purchase or visit the official Z-Lite website.

If you encounter any issues or require technical assistance, please contact Z-Lite customer support.

Contact details can typically be found on the product packaging or the manufacturer's website.