

Comfort Zone SP-YRK6QJZYHQUIF69H

Comfort Zone 1,500-Watt Milkhouse Style Electric Portable Utility Heater Instruction Manual

Brand: Comfort Zone | Model: SP-YRK6QJZYHQUIF69H

INTRODUCTION

Thank you for choosing the Comfort Zone 1,500-Watt Milkhouse Style Electric Portable Utility Heater. This manual provides essential information for the safe and efficient operation, maintenance, and troubleshooting of your new heater. Please read all instructions carefully before use and retain this manual for future reference.

This powerful and durable heater is designed to provide targeted warmth for workshops, garages, greenhouses, and other indoor spaces. It features an adjustable thermostat, multiple heat settings, and important safety features to ensure your comfort and peace of mind.

IMPORTANT SAFETY INFORMATION

WARNING: To reduce the risk of fire, electrical shock, or injury to persons, basic precautions should always be followed when using electrical appliances.

- Always plug heaters directly into a wall outlet/receptacle. Never use with an extension cord or relocatable power tap (outlet/power strip).
- Do not use this heater in bathrooms, laundry areas, or similar indoor locations where it may fall into a bathtub or other water container.
- Keep combustible materials such as furniture, papers, clothes, and curtains at least 3 feet (0.9 m) from the front of the heater and away from the sides and rear.
- Do not cover the heater or block air intakes or exhaust in any manner.
- This heater is hot when in use. To avoid burns, do not let bare skin touch hot surfaces.
- The heater is equipped with a safety overheat protection sensor that automatically shuts off the unit if it gets too hot.
- A safety tip-over switch will instantly cut power if the heater is accidentally knocked over. Ensure the heater is placed on a flat, stable surface.

SETUP

Initial Inspection

Carefully remove the heater and all parts from the carton and bag. It is recommended to save the carton for off-season storage. Inspect the heater for any damage. If damage is found, do not use the heater and contact customer service.

Handle Assembly

The heater comes with a carry handle for easy transport. To attach the handle:

1. Place the heater in an upright position.
2. Use the provided screws to attach the carry handle on top of the heater housing.
3. Use a screwdriver to tighten the screws firmly. Please ensure that screws are not overtightened.

Note: This heater is for floor use only.



Image: Close-up of the Comfort Zone portable utility heater's ergonomic carry handle. The handle is designed for safe and comfortable transport.

Placement Guidelines

- Ensure the heater is placed on a firm, level surface to activate the tip-over safety switch.
- Maintain a minimum distance of 3 feet (0.9 m) from walls, furniture, and other combustible materials.
- This heater is designed for indoor use only in areas such as garages, workshops, and greenhouses.

Controls Overview



Image: The control panel features two rotary knobs for power/mode selection and thermostat adjustment, along with power and caution indicator lights.

- **Power/Mode Control Knob:** Selects between OFF, FAN-ONLY, 1300W (Low Heat), and 1500W (High Heat).
- **Thermostat Control Knob:** Adjusts the desired room temperature from MIN (low) to MAX (high).
- **Power Indicator Light:** Illuminates when the heater is operating.
- **Caution Indicator Light:** Illuminates if an overheat situation occurs.

Powering On and Adjusting Heat

1. Plug the heater directly into a 120V AC/60Hz electrical outlet.
2. Turn the Power/Mode Control knob to your desired setting (FAN, 1300W, or 1500W). The Power indicator light will illuminate.
3. Adjust the Thermostat Control knob to your preferred temperature. The heater will cycle ON and OFF to maintain the set temperature.

4. For fan-only operation, select 'FAN' mode and adjust the thermostat to the desired setting.

Video: Official demonstration of the Comfort Zone CZ798 Milkhouse Heater, including unboxing and basic operational controls.

Video: Official demonstration of the Electric Portable Utility Heater, showcasing its various settings and features.

INTEGRATED SAFETY FEATURES

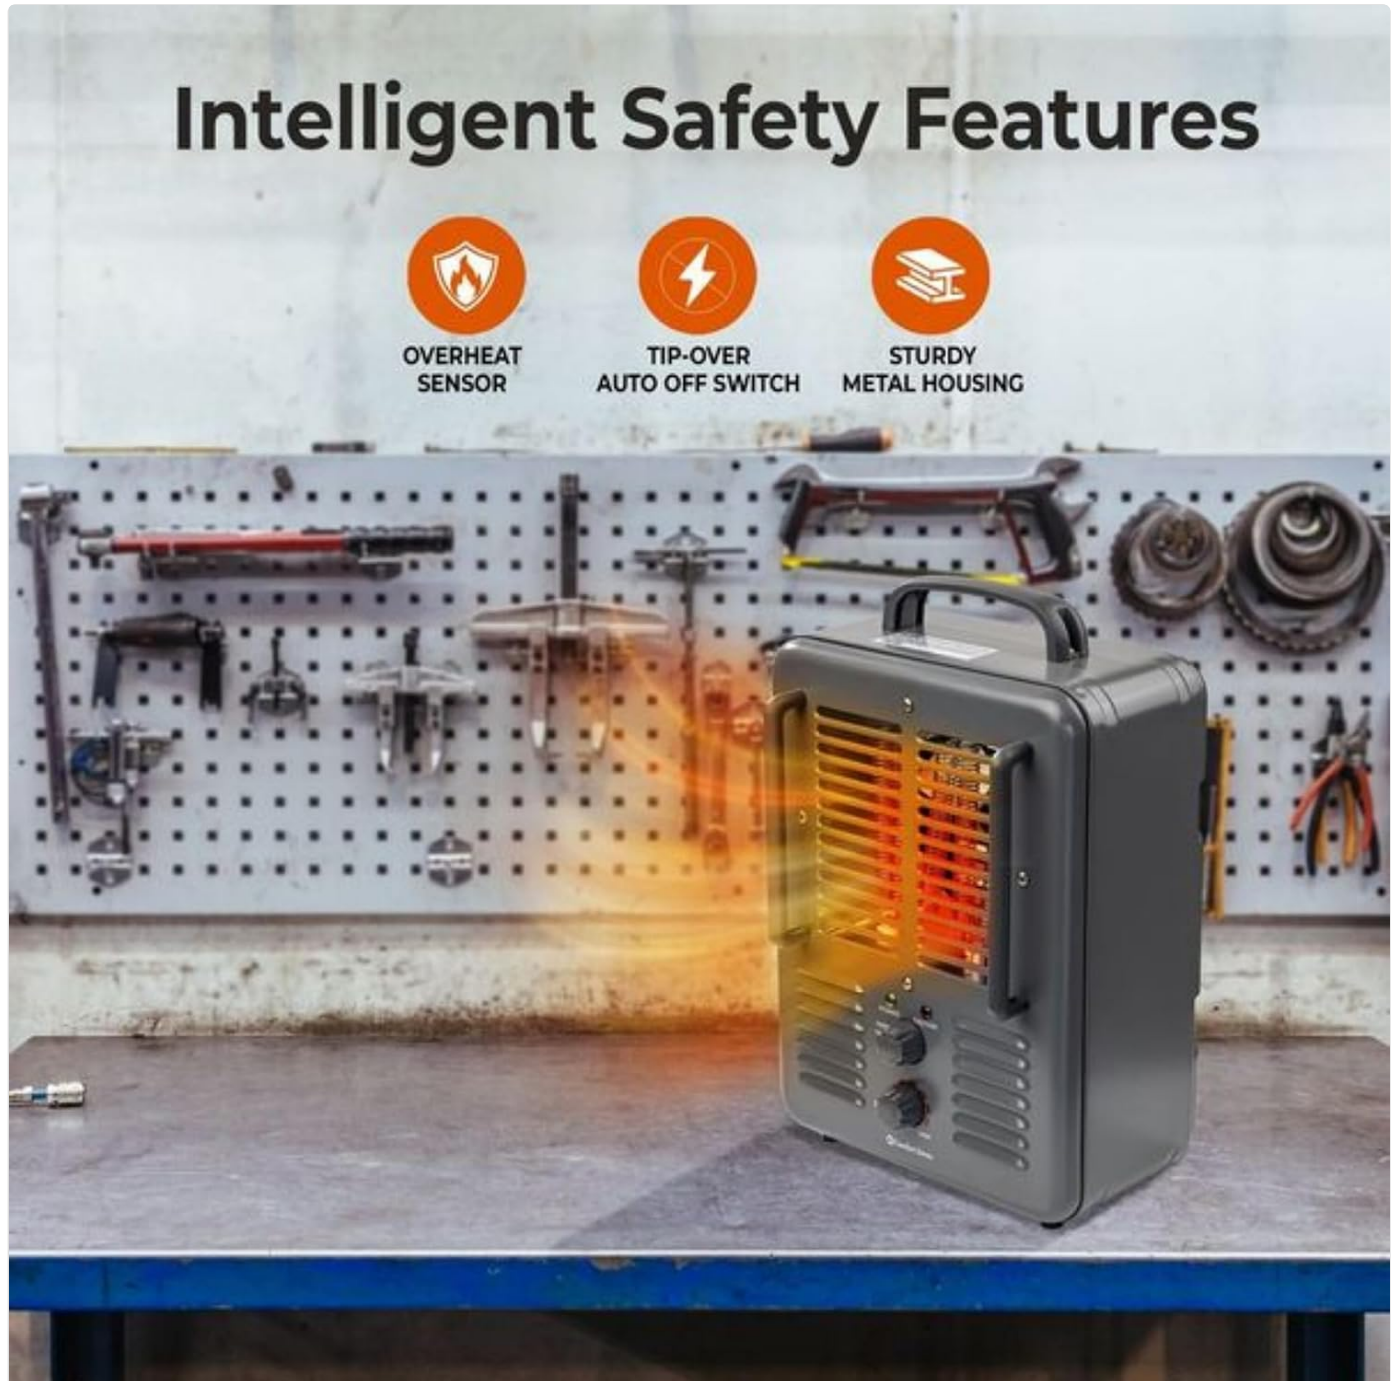


Image: This graphic highlights the heater's intelligent safety features, including an overheat sensor, an automatic tip-over switch, and a sturdy metal housing for enhanced durability and user protection.

- **Overheat Protection:** The heater is equipped with an internal sensor that automatically shuts off the unit if it detects an excessive operating temperature, preventing overheating.
- **Safety Tip-Over Switch:** An integrated switch automatically cuts power to the heater if it is accidentally knocked over or lifted from a flat surface, reducing fire hazards.
- **Cool-Touch Exterior:** The metal housing is designed to remain cool to the touch during operation, minimizing the risk of accidental burns.

- **Durable Metal Construction:** The rugged all-metal construction ensures long-lasting durability and stability.

CARE AND MAINTENANCE

Regular cleaning and maintenance will help ensure the longevity and safe operation of your heater.

- Always disconnect power and allow the heater to cool down completely before attempting any maintenance or cleaning.
- Clean the exterior trim using a soft, slightly dampened cloth. Avoid using abrasive or flammable solvents.
- Do not use citrus oil-based products or harsh chemical cleaners, as these may damage the finish.
- Ensure all air intake and exhaust openings are clear of dust and debris.

TROUBLESHOOTING

If your heater is not operating correctly, please refer to the following common issues before contacting customer service:

- **Heater fails to power on:** Check that the unit is securely plugged into a standard 120V AC outlet. Ensure the power control is in the ON position. Verify that the tip-over switch is engaged (heater is on a flat, stable surface).
- **Unit is not producing enough heat:** Ensure the thermostat control is set to a higher temperature. Check that the heater is not obstructed and is placed in an appropriate room size (up to 150 sq. ft.).
- **Unit blows cool air:** Confirm that the power/mode control is set to a heat setting (1300W or 1500W), not just 'FAN'.
- **Power cord gets warm:** This is normal operation for a 1500W heater. However, if the plug fits loosely in the outlet, it may need to be replaced.

For a comprehensive troubleshooting guide, please consult the full user manual provided with your product or contact Comfort Zone customer service.

SPECIFICATIONS



Ready to use - no assembly required.

Image: The heater's dimensions are 14.4 inches in height, 10.5 inches in width, and 7.3 inches in depth, making it compact and portable.

Feature	Detail
Model Number	SP-YRK6QJZYHQIQF69H
Wattage	1500 Watts

Feature	Detail
Voltage	120 Volts
Amperage	12.5 Amps
Heating Coverage	Up to 150 sq. ft.
Product Dimensions (D x W x H)	7.25" x 10.5" x 14.4"
Item Weight	4.95 pounds
Fuel Type	Electric
Special Features	Adjustable Temperature, Cool Touch Exterior, Fast Heating, Lightweight, Manual Thermostat

WARRANTY AND SUPPORT

Warranty Information

This Comfort Zone heater comes with a **1 Year Warranty Against Manufacturer Defects**. Please retain your proof of purchase for warranty claims.

Customer Support

For any questions, technical assistance, or warranty claims, please contact Comfort Zone customer service. Refer to the contact information provided in the original product packaging or visit the official Comfort Zone website for support details.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question