

[Manuals.plus](#) /

› [Ewbank](#) /

› Ewbank SC1000 Dynamo Steam Cleaner User Manual

Ewbank ELXSTEAMDYN

Ewbank SC1000 Dynamo Steam Cleaner User Manual

Model: ELXSTEAMDYN

1. INTRODUCTION

Thank you for purchasing the Ewbank SC1000 Dynamo Steam Cleaner. This powerful and versatile appliance is designed to provide effective and hygienic cleaning for various surfaces in your home. Utilizing high-pressure steam, it eliminates 99.9% of viruses, bacteria, and germs, offering a chemical-free cleaning solution.

This manual provides essential information on the safe operation, setup, maintenance, and troubleshooting of your new steam cleaner. Please read it thoroughly before first use and keep it for future reference.



Image: The Ewbank SC1000 Dynamo Steam Cleaner, a compact red and black unit with a flexible hose and cleaning nozzle attached.

2. IMPORTANT SAFETY INFORMATION

Always follow basic safety precautions when using electrical appliances to reduce the risk of fire, electric shock, or injury.

- Read all instructions before using the appliance.
- Do not leave the appliance unattended when plugged in. Unplug from outlet when not in use and before servicing.
- Do not allow to be used as a toy. Close attention is necessary when used by or near children.
- Use only as described in this manual. Use only manufacturer's recommended attachments.
- Do not use with damaged cord or plug. If appliance is not working as it should, has been dropped, damaged, left outdoors, or dropped into water, return it to a service center.
- Do not pull or carry by cord, use cord as a handle, close a door on cord, or pull cord around sharp edges or corners. Keep cord away from heated surfaces.
- Do not unplug by pulling on cord. To unplug, grasp the plug, not the cord.
- Do not handle plug or appliance with wet hands.
- Do not put any object into openings. Do not use with any opening blocked; keep free of dust, lint, hair, and anything that may reduce air flow.

- Keep hair, loose clothing, fingers, and all parts of body away from openings and moving parts.
- Do not use to pick up flammable or combustible liquids, such as gasoline, or use in areas where they may be present.
- Do not use without dust bag and/or filters in place.
- Turn off all controls before unplugging.
- Use extra care when cleaning on stairs.
- Do not use to pick up anything that is burning or smoking, such as cigarettes, matches, or hot ashes.
- This appliance is for household use only.
- To reduce the risk of electric shock, do not immerse the appliance in water or other liquids.
- Do not direct steam at people, animals, or electrical appliances.

3. PACKAGE CONTENTS

Your Ewbank SC1000 Dynamo Steam Cleaner package should include the following items:

- Ewbank SC1000 Dynamo Steam Cleaner Unit
- Sponge cloth
- Floor head
- Detail brushes (various sizes)
- Angled jet nozzle
- Garment head
- Window blade
- Iron attachment
- Measuring jug
- Funnel
- Extension tubes (for floor cleaning)



Image: A comprehensive view of all included accessories for the Ewbank SC1000 Dynamo Steam Cleaner, neatly arranged.

4. SETUP

Before first use, ensure all packaging materials are removed and the unit is placed on a stable, flat surface.

4.1 Filling the Water Tank

1. Ensure the steam cleaner is unplugged from the power outlet.
2. Unscrew the water tank cap.
3. Using the provided measuring jug and funnel, carefully fill the 1.5-liter water tank with clean tap water. Do not overfill.
4. Securely replace the water tank cap.

4.2 Attaching Accessories

Select the appropriate accessory for your cleaning task. Attach it firmly to the steam gun or extension tubes until it clicks into place. Ensure a secure connection to prevent steam leakage.

5. OPERATING INSTRUCTIONS

The Ewbank SC1000 Dynamo Steam Cleaner offers continuous steam for up to 45 minutes and powerful 54 psi steam on demand.

5.1 General Operation


1. After filling the water tank and attaching the desired accessory, plug the steam cleaner into a suitable power outlet.
2. Allow the unit to heat up. The indicator light will turn off when the unit is ready to produce steam.
3. Press the steam trigger on the handle to release steam. For continuous steam, engage the lock on the trigger.
4. Direct the steam towards the surface you wish to clean. Move the accessory slowly over the area to allow the steam to penetrate and loosen dirt.
5. For stubborn stains, hold the steam over the area for a few seconds before wiping.
6. When finished, release the steam trigger, unplug the unit, and allow it to cool down before emptying any remaining water.



**HIGH
PRESSURE
CLEANING**
60psi (max)



MULTI-TOOL
multi-purpose
attachments for
complete
flexibility

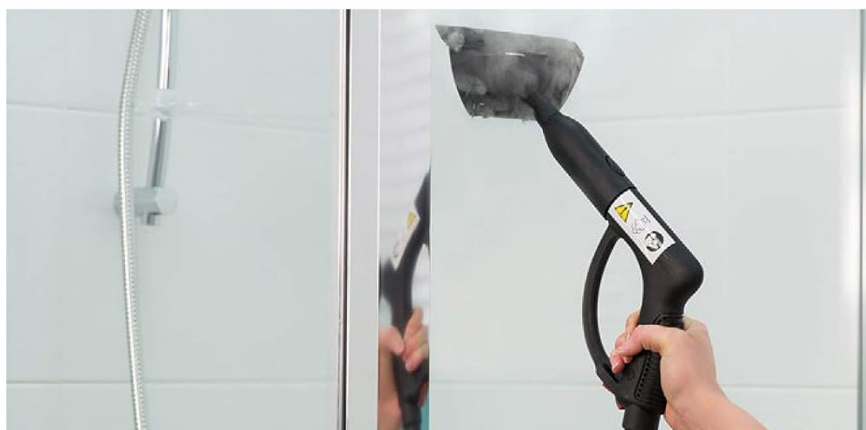

**FLOOR TO
CEILING
CLEANING**
quick and easy
to use

Image: A hand demonstrating the high-pressure steam cleaning capability of the unit on a stovetop surface.

5.2 Cleaning Specific Surfaces

- **Floors and Carpets:** Attach the floor head with the appropriate cloth. For carpets, use the carpet glider. Move the floor head slowly over the surface to sanitize and clean.



Image: A woman using the Ewbank SC1000 Dynamo Steam Cleaner with the floor attachment to clean a dark floor.

- **Upholstery and Garments:** Use the garment head. Test on an inconspicuous area first. Hold the head a few inches away from the fabric and allow the steam to refresh and de-wrinkle.
- **Windows and Glass:** Attach the window blade. Spray steam onto the glass, then use the blade to squeegee the moisture and dirt away. Wipe the blade clean after each pass.



Image: A woman cleaning a window with the Ewbank SC1000 Dynamo Steam Cleaner using the window attachment.

- **Kitchen and Bathroom Surfaces:** Use the angled jet nozzle or detail brushes for targeted cleaning of grout, sinks, stovetops, and ovens. The high-pressure steam effectively cuts through grease and grime.



Image: The Ewbank SC1000 Dynamo Steam Cleaner in action, cleaning an oven door with steam.

6. MAINTENANCE

Regular maintenance ensures the longevity and optimal performance of your steam cleaner.

6.1 After Each Use

- Unplug the unit and allow it to cool completely.
- Carefully unscrew the water tank cap and empty any remaining water.
- Clean all accessories with water and mild detergent if necessary. Allow them to air dry.
- Wipe the exterior of the unit with a damp cloth.

6.2 Descaling (Periodically)

Depending on your water hardness, mineral deposits may build up inside the boiler. To descale:

1. Mix a solution of equal parts white vinegar and water.
2. Pour the solution into the water tank.
3. Allow it to sit for several hours or overnight.

4. Empty the solution and rinse the tank thoroughly with clean water several times.
5. Run a tank of clean water through the unit to flush out any remaining vinegar.

6.3 Storage

Store the steam cleaner and its accessories in a cool, dry place. The unit features convenient on-board storage for many of its versatile accessories.

7. TROUBLESHOOTING

If you encounter issues with your Ewbank SC1000 Dynamo Steam Cleaner, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
No steam or low steam pressure	Water tank empty Unit not heated sufficiently Mineral buildup in boiler	Refill water tank Allow unit to heat up until indicator light turns off Perform descaling procedure (see Maintenance section)
Water leaking from connections	Accessories not securely attached O-rings worn or missing	Ensure accessories are firmly clicked into place Contact customer support for replacement parts
Unit not turning on	Not plugged in Power outlet not working Internal fault	Check power cord connection Test outlet with another appliance Contact customer support

If the problem persists after trying these solutions, please contact Ewbank customer support.

8. SPECIFICATIONS

Feature	Specification
Brand	Ewbank
Model Number	ELXSTEAMDYN
Color	Red
Product Dimensions (L x W x H)	25.5 x 28.5 x 37.01 cm
Weight	570 g
Capacity	1.5 Liters
Power	1500 Watts
Voltage	230 Volts
Material	18/8 Stainless Steel
Special Feature	All-purpose pressure steam cleaner

Feature	Specification
Surface Recommendation	Hard Floor, Upholstery
UPC	773490835741

9. WARRANTY AND SUPPORT

Ewbank products are manufactured to the highest quality standards. For information regarding warranty coverage, technical support, or replacement parts, please refer to the warranty card included with your purchase or visit the official Ewbank website. Please have your model number (ELXSTEAMDYN) and proof of purchase ready when contacting support.

© 2025 Ewbank. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question