

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

Manuals.plus /

› **JACQUES LEMANS /**

› Jacques Lemans 1-1586L Rome Sports Chronograph Watch Instruction Manual

JACQUES LEMANS 1-1586L

Jacques Lemans 1-1586L Rome Sports Chronograph Watch Instruction Manual

Model: 1-1586L | Brand: JACQUES LEMANS

1. INTRODUCTION AND OVERVIEW

Thank you for choosing the Jacques Lemans 1-1586L Rome Sports Chronograph Watch. This manual provides detailed instructions for the proper setup, operation, and maintenance of your timepiece. Please read this manual thoroughly to ensure optimal performance and longevity of your watch.



Figure 1: Jacques Lemans 1-1586L Rome Sports Chronograph Watch. This image displays the watch with its blue dial, chronograph subdials, and silicone strap.

2. PRODUCT FEATURES

- **Movement:** Reliable Quartz movement for accurate timekeeping.
- **Case:** Durable stainless steel case with a diameter of 44 mm.
- **Crystal:** Hardened Crystex crystal for enhanced scratch resistance.
- **Functionality:** Chronograph feature for measuring elapsed time.
- **Water Resistance:** Water resistant to 100 meters (330 feet), suitable for snorkeling and swimming.
- **Strap:** Comfortable and robust silicone strap.

3. SETUP AND INITIAL OPERATION

3.1. Battery Information

Your watch is powered by a product-specific battery, which is included and pre-installed. The quartz movement ensures long battery life. If the watch stops, the battery may need replacement. It is recommended to have battery replacement performed by a qualified watch technician.

3.2. Setting the Time

1. Pull the crown (the knob on the side of the watch) out to the second position.
2. Turn the crown clockwise or counter-clockwise to set the hour and minute hands to the correct time.
3. Once the time is set, push the crown back into its normal position.

4. OPERATING INSTRUCTIONS: CHRONOGRAPH FUNCTION

The chronograph function allows you to measure elapsed time independently of the main time display.

1. **Starting the Chronograph:** Press the upper pusher (button) to start the chronograph. The chronograph second hand will begin to move.
2. **Stopping the Chronograph:** Press the upper pusher again to stop the chronograph. The elapsed time will be indicated by the chronograph hands.
3. **Resetting the Chronograph:** After stopping the chronograph, press the lower pusher to reset all chronograph hands to their zero positions.
4. **Split Time (if applicable):** Refer to specific sub-dial functions for detailed split-time measurements if your model supports it.

5. MAINTENANCE AND CARE

- **Cleaning:** Wipe the watch case and crystal with a soft, dry cloth. For the silicone strap, use a mild soap solution and rinse thoroughly, then dry completely.
- **Avoid Chemicals:** Do not expose the watch to harsh chemicals, solvents, or detergents, as these can damage the case, strap, or seals.
- **Temperature Extremes:** Avoid exposing the watch to extreme temperatures (hot or cold) or sudden temperature changes, which can affect accuracy and water resistance.
- **Magnetic Fields:** Keep the watch away from strong magnetic fields, as they can interfere with the quartz movement.
- **Crown Position:** Always ensure the crown is pushed in completely to maintain water resistance.

6. TROUBLESHOOTING

- **Watch Not Running:** If the watch stops, the battery may need replacement. Consult a professional watch technician.

- **Inaccurate Time:** Ensure the crown is fully pushed in. If the issue persists, the watch may require servicing.
- **Chronograph Hands Not Resetting to Zero:** This may indicate a need for calibration or service. Do not attempt to force the hands.
- **Condensation Inside Crystal:** If condensation appears under the crystal, it indicates a loss of water resistance. Have the watch inspected immediately by a professional.

7. SPECIFICATIONS

Feature	Detail
Model Number	1-1586L
Movement Type	Quartz
Display Type	Analog
Case Material	Stainless Steel
Case Diameter	44 Millimetres
Case Thickness	11.6 Millimetres
Crystal Material	Hardened Crystex (Mineral)
Band Material	Silicone
Band Colour	Blue
Band Width	28 Millimetres
Dial Colour	Blue
Water Resistance Depth	100 Meters (330 Feet)
Item Weight	86 Grams
Batteries	1 Product Specific battery (included)



Figure 2: Watch Case Size Chart. This image illustrates various watch case diameters in millimeters (MM) and their approximate size in inches (IN) for comparison. The 1-1586L model has a 44mm case diameter.

8. WATER RESISTANCE GUIDELINES

Your Jacques Lemans 1-1586L watch is water resistant to 100 meters (330 feet). This rating indicates that the watch is suitable for:

- Splashes and rain.
- Showering and bathing.
- Swimming.
- Snorkeling.

Important Precautions:

- **Do NOT operate the crown or pushers while the watch is wet or submerged.** This can compromise the water resistance seals.
- This watch is **NOT suitable for diving** (scuba diving, free diving) or high-impact water sports.
- After exposure to saltwater, rinse the watch with fresh water and dry it thoroughly.
- Water resistance is not a permanent condition and may decrease over time due to wear and tear or impact. Have the water resistance checked periodically by a qualified technician.

9. WARRANTY AND SUPPORT

For warranty information and support, please contact the seller of record from whom you purchased this watch. They will be able to provide details regarding warranty coverage and service procedures.

Always ensure that any repairs or battery replacements are carried out by authorized service centers or qualified watch technicians to maintain the integrity and warranty of your Jacques Lemans watch.