

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [KRUPS](#) /

› [KRUPS KM9008 Cup On Request 12-Cup Coffee Maker Instruction Manual](#)

KRUPS KM9008

KRUPS KM9008 Cup On Request 12-Cup Coffee Maker Instruction Manual

Model: KM9008

INTRODUCTION

This instruction manual provides detailed guidance for the safe and efficient operation, maintenance, and care of your KRUPS KM9008 Cup On Request 12-Cup Coffee Maker. Please read all instructions carefully before first use and retain this manual for future reference.

IMPORTANT SAFETY INSTRUCTIONS

- Read all instructions before using the appliance.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against fire, electric shock, and injury to persons, do not immerse cord, plugs, or appliance in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts, and before cleaning the appliance.
- Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions, or has been damaged in any manner. Return appliance to the nearest authorized service facility for examination, repair, or adjustment.
- The use of accessory attachments not recommended by the appliance manufacturer may result in fire, electric shock, or injury to persons.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to "off", then remove plug from wall outlet.
- Do not use appliance for other than intended use.
- Scalding may occur if the lid is removed during the brewing cycles.

PRODUCT OVERVIEW

The KRUPS KM9008 is a programmable 12-cup coffee maker designed for convenient, on-demand coffee dispensing. Key

features include a removable stainless steel water tank, an angled control panel, and an adjustable drip tray.



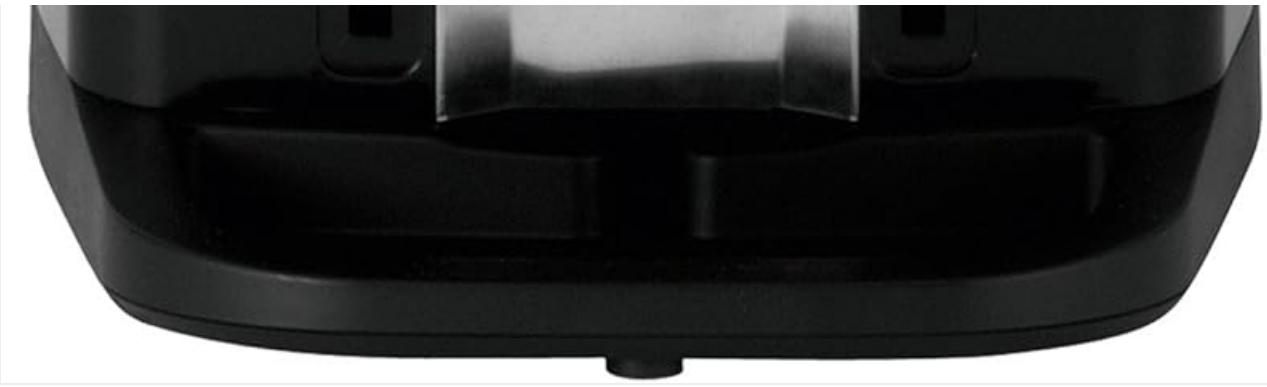


Figure 1: Front view of the KRUPS KM9008 coffee maker, showing the control panel, dispensing area, and water level indicator.

Components:

- Control Panel with LCD Display
- Water Tank (Removable, Stainless Steel, 12-cup capacity)
- Water Level Window with Coffee Indicator
- Filter Basket Holder
- Adjustable Drip Tray
- Dispensing Spout
- Power Cord
- DuoFilter Water Filtration System



Figure 2: Top view of the KRUPS KM9008 coffee maker with the lid open, revealing the removable stainless steel water tank and filter basket area.

SETUP

1. Unpacking and Initial Cleaning

1. Remove all packaging materials and promotional labels from the coffee maker.
2. Wash the removable water tank, filter basket, and drip tray in warm, soapy water. Rinse thoroughly and dry.
3. Wipe the exterior of the coffee maker with a damp cloth.

2. Water Filter Installation

The KRUPS KM9008 includes a DuoFilter water filtration system to improve coffee taste. Refer to the filter packaging for specific installation instructions. Typically, the filter is placed in a designated compartment within the water tank.

3. First Use / Priming

1. Fill the water tank with fresh, cold water up to the 12-cup mark.
2. Place an empty filter basket into its holder. Do not add coffee grounds for this initial cycle.
3. Close the lid securely.
4. Place a large cup or container under the dispensing spout.
5. Press the **ON/OFF** button to start a brewing cycle. Allow the full cycle to complete.
6. Discard the hot water. This process cleans the internal components and prepares the machine for coffee brewing.

OPERATING INSTRUCTIONS

1. Adding Water

1. Open the top lid of the coffee maker.
2. Remove the stainless steel water tank.
3. Fill the tank with fresh, cold water to the desired level, observing the water level window. The maximum capacity is 12 cups.
4. Return the water tank to its position and close the lid.



Figure 3: Close-up of the water level indicator on the KRUPS KM9008, showing markings for cup measurements.

2. Adding Coffee Grounds

1. Open the top lid.
2. Place a paper filter (size #6 cone filter) or a reusable gold-tone filter into the filter basket.
3. Add the desired amount of ground coffee. A general guideline is one tablespoon of ground coffee per cup, adjusted to personal preference.
4. Ensure the filter basket is properly seated and close the lid.

3. Brewing Coffee

1. Ensure water and coffee grounds are loaded.
2. Press the **ON/OFF** button to begin the brewing cycle. The display will indicate brewing status.
3. To select a stronger brew, press the **STRONG** button before brewing.
4. The coffee maker will automatically keep the coffee warm for up to 4 hours after brewing. The countdown timer on the display shows how long the coffee has been kept warm.



Figure 4: Close-up of the KRUPS KM9008 control panel, showing the digital display for time, keep warm status, and programming buttons.

4. Dispensing Coffee

1. Place your cup on the adjustable drip tray. The tray can be set to three different heights to accommodate various cup sizes, including travel mugs.
2. Press the **SMALL** button for a smaller serving or the **LARGE** button for a larger serving.
3. Alternatively, press and hold the **MANUAL** button to dispense coffee continuously. Release the button when your cup is filled to the desired level.



Figure 5: A hand pressing the dispensing button on the KRUPS KM9008 coffee maker, demonstrating the on-demand dispensing feature.

5. Programming Auto-Start

The KM9008 allows you to program two different auto-start times for weekday and weekend brewing.

1. Press the **PROG** button. The display will show "P1" or "P2".
2. Use the **H** (Hour) and **MIN** (Minute) buttons to set the desired auto-start time for the selected program (P1 or P2).
3. Press **PROG** again to confirm the time and move to the next program or exit programming mode.
4. To activate an auto-start program, ensure the coffee maker is loaded with water and coffee, then press the corresponding **AUTO START** button (1 or 2). The indicator light will illuminate.

MAINTENANCE AND CLEANING

Regular cleaning ensures optimal performance and extends the lifespan of your coffee maker.

1. Daily Cleaning

1. Always unplug the coffee maker before cleaning and allow it to cool completely.
2. Remove and empty the filter basket. Wash it in warm, soapy water or place it on the top rack of a dishwasher.
3. Remove the water tank and rinse it thoroughly. If necessary, wash with warm, soapy water.
4. Clean the drip tray and its cover with warm, soapy water.
5. Wipe the exterior surfaces of the coffee maker with a damp cloth. Do not use abrasive cleaners or scouring pads.

2. Descaling

Mineral deposits from water can build up over time and affect performance. Descaling your coffee maker regularly, depending on water hardness and frequency of use (e.g., every 2-3 months).

1. Prepare a descaling solution according to the manufacturer's instructions (e.g., white vinegar and water, or a commercial descaling agent).
2. Pour the solution into the water tank.
3. Run a brewing cycle without coffee grounds.
4. After the cycle, run 2-3 cycles with fresh, clean water to rinse the system thoroughly.

3. Water Filter Replacement

The DuoFilter water filter should be replaced approximately every 2 months or after 60 brewing cycles, whichever comes first, to maintain optimal water quality and coffee taste. Refer to the filter packaging for specific replacement instructions.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Coffee does not brew.	No water in tank; coffee maker not plugged in; power outage; brew cycle not initiated.	Fill water tank; ensure plug is securely in outlet; check circuit breaker; press ON/OFF button.
Coffee tastes weak.	Insufficient coffee grounds; coarse grind; water filter needs replacement; descaling required.	Add more coffee grounds; use a finer grind; replace water filter; descale the machine.
Coffee overflows from filter basket.	Too much coffee grounds; filter basket not seated correctly; clogged filter.	Reduce coffee grounds; ensure filter basket is properly in place; clean or replace filter.
Dispensing buttons (SMALL/LARGE) not working as expected.	Settings may need recalibration or internal issue.	Refer to the programming section to recalibrate cup sizes. If issue persists, contact customer support.

SPECIFICATIONS

Brand: KRUPS

Model Name: KM9008

Capacity: 12 Cups

Power: 1100 Watts

Color: Black

Special Features: Programmable, Precise Warming Technology, DuoFilter Water Filtration System, Adjustable Drip Tray

Dimensions: 14.01 x 9.92 x 14.56 inches (L x W x H)

Item Weight: 9.9 pounds

WARRANTY AND SUPPORT

This KRUPS KM9008 coffee maker comes with a 2-year worldwide warranty. For warranty claims, technical support, or service inquiries, please contact KRUPS customer service or visit the official KRUPS website. Please retain your proof of purchase for warranty validation.

For more information, visit the official [KRUPS Store on Amazon](#).

