

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [Fisher-Price](#) /
- › [Fisher-Price Imaginext Ankylosaurus Dino User Manual](#)

## Fisher-Price W3620

# Fisher-Price Imaginext Ankylosaurus Dino User Manual

Model: W3620

## INTRODUCTION

The Fisher-Price Imaginext Ankylosaurus Dino is an interactive toy designed for imaginative play. This set includes a dinosaur figure, an Imaginext action figure, and removable gear that enhances play scenarios. The dinosaur features a cool hammering action and a spring-loaded tail, allowing for dynamic adventures.



The complete Fisher-Price Imaginext Ankylosaurus Dino set, featuring the dinosaur, action figure, and removable battle gear.

## WHAT'S IN THE BOX

Please ensure all components listed below are present in your package:

- Ankylosaurus Dino figure
- Removable gear/armor for the dino
- Imaginext action figure with helmet
- Hand drill accessory for the figure
- One piece of 'volcanium' accessory



An overview of all included parts: the Ankylosaurus dino, the Imaginext figure, the removable gear, and accessories.

## SETUP

Follow these steps for initial setup:

1. Unpack all components from the packaging.
2. Fit the Imaginext figure into the control station located on the dino's back.
3. Attach the removable gear/armor to the Ankylosaurus dino. Ensure it clicks securely into place.
4. Provide the hand drill accessory to the Imaginext figure if desired.



Illustration demonstrating the attachment of the removable gear to the dinosaur figure.

## OPERATING INSTRUCTIONS

### Utilizing the Gear and Features

Once assembled, the Ankylosoraurus Dino is ready for play. The removable gear features moveable pickaxes for chopping action. The dinosaur also has a cool hammering action and a spring-loaded tail for interactive play. The Imaginext figure can be positioned in the control station to simulate guiding the dino.



A child engaging with the Ankylosoraurus Dino, demonstrating interactive play.



A hand pressing down on the dinosaur's back, activating its action feature.

### Classic Dino Play

For classic dinosaur play, the gear can be easily removed from the Ankylosoraurus figure. This allows for versatile play scenarios, adapting to different imaginative adventures.



The Ankylosaurus Dino displayed without its removable battle gear, ready for classic play.

## MAINTENANCE

To ensure the longevity of your Fisher-Price Imaginext Ankylosaurus Dino, follow these simple maintenance guidelines:

- Wipe the figures and accessories with a damp cloth to clean.
- Do not use harsh chemicals or abrasive cleaners, as these may damage the plastic.
- Store the toy in a dry place away from direct sunlight to prevent fading or material degradation.

## TROUBLESHOOTING

### Armor Does Not Stay On

If the removable gear or armor does not stay securely attached to the dinosaur, please check the following:

- Ensure the gear is properly aligned with the connection points on the dinosaur's back.
- Apply firm, even pressure until you hear or feel a click, indicating it is locked into place.
- Inspect the connection points on both the gear and the dinosaur for any obstructions, debris, or visible damage. Clean if necessary.
- If the issue persists after these checks, contact customer support for further assistance.

## SPECIFICATIONS

Feature	Detail
Product Dimensions	8.5 x 3.5 x 7 inches
Item Weight	12.6 ounces
Item Model Number	W3620
Manufacturer Recommended Age	36 months - 7 years
Manufacturer	Fisher-Price

## WARRANTY AND SUPPORT

For information regarding product warranty, returns, or technical support, please refer to the official Fisher-Price website or contact their customer service department. Keep your purchase receipt as proof of purchase.

You can typically find contact information on the manufacturer's official website: [www.fisher-price.com](http://www.fisher-price.com)