

Rosieres RTG 75 Sqfin

Rosieres RTG 75 Sqfin Built-in Gas Hob User Manual

Model: RTG 75 Sqfin

1. SAFETY INFORMATION

Read all instructions carefully before using the appliance. Keep this manual for future reference. Improper installation, adjustment, alteration, service, or maintenance can cause injury or property damage. Refer to this manual. For assistance or additional information, consult a qualified installer, service agency, or the gas supplier.

- This appliance must be installed in accordance with current regulations and used only in a well-ventilated space.
- Do not store or use gasoline or other flammable vapors and liquids in the vicinity of this or any other appliance.
- Never use the appliance as a space heater.
- Ensure children are supervised when near the appliance.
- Always turn off the gas supply to the appliance if it is not going to be used for an extended period.
- In case of a gas leak, do not operate any electrical switches, extinguish any open flames, open windows and doors, and immediately contact your gas supplier.

2. PRODUCT OVERVIEW

The Rosieres RTG 75 Sqfin is a 75 cm built-in gas hob featuring five burners, including a central wok burner, electronic ignition, and gas safety cut-off. The hob surface is made of stainless steel for durability and easy cleaning.

2.1 Components

- **Burners:** Five gas burners of varying sizes, including one central wok burner.
- **Pan Supports:** Cast iron pan supports for stability.
- **Control Knobs:** Five control knobs for precise flame adjustment.
- **Electronic Ignition:** Integrated ignition system for easy burner lighting.
- **Gas Safety Device:** Thermocouple safety device that cuts off gas supply if the flame extinguishes.
- **Stainless Steel Surface:** Durable and easy-to-clean cooking surface.



Figure 1: Top view of the Rosieres RTG 75 Sqfin gas hob, showing the five burners and overall layout.



Figure 2: Close-up view of the control panel, displaying the five rotary knobs and the Rosieres logo.

3. INSTALLATION

Installation must be carried out by a qualified and authorized technician in accordance with local regulations and standards. Incorrect installation can lead to serious injury or damage.

3.1 Unpacking

Carefully remove the hob from its packaging. Check for any damage during transit. Report any damage immediately to your supplier.

3.2 Cut-out Dimensions

Ensure the kitchen countertop has the correct cut-out dimensions for the built-in hob. Refer to the technical drawing for precise measurements.

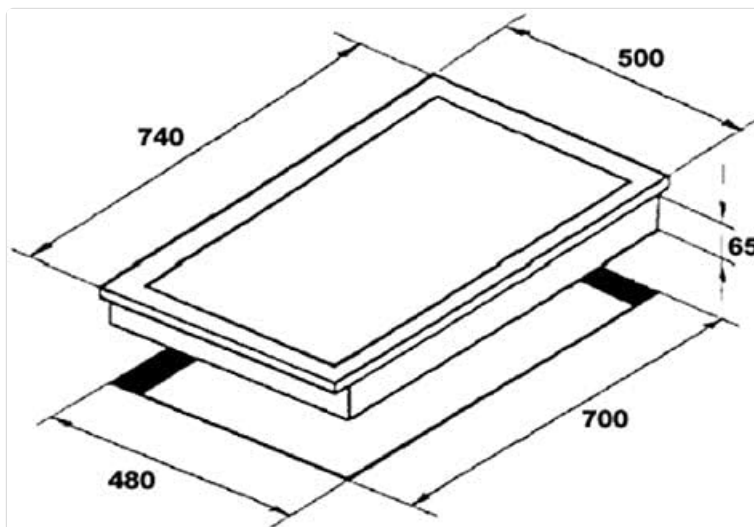


Figure 3: Technical drawing illustrating the precise dimensions for the hob and the required countertop cut-out (740mm x 480mm).

3.3 Gas Connection

- Connect the hob to the gas supply using approved flexible or rigid piping.
- Ensure all connections are gas-tight using appropriate sealing materials.
- Check for leaks using a soapy water solution; never use an open flame.

3.4 Electrical Connection

- Connect the appliance to a properly grounded electrical outlet (230 Volts).
- Ensure the electrical supply matches the voltage and frequency specified on the appliance rating plate.

4. OPERATING INSTRUCTIONS

4.1 Lighting a Burner

1. Place a suitable cooking utensil on the pan support over the desired burner.
2. Push the corresponding control knob down and turn it counter-clockwise to the maximum flame setting (large flame symbol).
3. Hold the knob down for a few seconds (approximately 5-10 seconds) to allow the gas safety device to activate. You will hear a clicking sound from the electronic igniter.
4. Once the flame is stable, release the knob. If the flame extinguishes, repeat the process.
5. Adjust the flame size by turning the knob between the maximum and minimum flame settings (small flame symbol).

4.2 Using the Wok Burner

The central wok burner is designed for high-heat cooking and is ideal for woks or large pots. Use a wok ring (if provided or purchased separately) for optimal stability and heat distribution when using a wok.

4.3 Turning Off a Burner

To turn off a burner, turn the corresponding control knob clockwise until it clicks into the "off" position (dot symbol).

5. CLEANING AND MAINTENANCE

Regular cleaning and maintenance will ensure the longevity and efficient operation of your gas hob.

5.1 Daily Cleaning

- Allow the hob to cool completely before cleaning.
- Wipe the stainless steel surface with a soft cloth and mild detergent or a specialized stainless steel cleaner.
- Avoid abrasive cleaners, scouring pads, or harsh chemicals that can scratch the surface.
- Dry the surface thoroughly after cleaning to prevent water spots, especially on stainless steel.

5.2 Burner Components

- Remove the pan supports, burner caps, and burner crowns. These can be washed in warm soapy water.
- Ensure burner ports are clear of food debris. Use a small brush or toothpick if necessary.
- Dry all components thoroughly before reassembling. Incorrect reassembly can affect burner performance.
- Do not clean the ignition electrode or thermocouple with abrasive materials.

6. TROUBLESHOOTING

Before contacting service, check the following common issues and solutions:

Problem	Possible Cause	Solution
Burner does not ignite.	No gas supply. Burner components are wet or blocked. Ignition electrode is dirty or damaged.	Check gas supply valve. Dry and clean burner components. Clean electrode; if damaged, contact service.
Flame extinguishes after releasing knob.	Knob not held down long enough. Thermocouple is dirty or faulty.	Hold knob down for 5-10 seconds. Clean thermocouple; if issue persists, contact service.
Irregular or yellow flame.	Burner ports are blocked. Incorrect gas type or pressure.	Clean burner ports. Contact a qualified technician to check gas supply.
Gas smell.	Gas leak.	Immediately turn off gas supply, open windows, and contact gas supplier/emergency services. Do not operate electrical switches.

7. SPECIFICATIONS

- **Brand:** Rosieres
- **Model:** RTG 75 Sqfin
- **Type:** Built-in Gas Hob
- **Number of Burners:** 5
- **Special Features:** Wok burner, Gas cut-off timer (safety), Gas safety device
- **Surface Material:** Stainless Steel
- **Ignition Type:** Electronic
- **Power Source:** Gas
- **Electrical Power for Ignition:** 1750 Watts
- **Voltage:** 230 Volts
- **Color:** Inox (Stainless Steel)
- **Dimensions (Cut-out):** Approximately 740mm x 480mm (Refer to technical drawing for exact measurements)

8. WARRANTY AND SUPPORT

For warranty information, please refer to the warranty card included with your appliance or contact your retailer. For technical support, spare parts, or service, please contact Rosieres customer service or an authorized service center. Always provide the model number (RTG 75 Sqfin) and serial number of your appliance when seeking assistance.

Manufacturer: Rosieres
Manufacturer Part Number: RTG 75 Sqfin
Item Part Number: RTG75SQFIN

© 2024 Rosieres. All rights reserved. Information in this manual is subject to change without notice.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question