

BLACK+DECKER CHV1210

BLACK+DECKER CHV1210 Dustbuster 12-Volt Cordless Cyclonic Hand Vac

Model: CHV1210

INTRODUCTION

The BLACK+DECKER CHV1210 Dustbuster is a 12-volt cordless cyclonic hand vacuum designed for quick and efficient clean-ups. Its lightweight and portable design, combined with a rotating slim nozzle and wide mouth, allows for versatile cleaning in various spaces. The cyclonic action helps maintain strong suction by keeping dust and debris away from the filter. This manual provides essential information for the safe and effective use, maintenance, and care of your hand vacuum.

IMPORTANT SAFETY INSTRUCTIONS

Before using this appliance, read all instructions. Failure to follow these instructions may result in electric shock, fire, and/or serious injury. Keep this manual for future reference.

- Do not use outdoors or on wet surfaces.
- Do not allow to be used as a toy. Close attention is necessary when used by or near children.
- Use only as described in this manual. Use only manufacturer's recommended attachments.
- Do not use with damaged cord or plug. If appliance is not working as it should, has been dropped, damaged, left outdoors, or dropped into water, return it to a service center.
- Do not pull or carry by cord, use cord as a handle, close a door on cord, or pull cord around sharp edges or corners. Do not run appliance over cord. Keep cord away from heated surfaces.
- Do not unplug by pulling on cord. To unplug, grasp the plug, not the cord.
- Do not handle plug or appliance with wet hands.
- Do not put any object into openings. Do not use with any opening blocked; keep free of dust, lint, hair, and anything that may reduce air flow.

- Keep hair, loose clothing, fingers, and all parts of body away from openings and moving parts.
- Do not pick up anything that is burning or smoking, such as cigarettes, matches, or hot ashes.
- Do not use to pick up flammable or combustible liquids, such as gasoline, or use in areas where they may be present.
- Do not pick up toxic material, such as chlorine bleach, ammonia, or drain cleaner.
- Do not use without dust bag and/or filters in place.
- Turn off all controls before unplugging.
- Use extra care when cleaning on stairs.
- Do not charge the unit outdoors.
- Use only the charger supplied by the manufacturer to recharge.
- Do not incinerate the appliance even if it is severely damaged. The batteries can explode in a fire.

WHAT'S INCLUDED

Your BLACK+DECKER CHV1210 Dustbuster package includes the following components:

- Hand vacuum unit
- Washable filter (model VF110)
- Wall mount bracket
- Charger

SETUP

Initial Charging

Before first use, fully charge the hand vacuum for at least 16 hours. The charging indicator light will illuminate to confirm a proper connection. The Energy Star approved charging system helps protect batteries and saves energy.

1. Connect the charger to a standard electrical outlet.
2. Plug the charger into the charging port on the hand vacuum.
3. Allow the unit to charge for the recommended time.

Wall Mounting (Optional)

The hand vacuum can be stored on a wall using the included bracket.

1. Select a suitable location for the wall mount bracket, ensuring it is near an electrical outlet for convenient charging.
2. Secure the wall mount bracket to the wall using appropriate fasteners (not included).
3. Hang the hand vacuum on the bracket. Ensure it is securely seated.



Image: The BLACK+DECKER CHV1210 Dustbuster shown mounted on its wall bracket for convenient storage and charging.

OPERATING INSTRUCTIONS

Turning On/Off

To operate the hand vacuum, slide the power switch located on the handle to the 'ON' position. To turn off, slide the switch to the 'OFF' position.

Using the Nozzle

The CHV1210 features a rotating slim nozzle and a wide mouth design for various cleaning tasks.

- **Slim Nozzle:** For targeting dirt in tight spaces, corners, and crevices. The rotating design allows for better accessibility.
- **Wide Mouth:** For effortlessly scooping up larger debris.



Image: Using the slim nozzle to clean small debris from a kitchen floor.



Image: The wide mouth design effectively picks up larger debris like spilled cereal.



Image: The hand vacuum is ideal for cleaning car interiors, such as crumbs in a car seat.



Image: Effectively cleaning dirt and small debris from car floor mats.

MAINTENANCE

Regular maintenance ensures optimal performance and extends the life of your hand vacuum.

Emptying the Dirt Bowl

The translucent, bagless dirt bowl allows you to easily see when it needs emptying. Empty the dirt bowl regularly to maintain suction power.

1. Ensure the hand vacuum is turned off.
2. Press the release button to detach the dirt bowl from the main unit.
3. Hold the dirt bowl over a trash receptacle and empty its contents.



Image: Emptying the dirt bowl into a trash can is a simple process.

Cleaning the Filters

The removable and washable filters allow for thorough and hygienic cleaning. A 3-stage filtration system helps reduce clogging and ensures cleaner air exhaust.

1. After emptying the dirt bowl, remove the filter assembly.
2. Separate the filters from the assembly.
3. Tap the filters gently over a trash can to remove loose dirt.
4. Wash the filters in warm, soapy water. Rinse thoroughly.
5. Allow filters to air dry completely before reassembling and placing back into the hand vacuum. Do not use the vacuum with wet filters.

TROUBLESHOOTING

If you encounter issues with your BLACK+DECKER CHV1210 Dustbuster, refer to the following common solutions:

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
Vacuum does not turn on.	Battery is not charged.	Ensure the unit is fully charged. Refer to 'Initial Charging' section.
Reduced suction power.	Dirt bowl is full.	Empty the dirt bowl.
Reduced suction power.	Filters are clogged or dirty.	Clean or replace the filters. Ensure they are completely dry before reinstallation.
Vacuum does not charge.	Charger not properly connected.	Check that the charger is securely plugged into both the outlet and the vacuum. Verify the charging indicator light is on.

SPECIFICATIONS

Feature	Detail
Brand	BLACK+DECKER
Model Name	CHV1210
Power Source	Cordless
Voltage	12 Volts
Wattage	20.00 Watts
Form Factor	Handheld
Filter Type	Cartridge (Model VF110)
Special Features	Bagless, Portable, Washable Filter, Cyclonic Action
Noise Level	78 Decibels

WARRANTY AND SUPPORT

Warranty Information

This BLACK+DECKER CHV1210 Dustbuster is covered by a **2-year limited warranty**. Please retain your proof of purchase for warranty claims. For specific terms and conditions, refer to the warranty documentation included with your product or contact BLACK+DECKER customer service.

Customer Support

For further assistance, technical support, or to inquire about replacement parts, please visit the official BLACK+DECKER website or contact their customer service department. Contact information can typically be found on the product packaging or the manufacturer's website.

